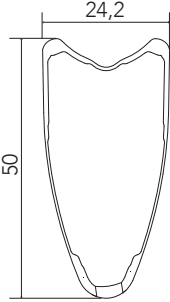


BORA ULTRA 50

TUBULAR

BORA ULTRA 50


TUBULAR


RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING VALVE EXTENSION DIAMETER BRAKE PADS	WH-101BO50 (bright) / WH-101BO50DK (dark) WH-102BO50 (bright) / WH-102BO50DK (dark) 6,5 mm WH-BUU002 (5 pcs.)  UT-HU150 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-07BWT045DB UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

 **WARNING!**
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

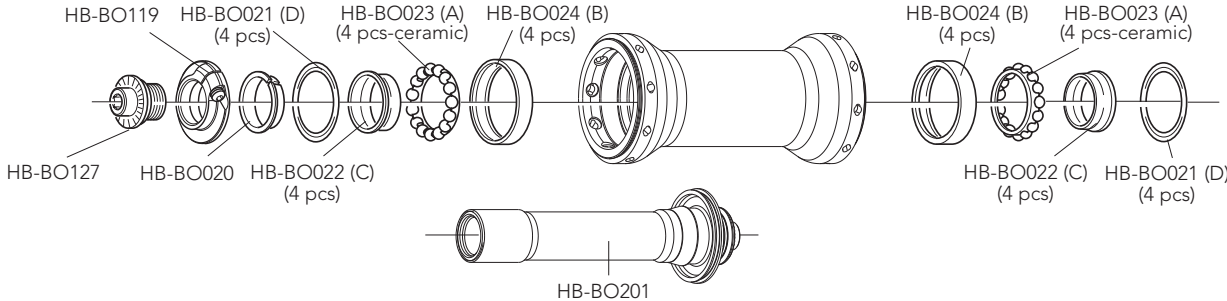HUBS		
	HB-BO100 CULT™ KIT front 2 x A, 2 x B, 2 x C, 2 x D	

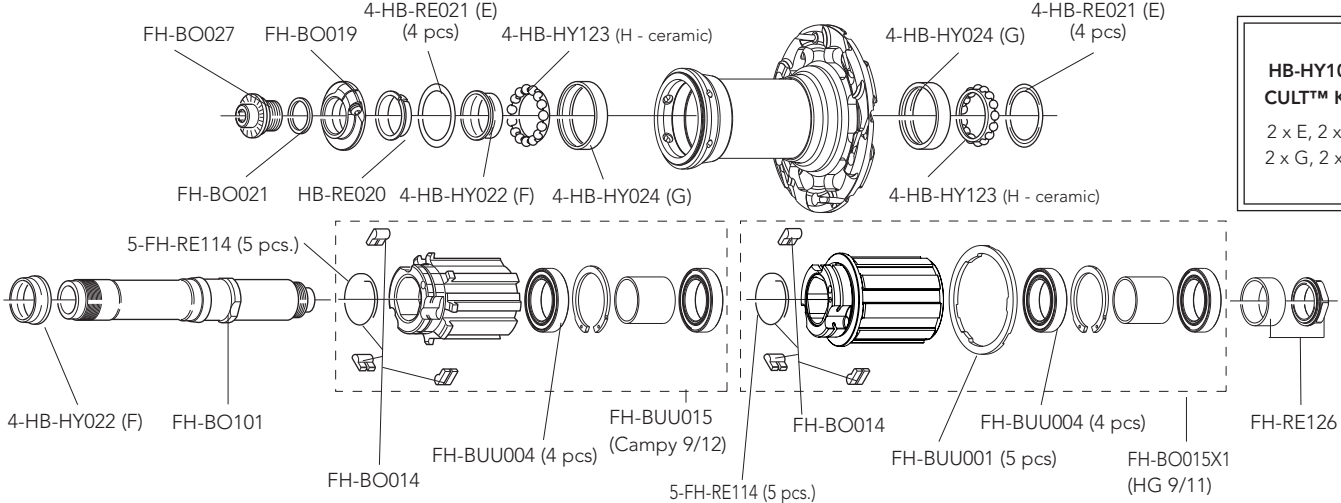
	HB-HY100 CULT™ KIT 2 x E, 2 x F, 2 x G, 2 x H	
QUICK-RELEASES	QR12-BUUBFR	front + rear

BORA ULTRA 35

TUBULAR

BORA ULTRA 35

TUBULAR

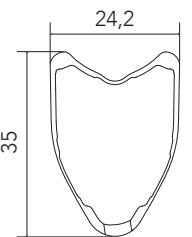RIM		
	FRONT RIM	WH-201BO35 (bright) - WH-201BO35DK (dark)
	REAR RIM	WH-202BO35 (bright) - WH-202BO35DK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	634 mm
	BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

 **WARNING!**

Because of the high temperatures reached when braking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

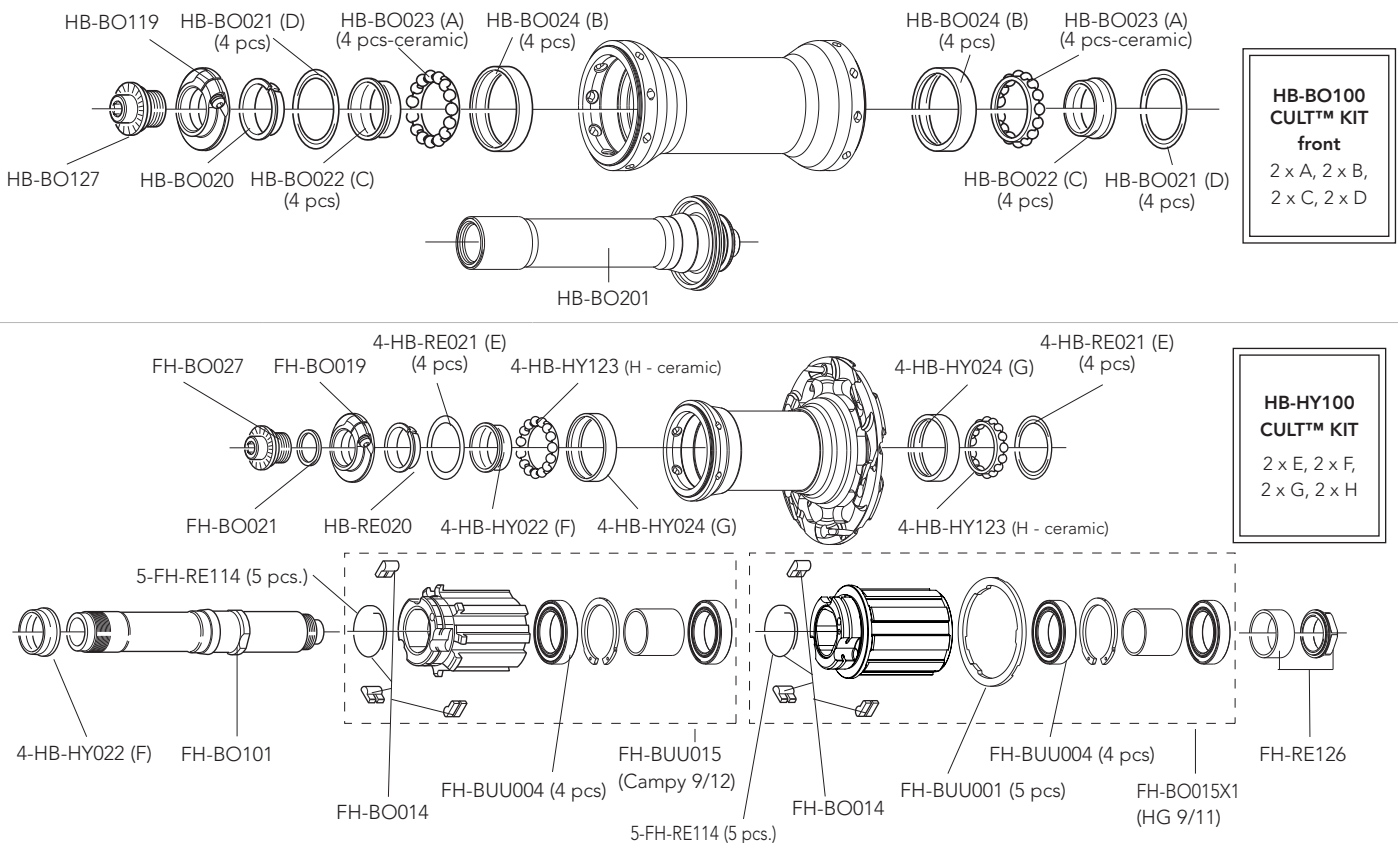

HB-BO100 CULT™ KIT front
2 x A, 2 x B, 2 x C, 2 x D

HB-HY100 CULT™ KIT
2 x E, 2 x F, 2 x G, 2 x H


QUICK-RELEASES
QR12-BUUBFR
front + rear

BORA ULTRA 50

CLINCHER




BORA ULTRA 50

CLINCHER

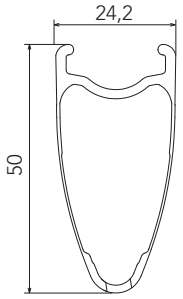RIM		
	FRONT RIM	WH-103BO50 (bright) / WH-103BO50DK (dark)
	REAR RIM	WH-104BO50 (bright) / WH-104BO50DK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	VALVE EXTENSION	UT-HU150
	DIAMETER	700C (622 x 17C)
BRAKE PADS		for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

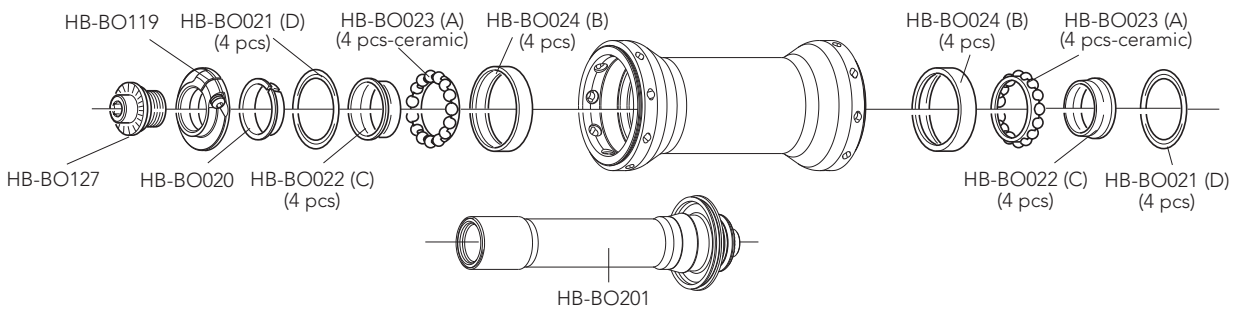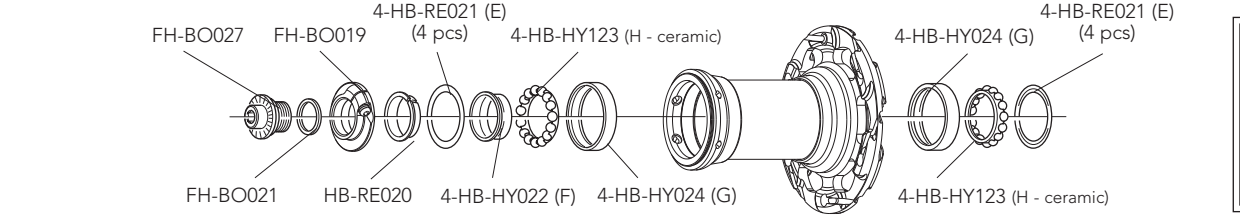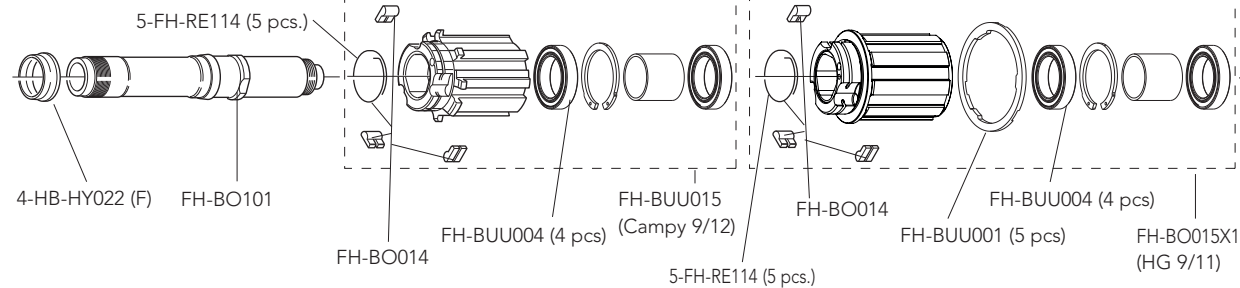
HUBS		
		
		
		
QUICK-RELEASES	QR12-BUUBFR	front + rear

BORA ULTRA 35

CLINCHER




BORA ULTRA 35

CLINCHER

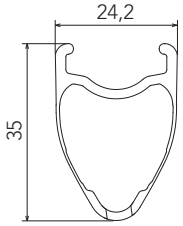RIM		
	FRONT RIM	WH-103BO35 (bright) - WH-103BO35DK (dark)
	REAR RIM	WH-104BO35 (bright) - WH-104BO35DK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 17C)
	BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

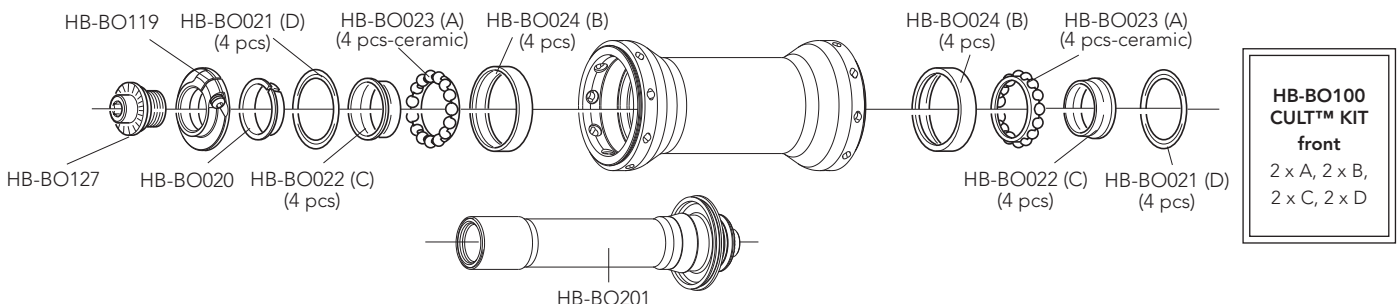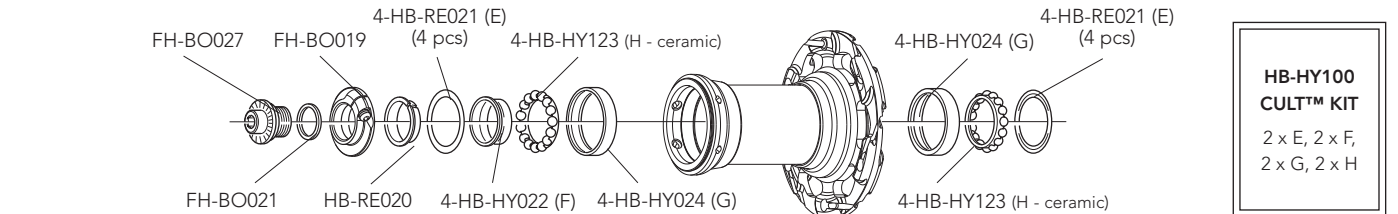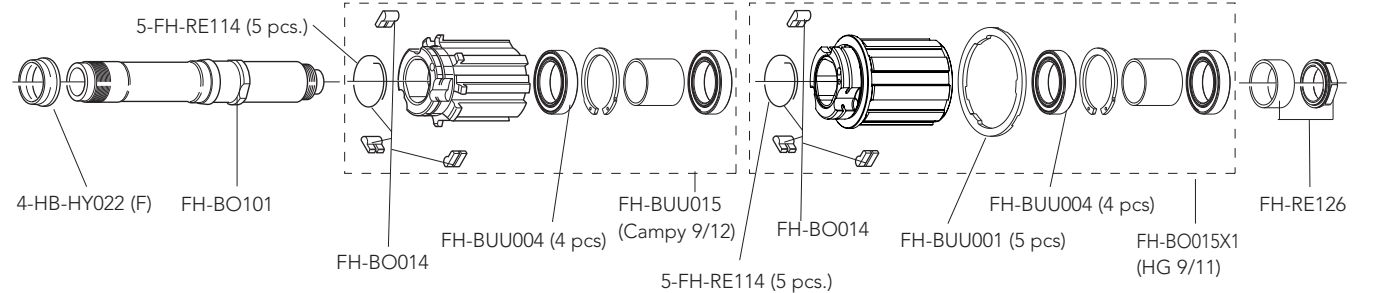
HUBS		
		
		
		
QUICK-RELEASES	QR12-BUUBFR	front + rear

BORA ONE 50

TUBULAR

BORA ONE 50

TUBULAR

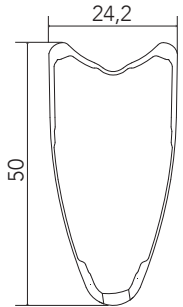
RIM		
	VALVE HOLE	6,5 mm
	VALVE EXTENSION	UT-HU150
	VALVE HOLE BUSHING	WH-BUU002 
	DIAMETER	634 mm
	BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)
SPOKES		
FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches
ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)




WARNING!

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

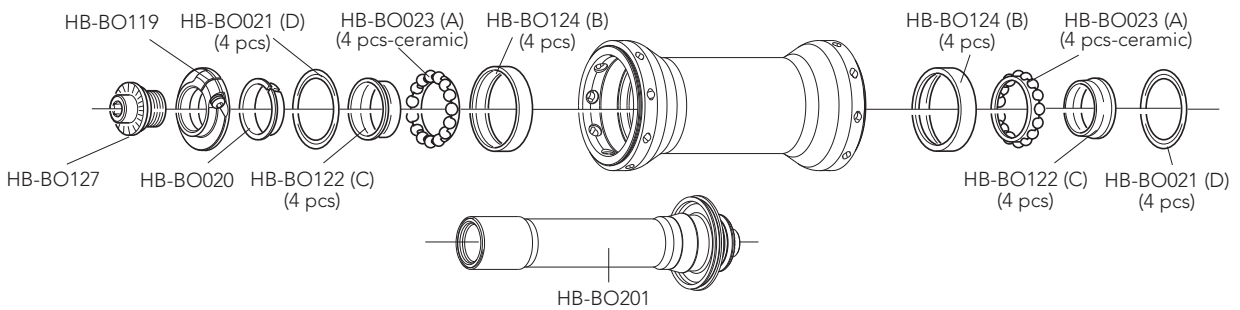

HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

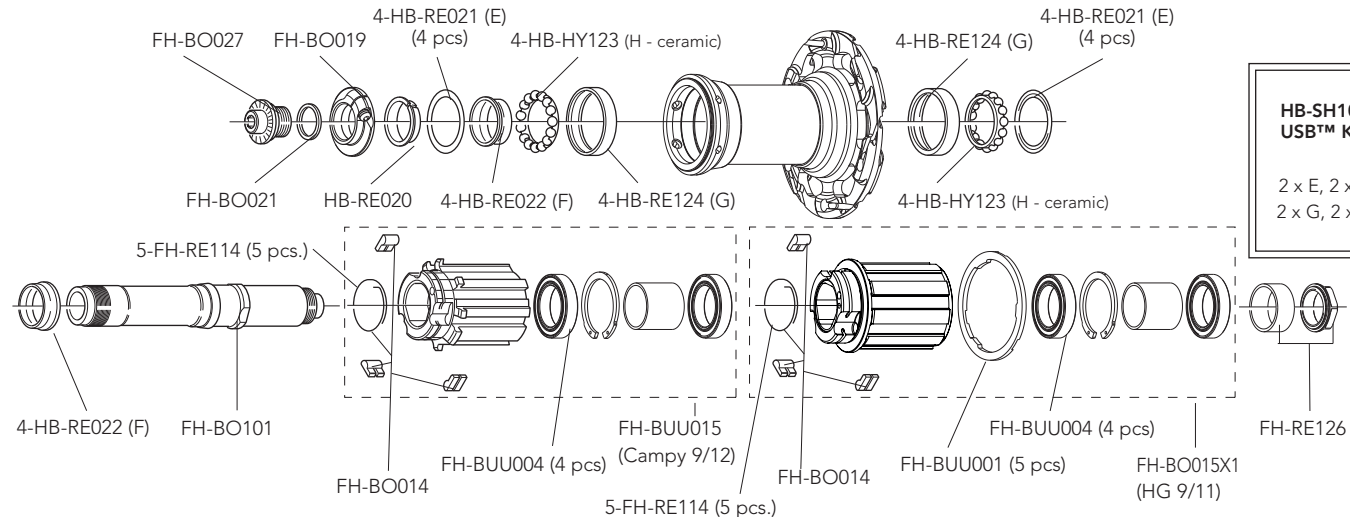

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR


front + rear

BORA ONE 35

TUBULAR

BORA ONE 35

TUBULAR

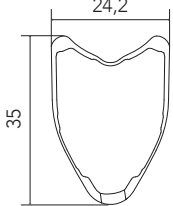RIM		
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 
	DIAMETER	634 mm
	BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
		BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches



ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)



WARNING!

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

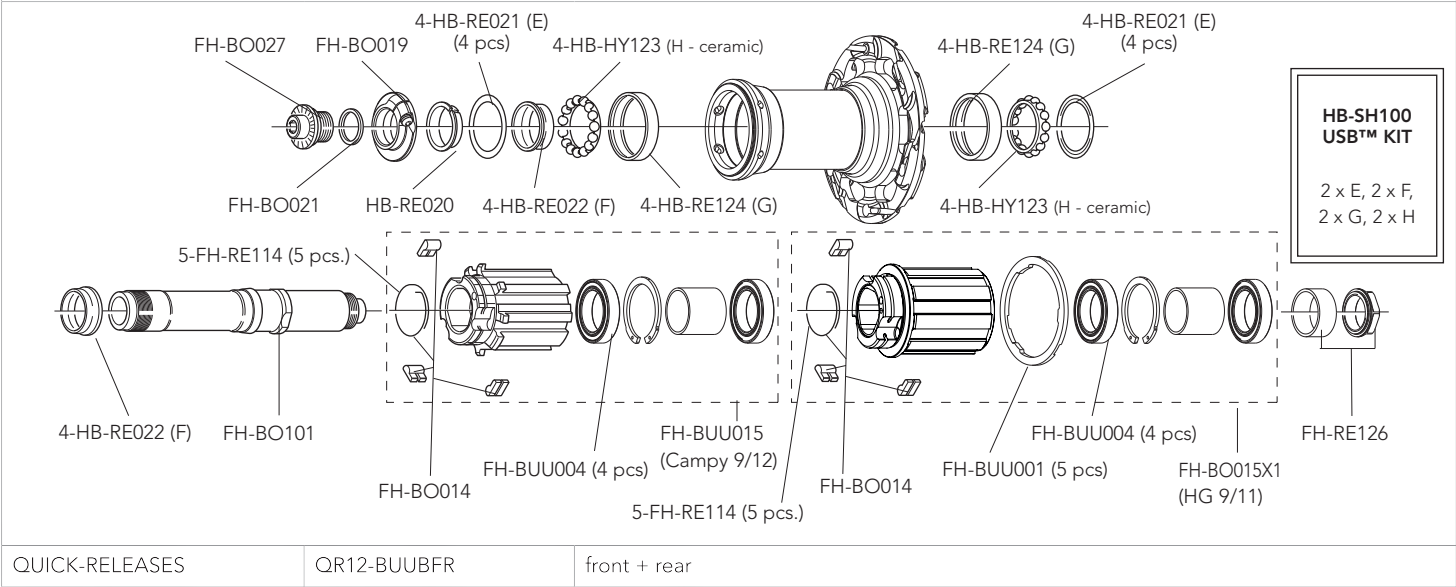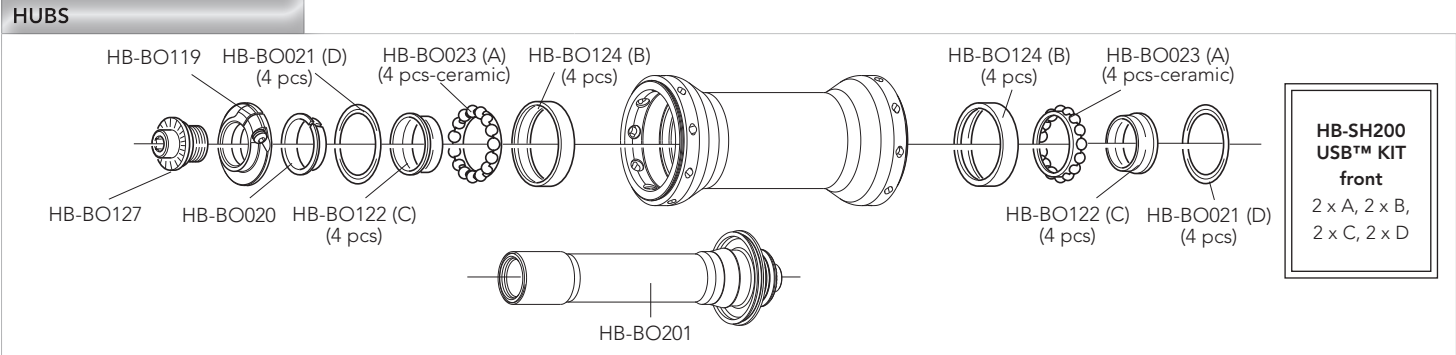


BORA ONE 50

CLINCHER




BORA ONE 50

CLINCHER

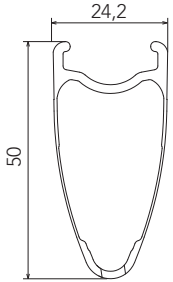RIM		
	VALVE HOLE	6,5 mm
	VALVE EXTENSION	UT-HU150
	VALVE HOLE BUSHING	WH-BUU002 
	DIAMETER	700C (622 x 17C)
	BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

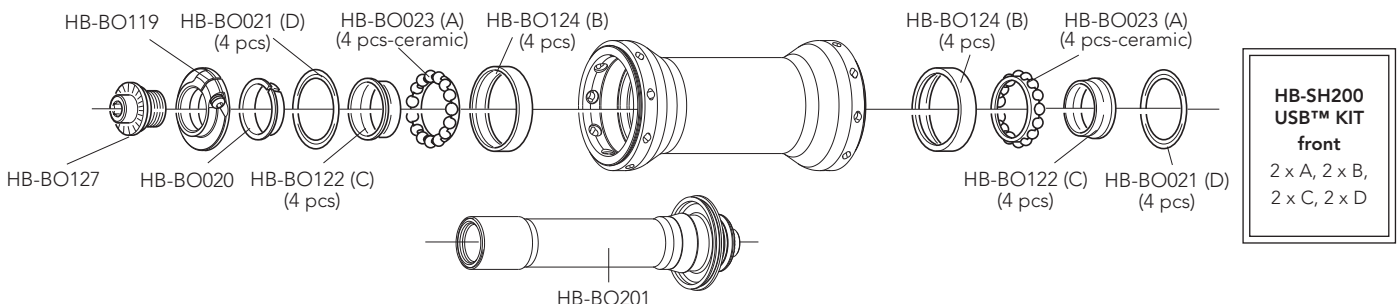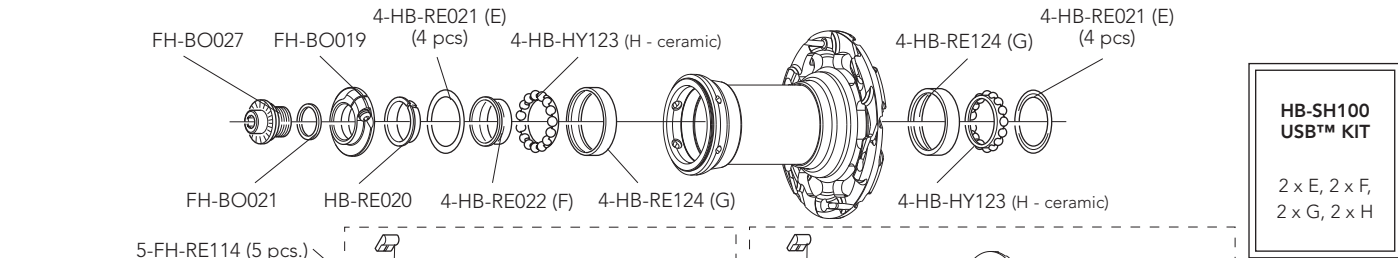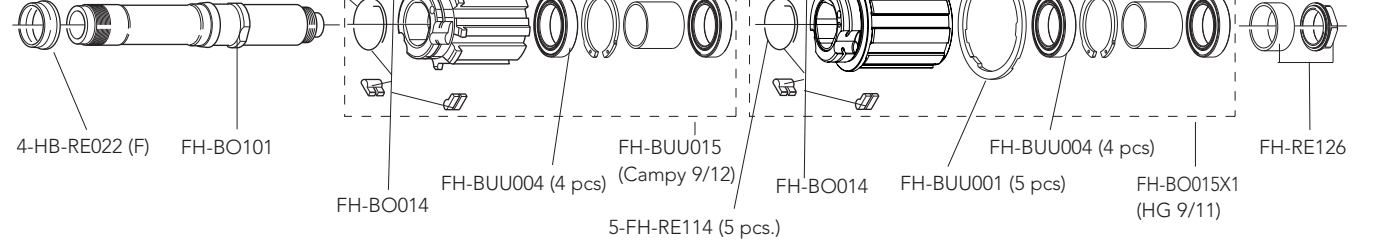
HUBS		
		
		
		
QUICK-RELEASES	QR12-BUUBFR	front + rear

BORA ONE 35

CLINCHER



BORA ONE 35

CLINCHER

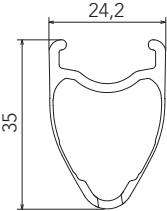RIM		
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 
	DIAMETER	700C (622 x 17C)
	BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-07BWT045DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

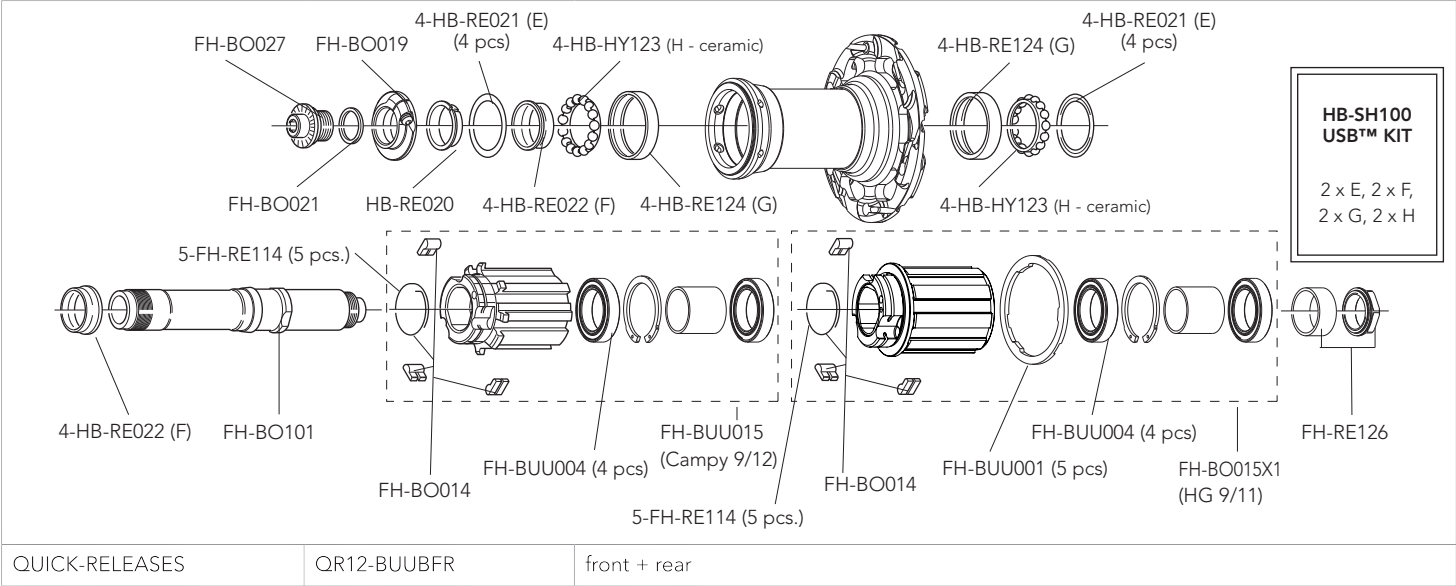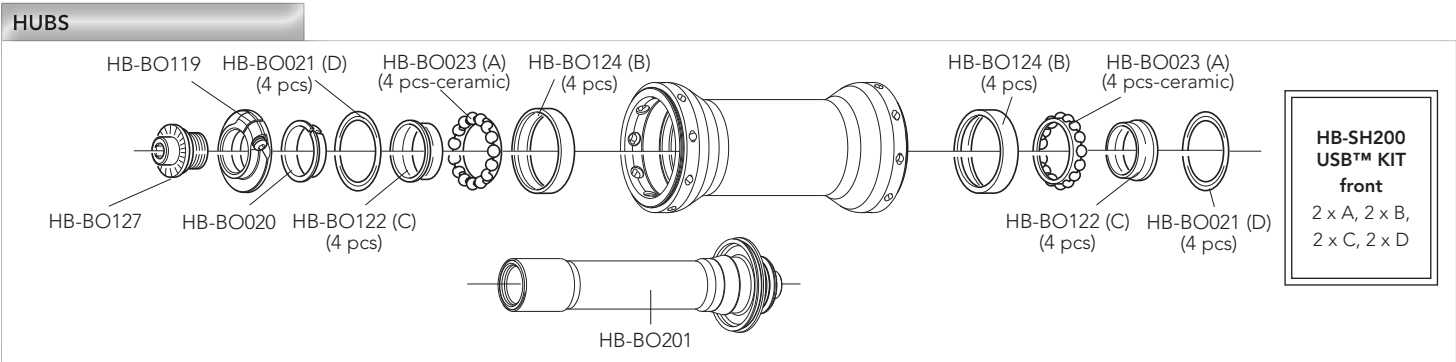


BORA WTO 77


2-WAY FIT

BORA WTO 77

2-WAY FIT

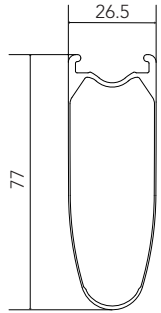RIM		
	VALVE HOLE	6,5 mm
	VALVE EXTENSION	UT-WH140M (male extension)
	2-WAY FIT™ VALVE	WH-SH101
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 19C)
	BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
COMPLETE FRONT SPOKES	WH-01BWTO77	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

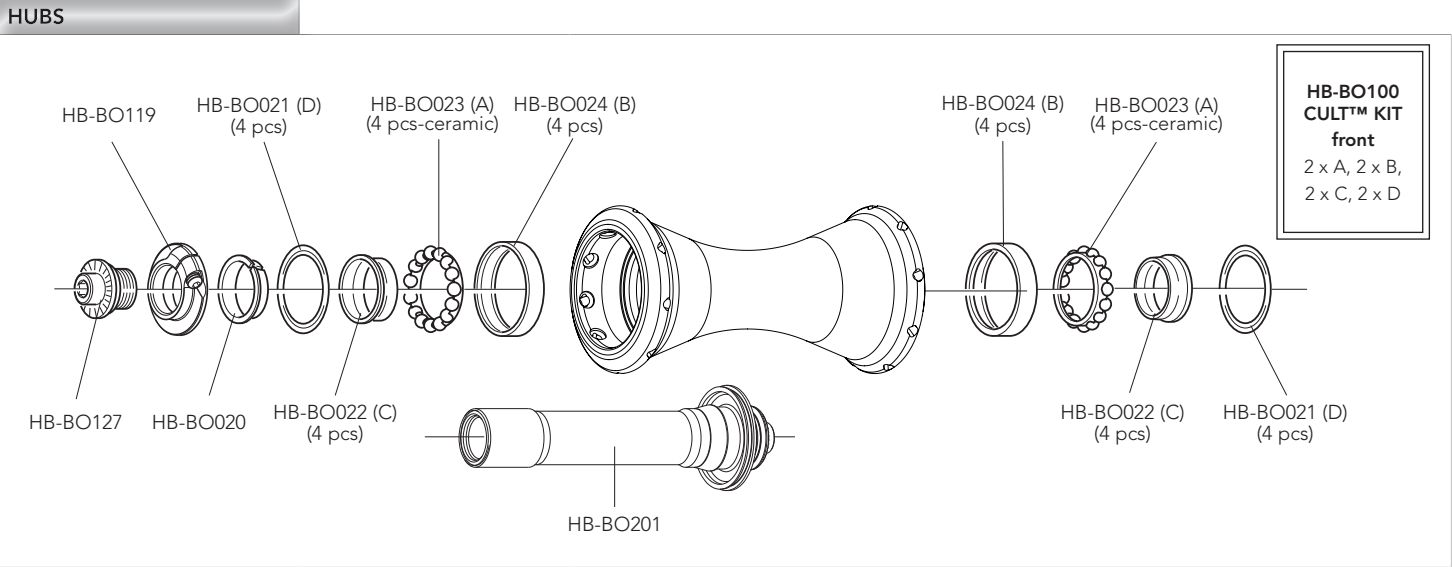

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

BORA WTO 60

2-WAY FIT

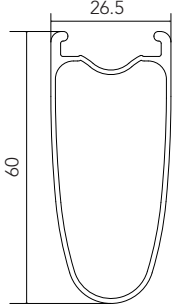RIM		
	FRONT RIM	WH-03BWTO60 (bright) - WH-05BWTO60 (dark)
	REAR RIM	WH-04BWTO60 (bright) - WH-06BWTO60 (dark)
	VALVE EXTENSION	UT-WH140M (male extension)
	2-WAY FIT™ VALVE	VA-2WF44
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER		700C (622 x 19C)
BRAKE PADS		for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH	WH-01BWTO60	4 spokes + 4 nipples
REAR RH	WH-02BWTO60	4 spokes + 4 nipples
NIPPLES	WH-015B080	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

BORA WTO 60

2-WAY FIT

HUBS

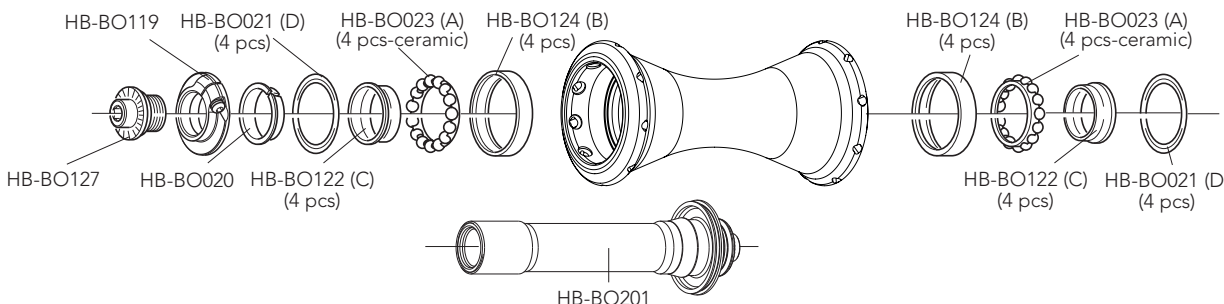

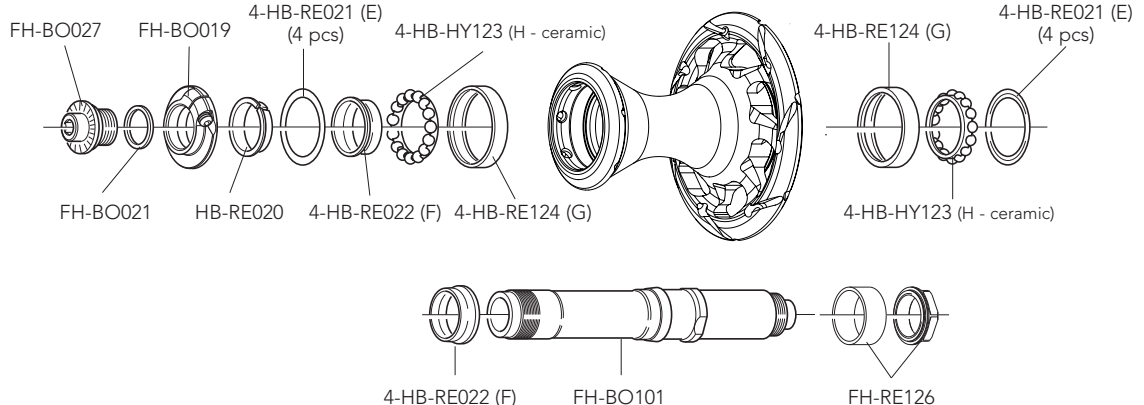

QUICK-RELEASES

QR12-BUUBFR

front + rear


Complete FW body / Corpetti RL completi	FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR V2)	See exploded view pag. 136
---	---	----------------------------

BORA WTO 45

2-WAY FIT

BORA WTO 45


2-WAY FIT

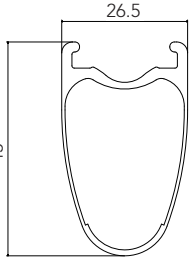RIM		
	FRONT RIM	WH-03BWTO45 (bright) - WH-05BWTO45 (dark)
	REAR RIM	WH-04BWTO45 (bright) - WH-06BWTO45 (dark)
	VALVE EXTENSION	UT-WH130M (male extension)
	2-WAY FIT™ VALVE	WH-SH101
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER		700C (622 x 19C)
BRAKE PADS		for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH	WH-01BWTO45	4 spokes + 4 nipples
REAR RH	WH-02BWTO45	4 spokes + 4 nipples
NIPPLES	WH-015B080	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

HUBS

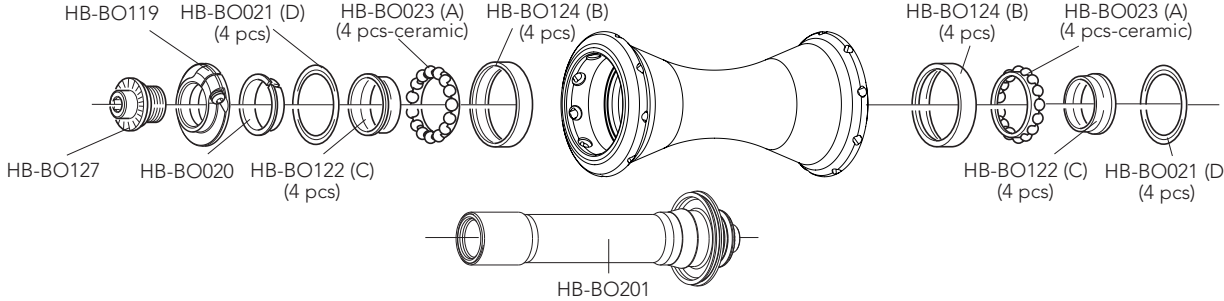


HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H


QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------


Complete FW body / Corpetti RL completi	FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR V2)	See exploded view pag. 136
---	---	----------------------------

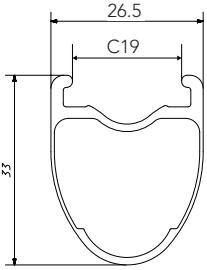RIM		
	FRONT RIM	WH-03BWT033 (bright) - WH-05BWT033 (dark)
	REAR RIM	WH-04BWT033 (bright) - WH-06BWT033 (dark)
	2-WAY FIT™ VALVE	VA-2WF44
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER		700C (622 x 19C)
BRAKE SHOES		for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH L.279	WH-01BWT033	4 spokes + 4 nipples
REAR RH L.278	WH-02BWT033	4 spokes + 4 nipples
NIPPLES	WH-015B080	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

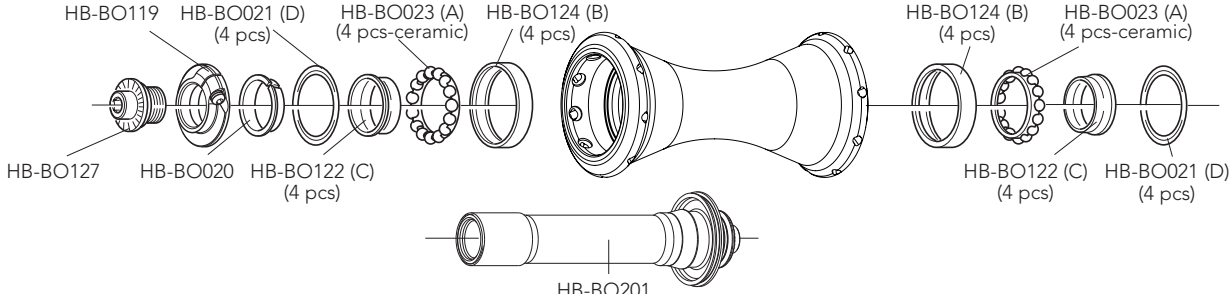HUBS		
		
		HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D

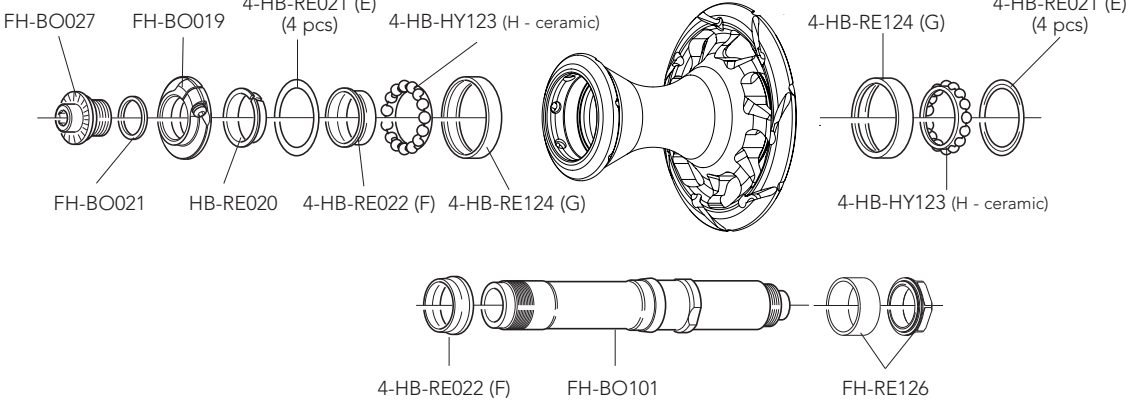		
		HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H


QUICK-RELEASES	QR12-BUUBFR	front + rear
Complete FW body / Corpetti RL completi		FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR V2) See exploded view pag. 136

SHAMAL MILLE

CLINCHER

SHAMAL MILLE



CLINCHER

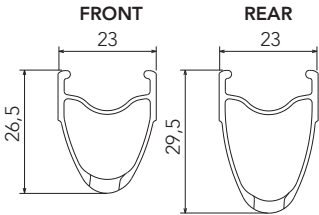RIM		
	FRONT	23
	REAR	23
FRONT RIM	WH-103SHM (no labels)	
REAR RIM	WH-104SHM (no labels)	
LABEL KIT	LAB-SHMC17 (front+rear)	
VALVE HOLE	6,5 mm	
DIAMETER	622 X 17C	
BRAKE PADS	for rims with Plasma Electrolytic Oxydation treatment: BR-PEO5001 (for brakes with retention spring fixing) - BR-PEO500X1 (for brakes with screw fixing)	

SPOKES		
FRONT KIT	KIT-23SHB	16 front spokes
REAR KIT	KIT-34SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT SPOKE	WH-105SHM	spoke + nipple
COMPLETE REAR RIGHT SPOKE	WH-008SHM	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-007SHM	spoke + nipple
NIPPLES	WH-015SHM	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH270	spoke wrench (SERVICE CENTER Only)

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

HUBS

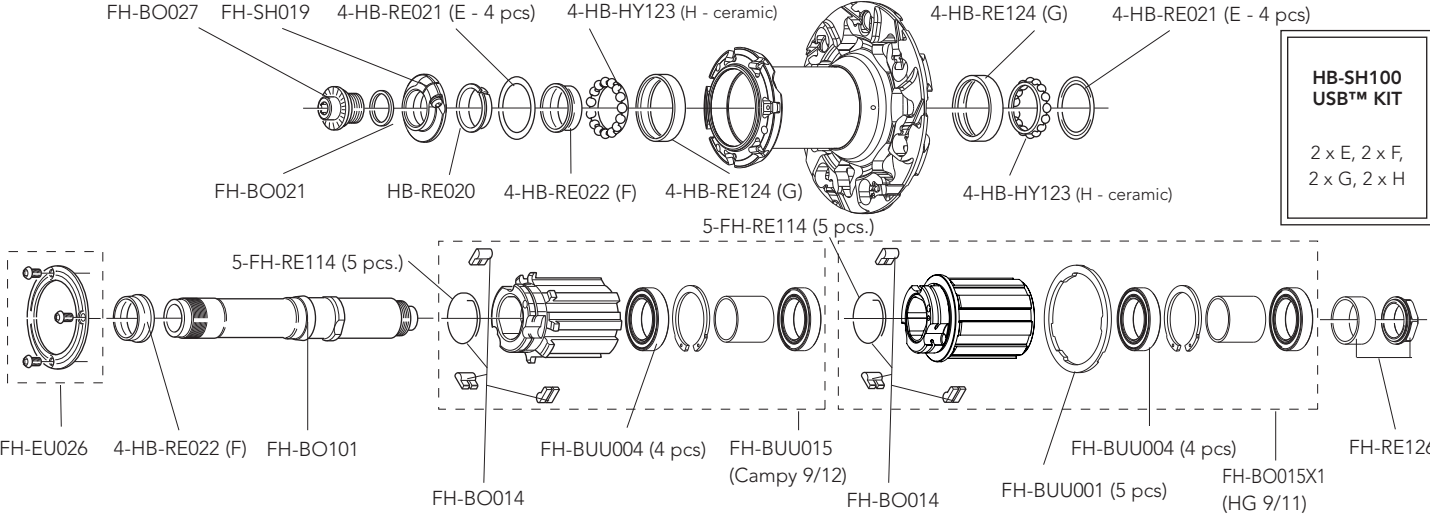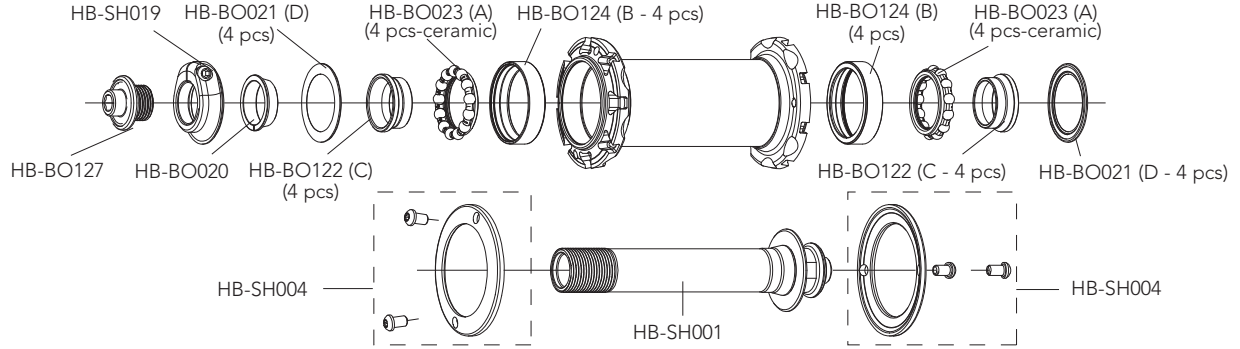

HB-SH200 USB™ KIT front

2 x A, 2 x B, 2 x C, 2 x D

HB-SH100 USB™ KIT

2 x E, 2 x F, 2 x G, 2 x H


QUICK-RELEASES	QR13-80FR	front + rear
----------------	-----------	--------------

SHAMAL ULTRA

C17 2-WAY FIT



SHAMAL ULTRA

C17 2-WAY FIT

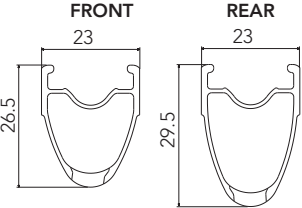RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE 2-WAY FIT™ VALVE VALVE HOLE BUSHING DIAMETER BRAKE PADS	WH-313SHB (no labels) WH-314SHB (no labels) LAB-SH2B17 (front+rear) 7,5 mm WH-SH101 5-WH-SH002 (for valve seat reduction - 5 pcs)  634 mm see "brake pads compatibility table" on www.campagnolo.com

SPOKES		
FRONT KIT	KIT-23SHB	16 front/rear right spokes
REAR KIT	KIT-34SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT SPOKE	WH-205SHB	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-207SHB	spoke + nipple
COMPLETE REAR RIGHT SPOKE	WH-208SHB	spoke + nipple
NIPPLES	WH-115SH	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH070	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

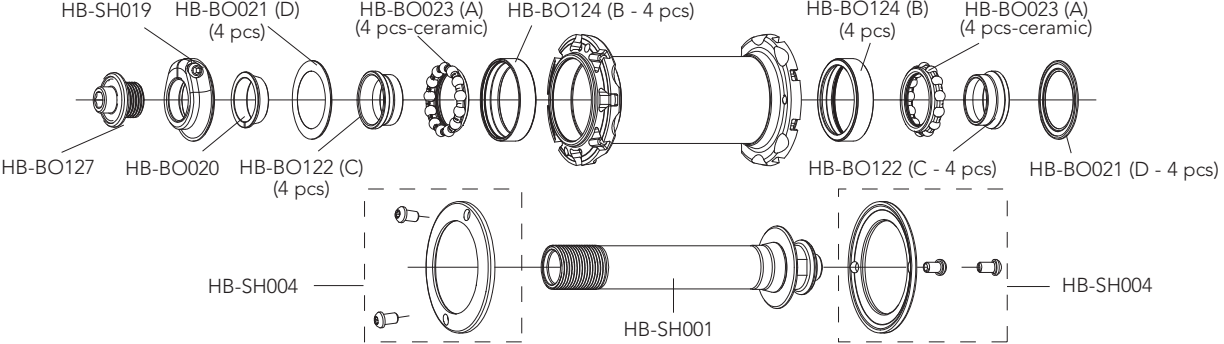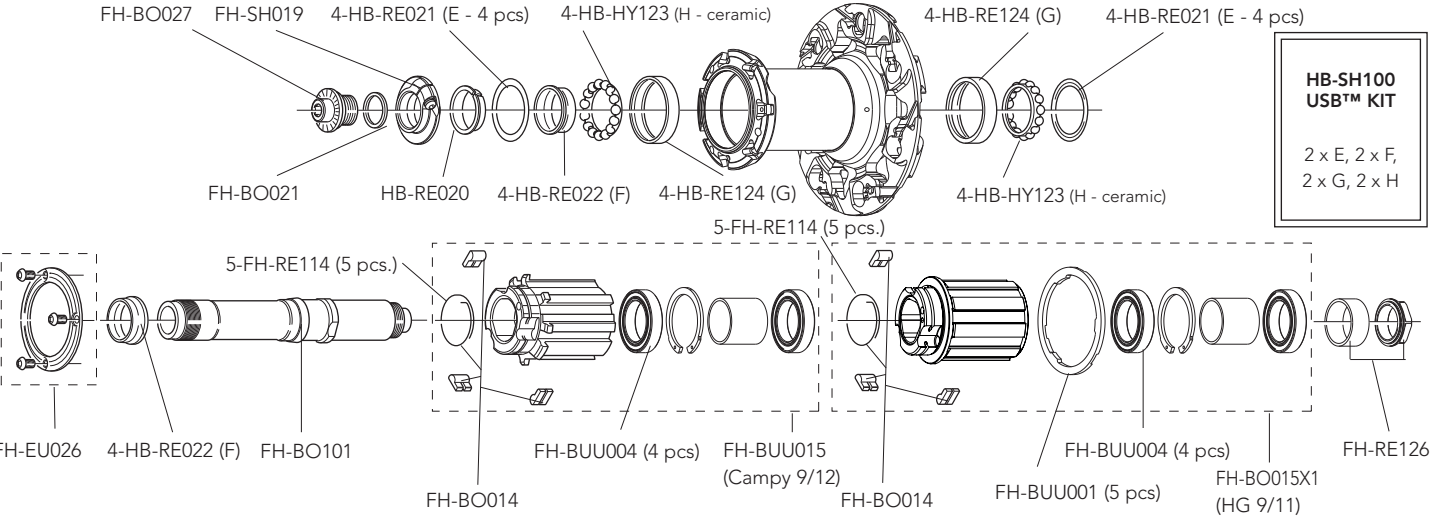
HUBS		
	HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D	
	HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H	
QUICK-RELEASES	QR13-80FR	front + rear

SHAMAL ULTRA

C17 CLINCHER



SHAMAL ULTRA


C17 CLINCHER

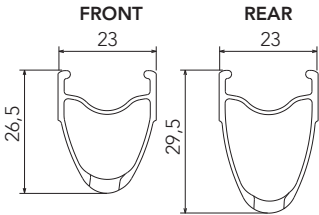RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER BRAKE PADS	WH-403SHB (no labels) WH-404SHB (no labels) LAB-SHCB17 6,5 mm 622 X 17C see "brake pads compatibility table" on www.campagnolo.com

SPOKES		
FRONT KIT	KIT-23SHB	16 front/rear right spokes
REAR KIT	KIT-34SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT	WH-205SHB	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-207SHB	spoke + nipple
COMPLETE REAR RIGHT SPOKE	WH-208SHB	spoke + nipple
NIPPLES	WH-115SH	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attracting nipple insert
NIPPLE MAGNET	UT-WH050	nipple attracting magnet
SPOKE SPANNER	UT-WH070	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

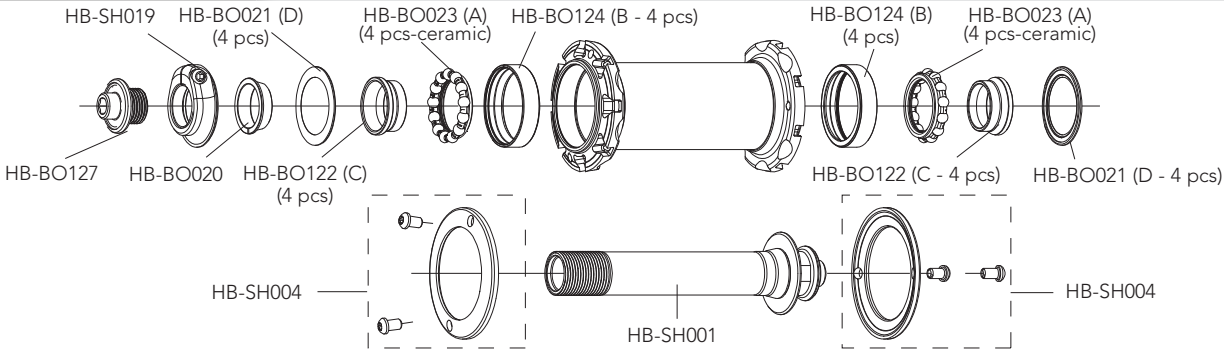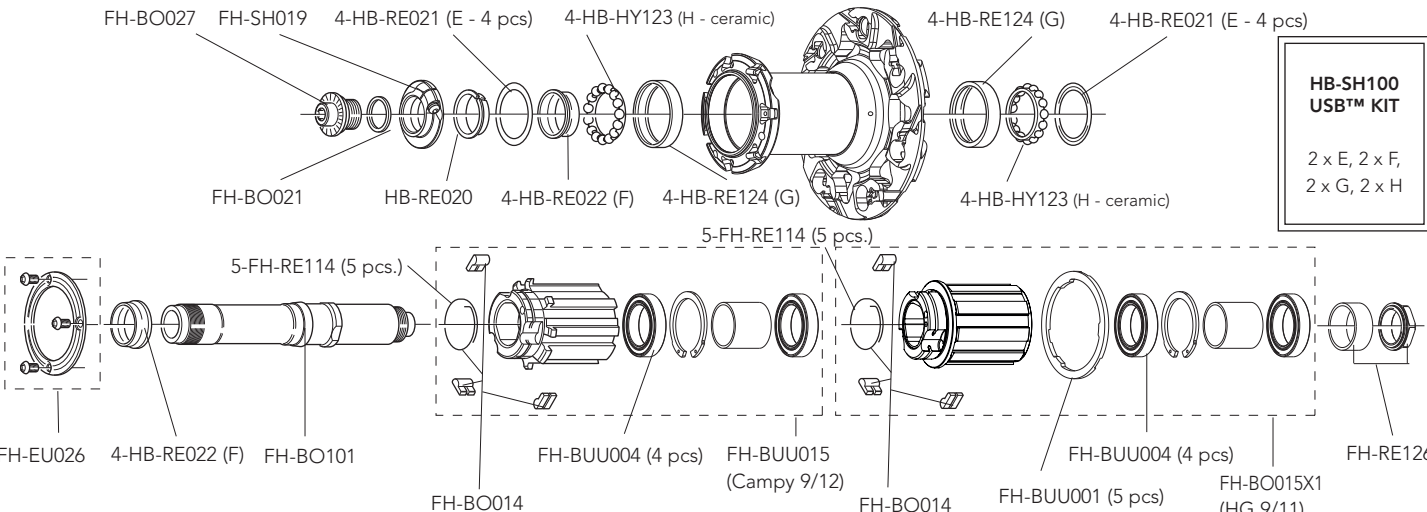
HUBS		
		HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D
		HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H
QUICK-RELEASES	QR13-80FR	front + rear

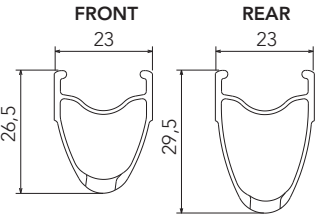RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER BRAKE PADS	WH-403ZOB (with labels) WH-504ZOB (with labels) LAB-ZOCB17 (for a pair of front+rear wheels) 6,5 mm 622 X 17C see "brake pads compatibility table" on www.campagnolo.com

SPOKES		
FRONT SPOKE	WH-116ZOC	4 spokes + 4 nipples
REAR RH SPOKE	WH-118ZOC	4 spokes + 4 nipples
REAR LH SPOKE	WH-119ZOC	4 spokes + 4 nipples
NIPPLES	WH-115ZO	50 pieces
NIPPLE INSERT	UT-WH035	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

HUBS

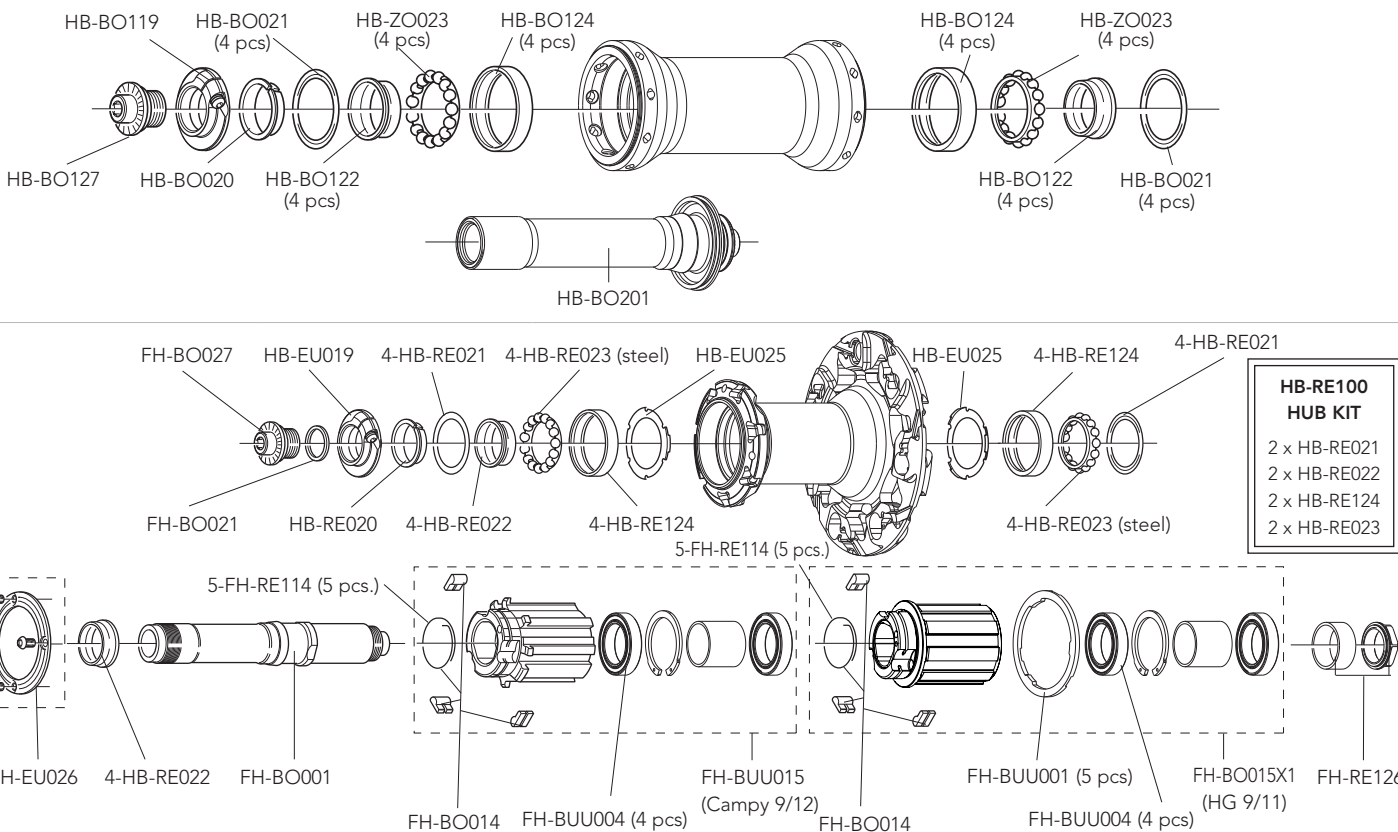



HB-RE100 HUB KIT
2 x HB-RE021
2 x HB-RE022
2 x HB-RE124
2 x HB-RE023


QUICK-RELEASES	QR12-ZOBFR	front + rear
----------------	------------	--------------

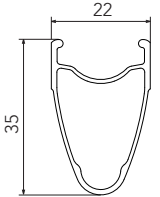RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER BRAKE PADS	WH-RT003 (2 pieces) LAB-SCCB18 (for a pair of front+rear wheels) 6,5 mm 622 x 17C see "brake pads compatibility table" on www.campagnolo.com

SPOKES		
FRONT SPOKE	WH-016SCC	4 spokes + 4 nipples
REAR RH SPOKE	WH-018SCC	4 spokes + 4 nipples
REAR LH SPOKE	WH-019SCC	4 spokes + 4 nipples




ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

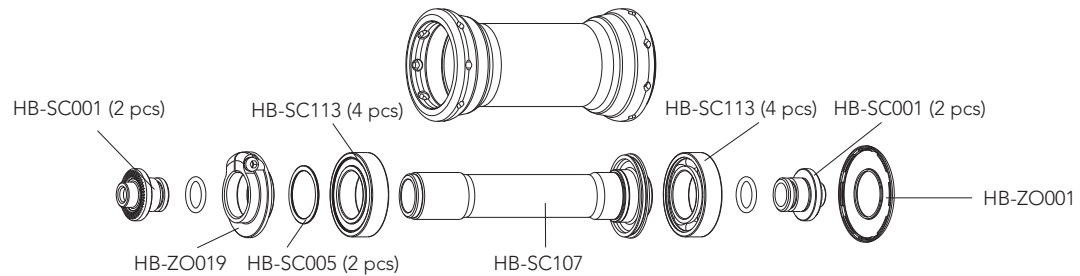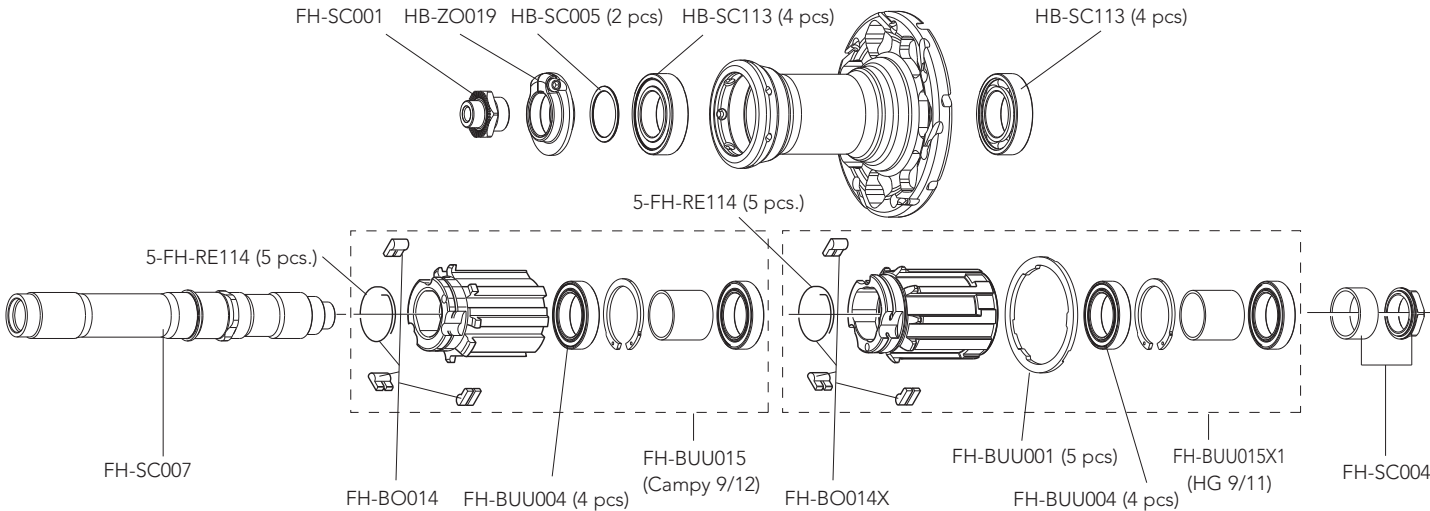HUBS		
		
		
QUICK-RELEASES	QR12-ZOBFR	front + rear

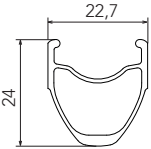RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER BRAKE PADS	WH-RT003 (20.-5 mm - 2 pieces) LAB-CAC18 (BLACK - front+rear) 6,5 mm 622 x 17C see "brake pads compatibility table" on www.campagnolo.com

SPOKES		
FRONT SPOKE	WH-016CAC	4 spokes + 4 nipples
REAR RH SPOKE	WH-018CAC	4 spokes + 4 nipples
REAR LH SPOKE	WH-019CAC	4 spokes + 4 nipples
NIPPLES	50-WH-NZO	50 pcs

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)

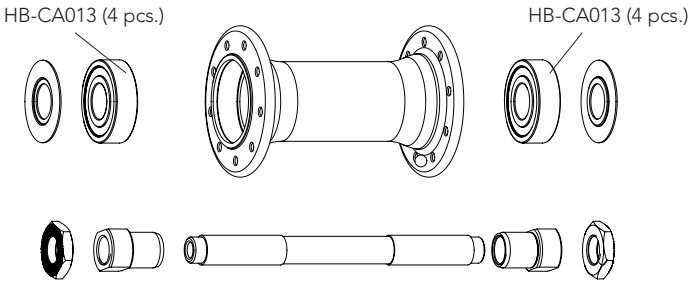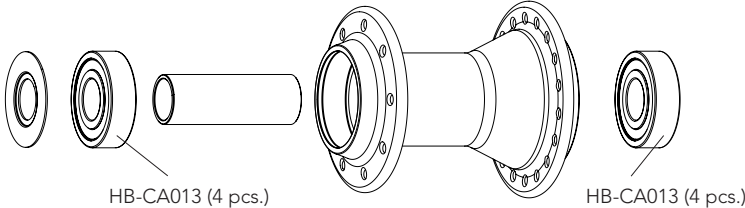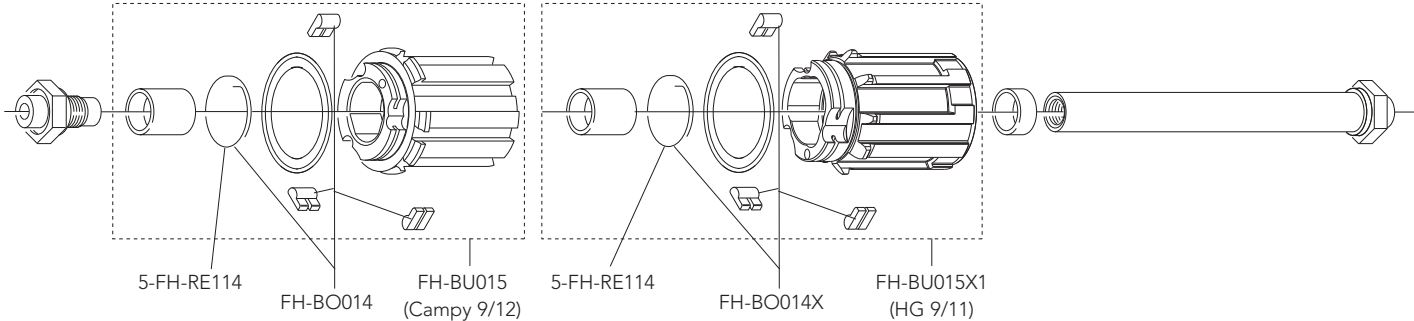
HUBS		
		
		
		
QUICK-RELEASES	QR8-40BFR	front + rear

BORA ULTRA 80 PISTA

TUBULAR


BORA ULTRA 80 PISTA

TUBULAR

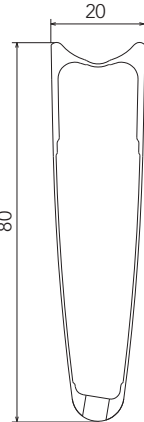RIM		
	FRONT RIM	WH-101BO80
	VALVE HOLE	6,5 mm
	VALVE EXTENSION	UT-WH160M (male extension) - UT-WH160F (female extension)
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	634 mm

SPOKES		
FRONT SPOKE	WH-016BOT80	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

HUBS

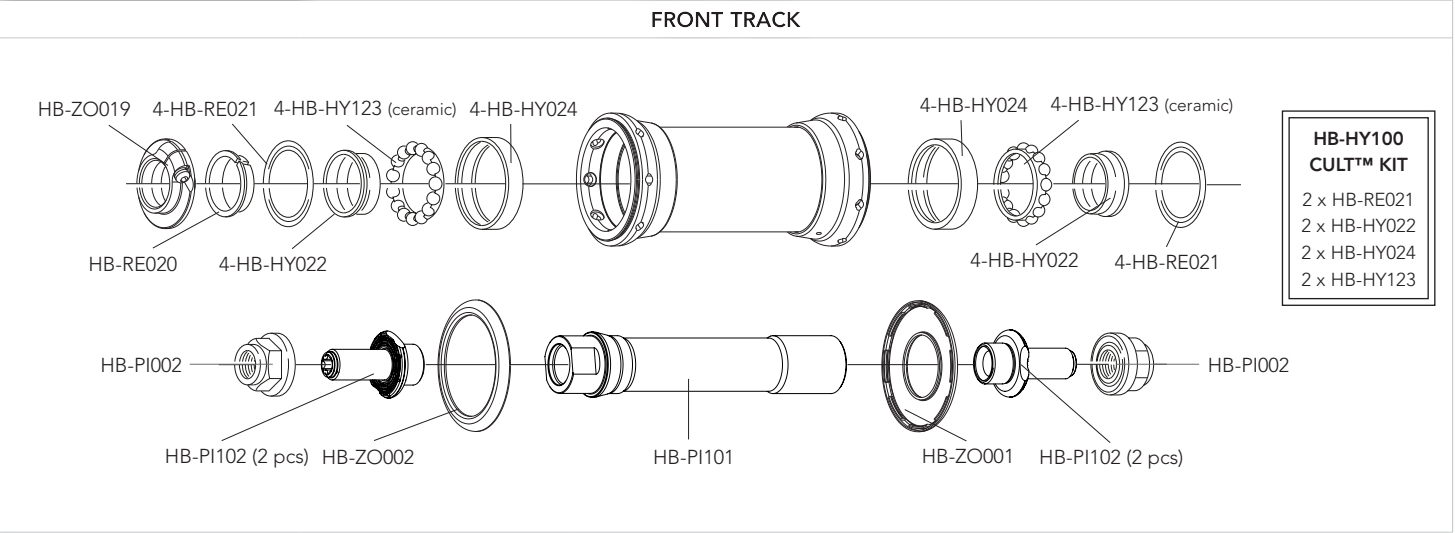


RIM	
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)
VALVE HOLE BUSHINGS	WH-BUU002 (5 pcs.) 
VALVE EXTENSION	UT-WH130M


**HB-BO100
CULT™ KIT
front**
2 x HB-BO023
2 x HB-BO024
2 x HB-BO022
2 x HB-BO021

HUBS

FRONT TRACK

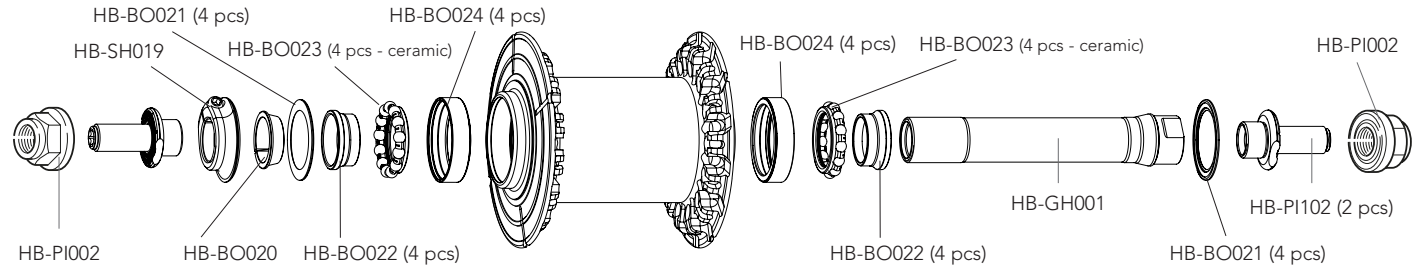

REAR TRACK

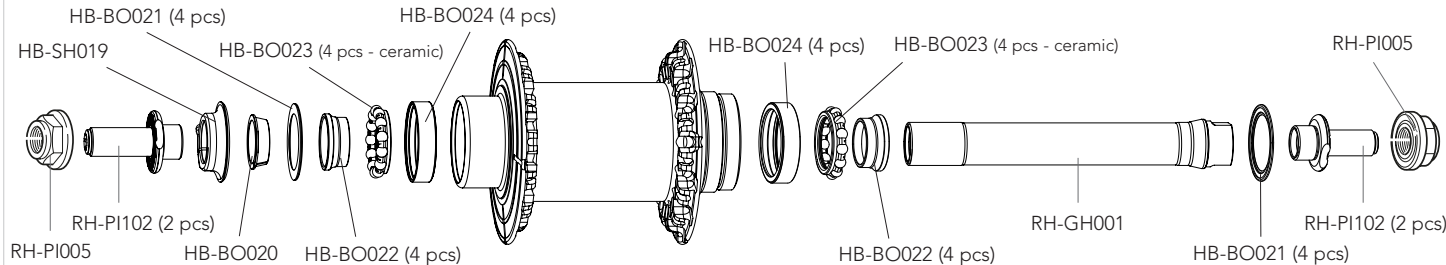


RIM	
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)
VALVE HOLE BUSHINGS	WH-BUU002
VALVE EXTENSION	UT-WH130M
BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
-------------------------	-----------	--

HUBS

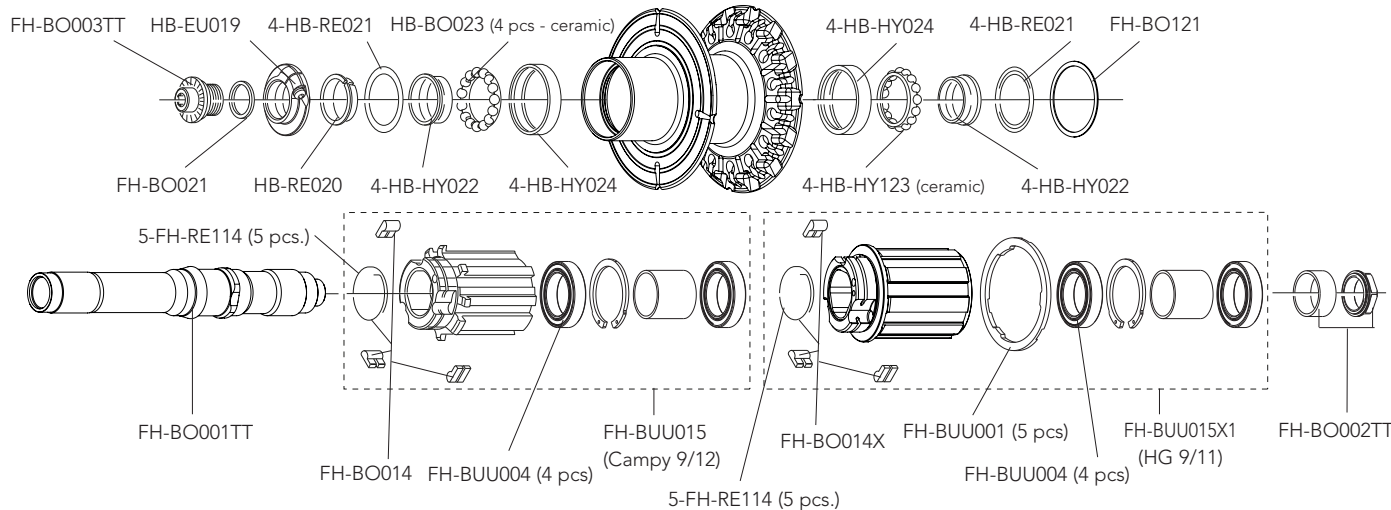


QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

BORA ONE 50

DB AFS - TUBULAR

BORA ONE 50


DB AFS - TUBULAR

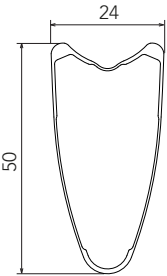
RIM		
	RIM	WH-001BO150DB (bright) - WH-001BO150DBDK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 17C)

SPOKES		
FRONT RH L. 262,5	WH-017BO50DB	4 spokes + 4 nipples
FRONT LH / REAR RH L. 278	WH-016BO35DB	4 spokes + 4 nipples
REAR LH L. 253,5	WH-019BO50DB	4 spokes + 4 nipples
NIPPLES	WH-07BWT045DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

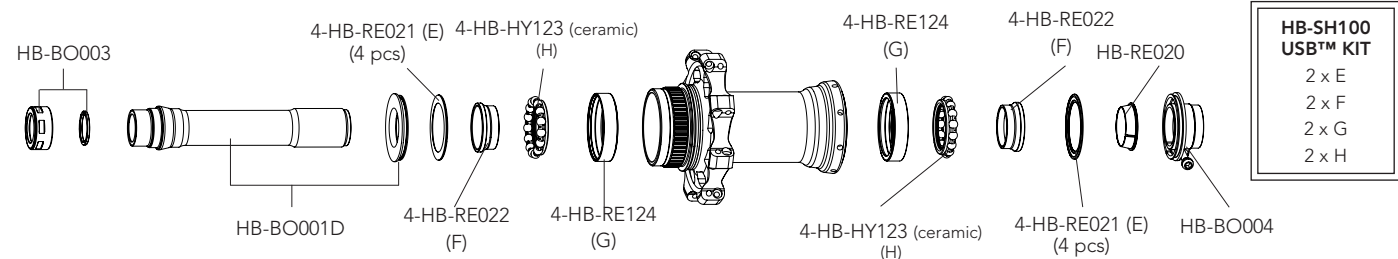

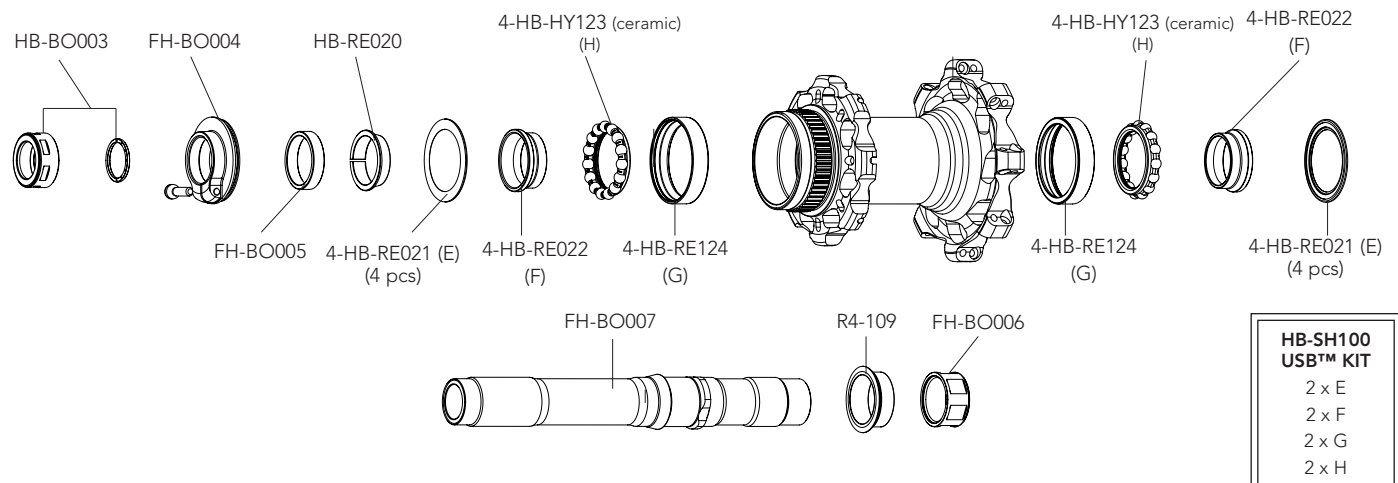


BORA ONE 35

DB AFS - TUBULAR

BORA ONE 35

DB AFS - TUBULAR

RIM

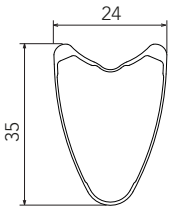

RIM	WH-001BO135DB (bright) - WH-001BO135DBDK (dark)
VALVE HOLE	6,5 mm
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER	700C (622 x 17C)



SPOKES

FRONT LH / REAR RH L. 293	WH-017BO35DB	4 spokes + 4 nipples
FRONT RH L. 278	WH-016BO35DB	4 spokes + 4 nipples
REAR LH L. 268	WH-019BO35DB	4 spokes + 4 nipples
NIPPLES	WH-07BWT045DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

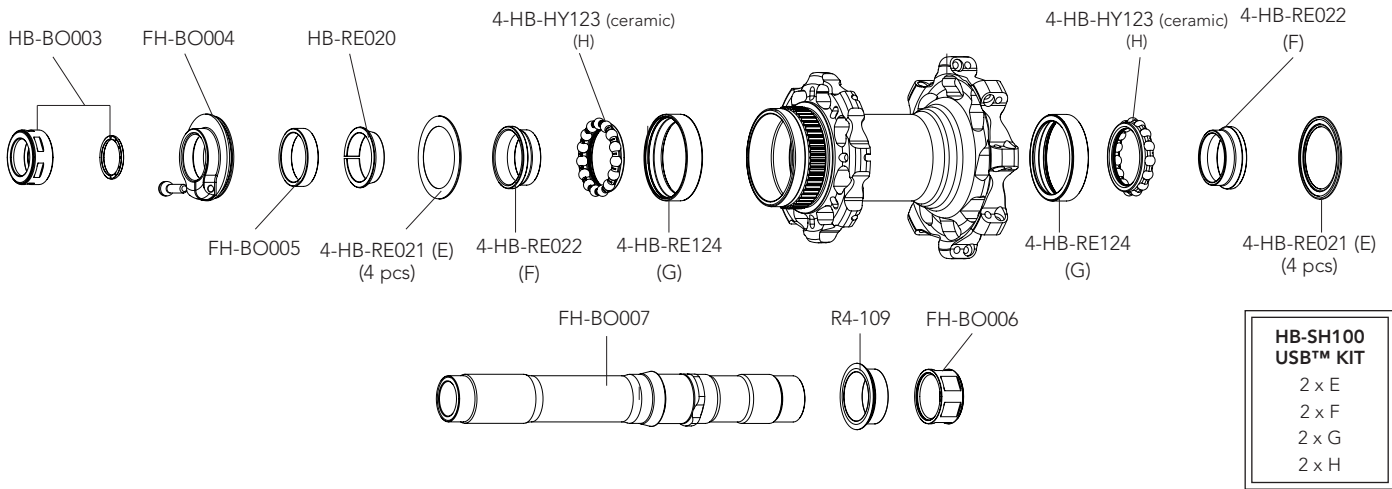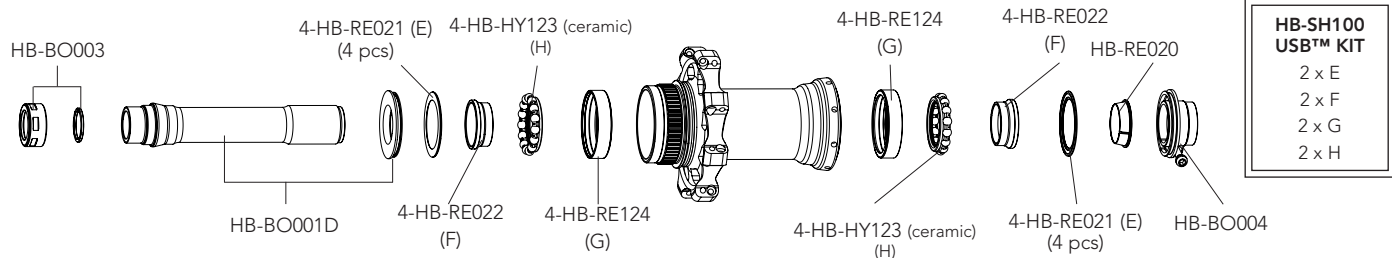


BORA ONE 50

DB AFS - CLINCHER

BORA ONE 50


DB AFS - CLINCHER

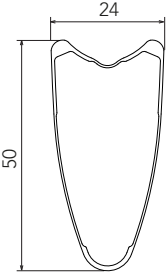
RIM		
	RIM	WH-003BO150DB (bright) - WH-003BO150DBDK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 17C)

SPOKES		
FRONT RH L. 262,5	WH-017BO50DB	4 spokes + 4 nipples
FRONT LH / REAR RH L. 278	WH-016BO35DB	4 spokes + 4 nipples
REAR LH L. 253,5	WH-019BO50DB	4 spokes + 4 nipples
NIPPLES	WH-07BWT045DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

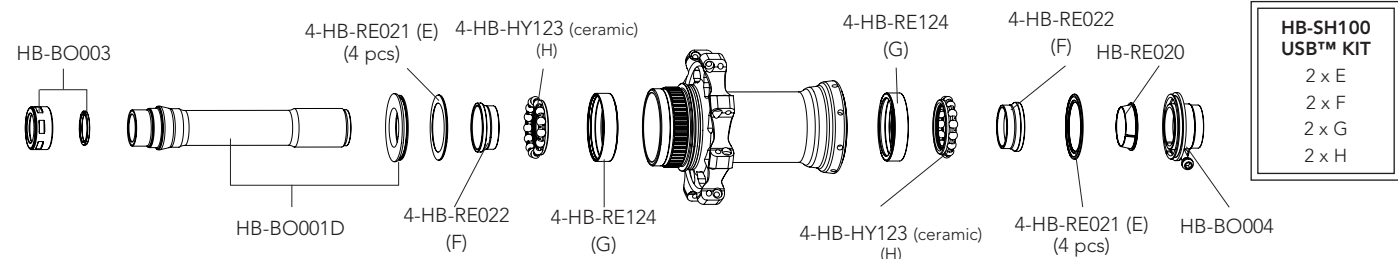

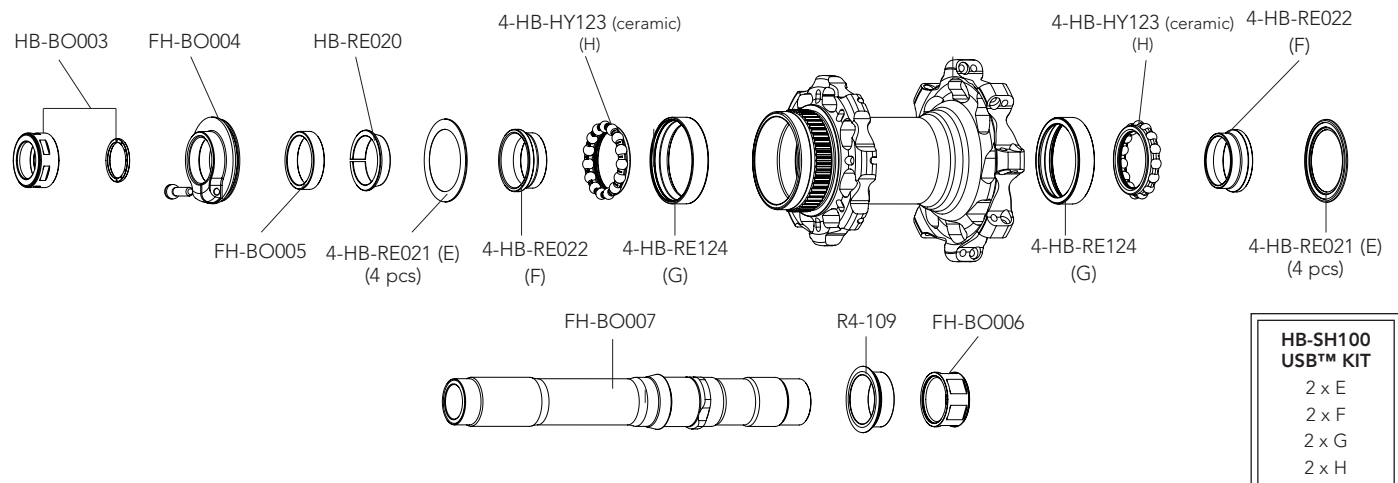


BORA ONE 35

DB AFS - CLINCHER

BORA ONE 35



DB AFS - CLINCHER

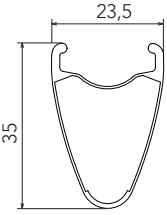RIM		
	RIM	WH-003BO135DB (bright) - WH-003BO135DBDK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 17C)


SPOKES		
FRONT LH / REAR RH L. 293	WH-017BO35DB	4 spokes + 4 nipples
FRONT RH L. 278	WH-016BO35DB	4 spokes + 4 nipples
REAR LH L. 268	WH-019BO35DB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ lockring	M1-101	to fix the rotor

HUBS

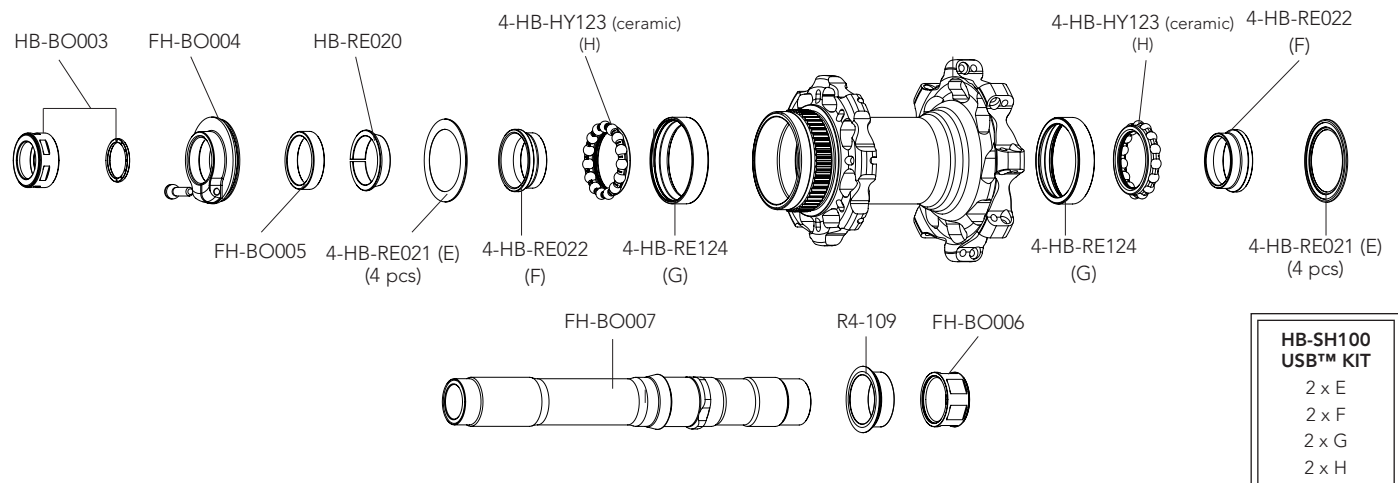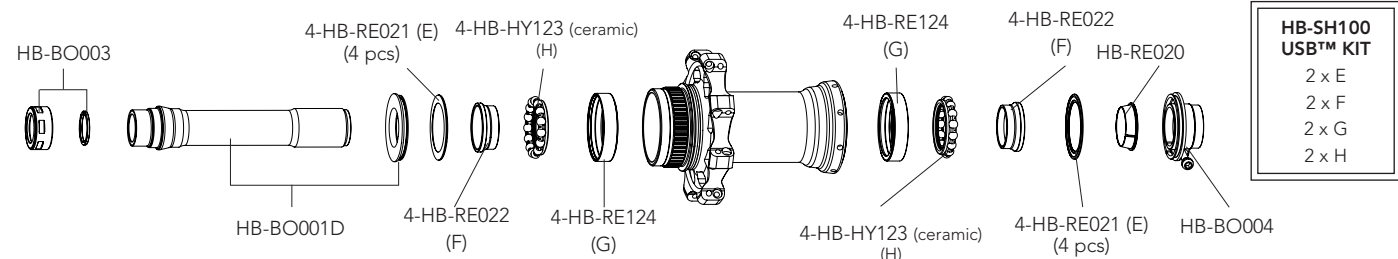

RIM

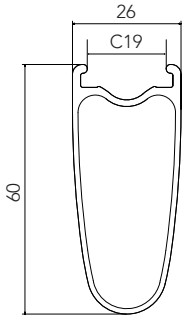

RIM	WH-02BWTO60DB (dark)
VALVE HOLE	6,5 mm
VALVE EXTENSION	UT-HU150 (male extension)
2-WAY FIT™ VALVE	VA-2WF44
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER	700C (622 x 19C)


SPOKES

FRONT LH / REAR RH L. 265	WH-02BWTO45	4 spokes + 4 nipples
FRONT RIGHT L. 250,5	WH-02BWTO60	4 spokes + 4 nipples
REAR LEFT L. 274	WH-01BWTO60DB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor


HUBS

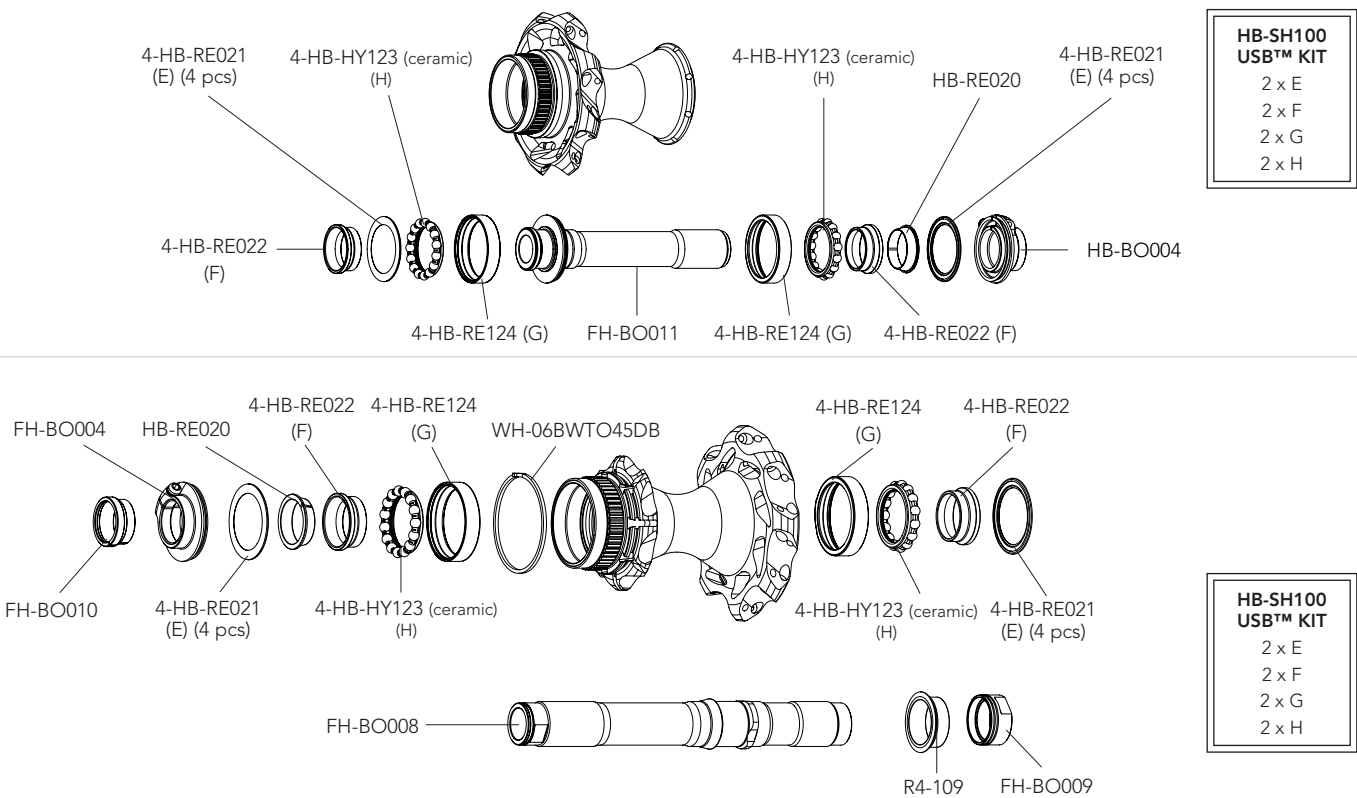

Complete FW body / Corpetti RL completi FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR) See exploded view pag. 136

BORA WTO 45

DB AFS - 2-WAY FIT

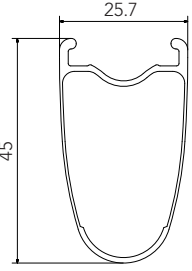RIM		
	RIM	WH-03BWTO45DB (dark)
	VALVE HOLE	6,5 mm
	VALVE EXTENSION	UT-WH130M (male extension)
	2-WAY FIT™ VALVE	WH-SH101
	VALVE HOLE BUSHING DIAMETER	WH-BUU002 (5 pcs.)  700C (622 x 19C)


SPOKES		
FRONT RH L. 265	WH-02BWTO45	4 spokes + 4 nipples
FRONT LH / REAR RH L. 280,5	WH-04BWTO45DB	4 spokes + 4 nipples
REAR LH L. 261,5	WH-05BWTO45DB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor


BORA WTO 45

DB AFS - 2-WAY FIT


HUBS

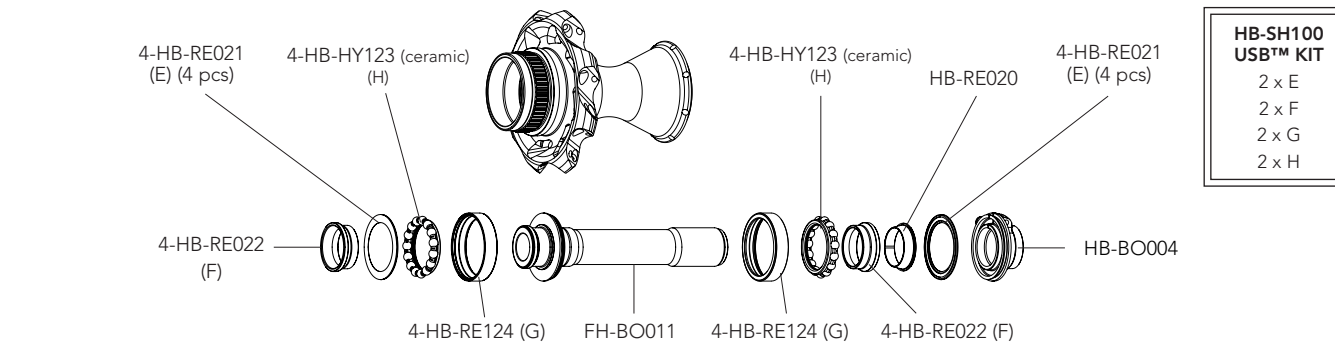

**HB-SH100
USB™ KIT**
2 x E
2 x F
2 x G
2 x H

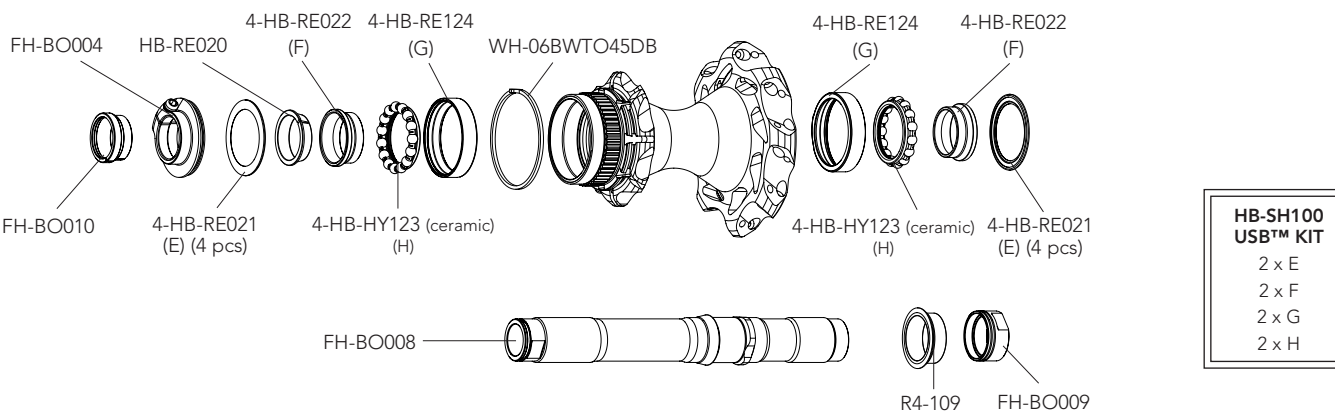


**HB-SH100
USB™ KIT**
2 x E
2 x F
2 x G
2 x H

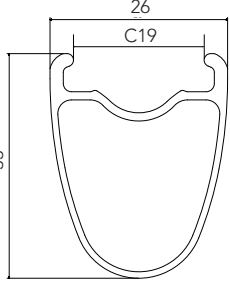RIM		
	RIM	WH-04BWTO33DB (dark)
	VALVE HOLE	6,5 mm
	2-WAY FIT™ VALVE	VA-2WF44
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
	DIAMETER	700C (622 x 19C)

SPOKES		
FRONT LH / REAR RH L. 292,5	WH-01BWTO33DB	4 spokes + 4 nipples
FRONT RH L. 277,5	WH-02BWTO33DB	4 spokes + 4 nipples
REAR LEFT L. 274	WH-03BWTO33DB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

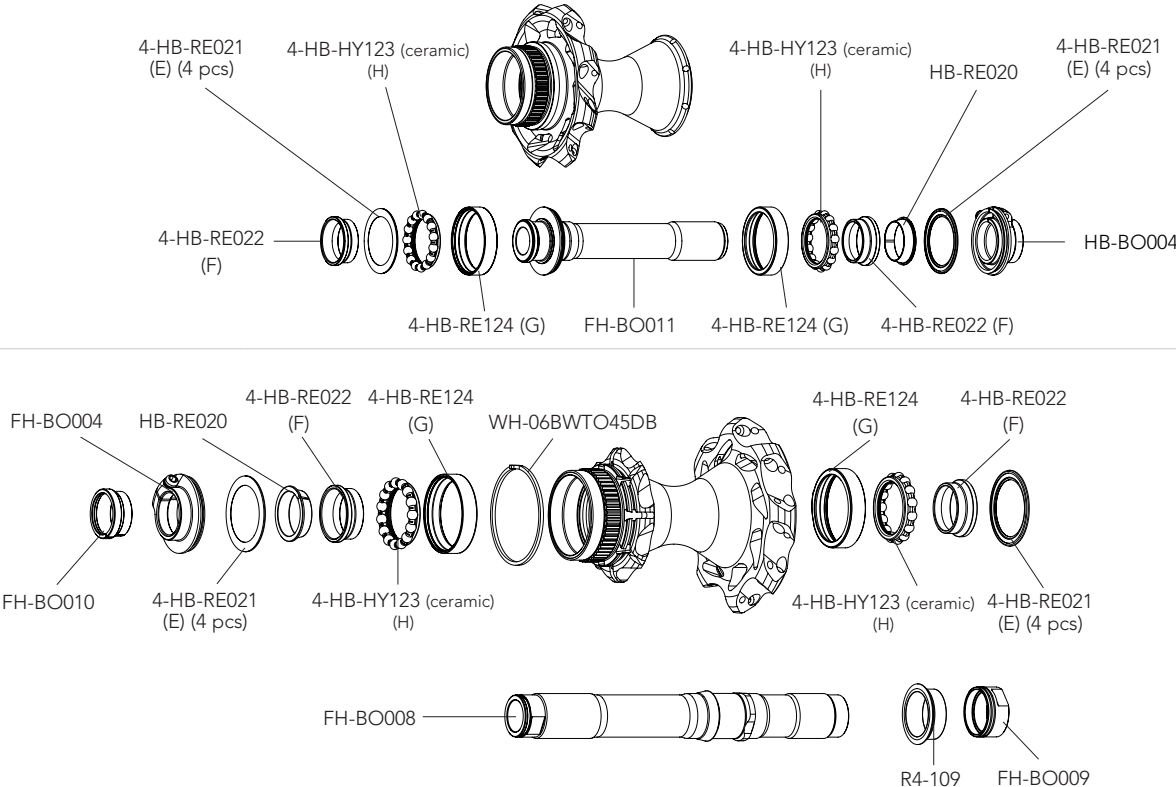


**HB-SH100
USB™ KIT**
2 x E
2 x F
2 x G
2 x H

**HB-SH100
USB™ KIT**
2 x E
2 x F
2 x G
2 x H

Complete FW body / Corpetti RL completi FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR) See exploded view pag. 136

RIM

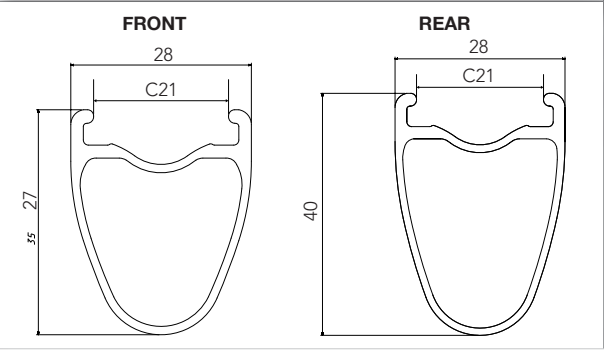

LABEL KIT	LAB-SHCDB21 (for a pair of front+rear wheels)
VALVE HOLE	7,5 mm
2-WAY FIT™ VALVE	VA-2WF50
DIAMETER	700C (622 x 21C)



SPOKES

FRONT LH L.281	WH-016SHCDB	4 spokes + 4 nipples
FRONT RH L.275	WH-017SHCDB	4 spokes + 4 nipples
REAR RH L.276	WH-018SHCDB	4 spokes + 4 nipples
REAR LH L.266	WH-019SHCDB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

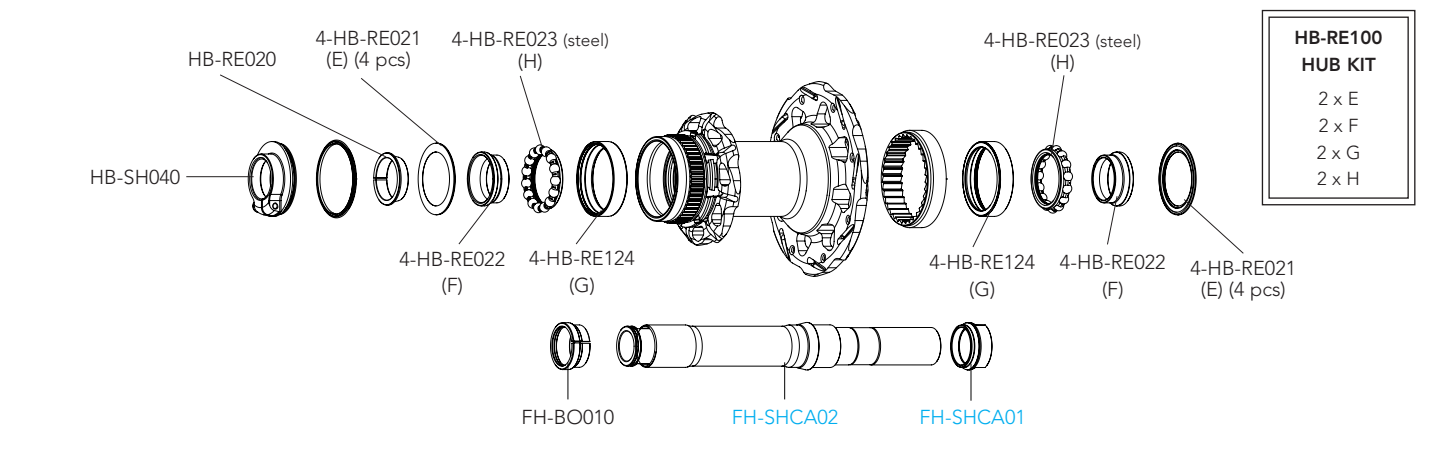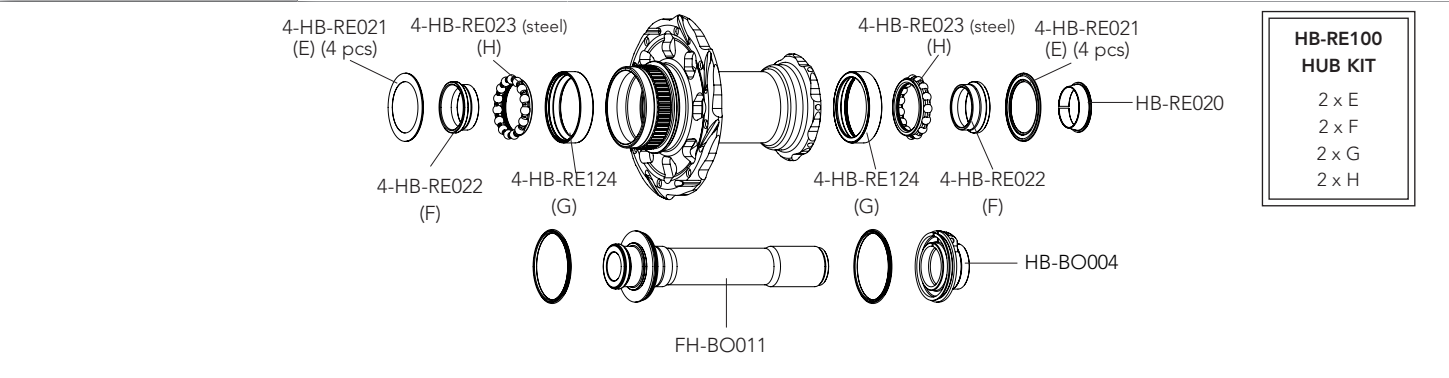


Complete FW body Ø 33 mm/ Corpetti RL completi Ø 33 mm	FH-HGA33 (HG 9/11) - FH-N3WA33 (Campagnolo N3W) - FH-XDRA33 (XDR)	See exploded view pag. 136
---	---	----------------------------

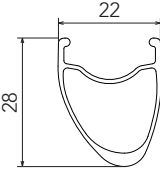
RIM		
	FRONT/REAR RIM	WH-003ZODB (with labels)
	LABEL KIT	LAB-ZOCDB17 (for a pair of front+rear wheels)
	VALVE HOLE	6,5 mm
	DIAMETER	622 X 17C


SPOKES		
FRONT LH / REAR RH	WH-016ZODB	4 spokes + 4 nipples
FRONT RH	WH-017ZODB	4 spokes + 4 nipples
REAR LH	WH-019ZODB	4 spokes + 4 nipples
NIPPLES	50-WH-015ZO	50 pieces
NIPPLE INSERT	UT-WH035	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
QUICK-RELEASES	QR17-ZODBFK QR17-ZODBRK	front quick-release +kit QR rear quick-release + kit QR

HUBS

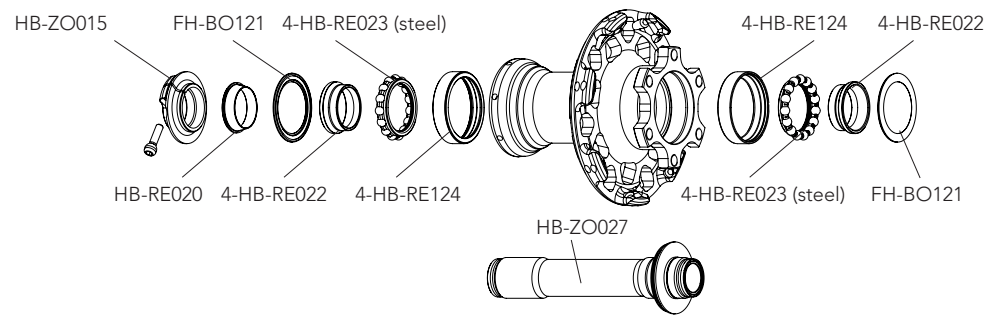

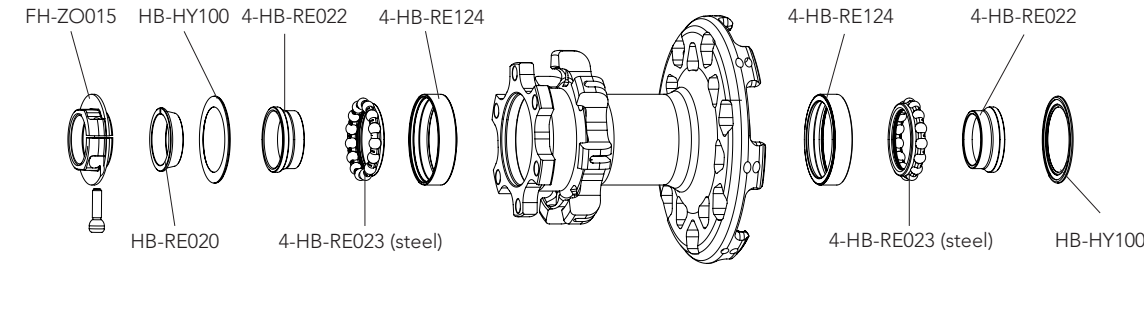

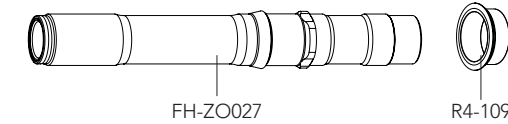

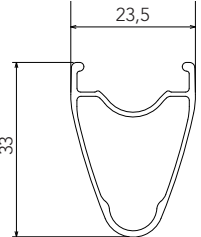RIM		
	LABEL KIT	LAB-SCDB19 (for a pair of front+rear wheels)
	RIM TAPE	2-WH-RT13 (2 pcs)
	TUBELESS VALVE	VA-2WF44
	VALVE HOLE	6,5 mm
	DIAMETER	622 X 19C



SPOKES		
FRONT LH/REAR RH L. 268,5	WH-016SCDB	4 spokes + 4 nipples
FRONT RH L. 276	WH-017SCDB	4 spokes + 4 nipples
REAR LH L.267	WH-018SCDB	4 spokes + 4 nipples

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (HG11 FW body package contains the spacer)
QUICK RELEASE	QR19-FRDB	Front + Rear 135 mm QR SKEWER FOR DB WHEELS



HUBS	

Complete FW body / Corpetti RL completi	FH-BUU015 (Campagnolo 9/12) - FH-BO015X1 (HG 9/11) - FH-BU020XDR (XDR)	See exploded view pag. 136
---	--	----------------------------

FW BODIES ROAD WHEELS



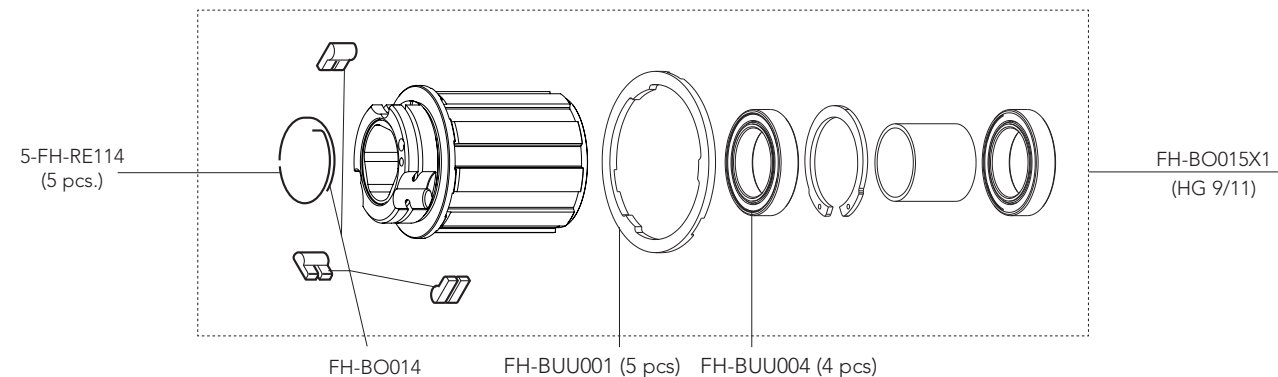
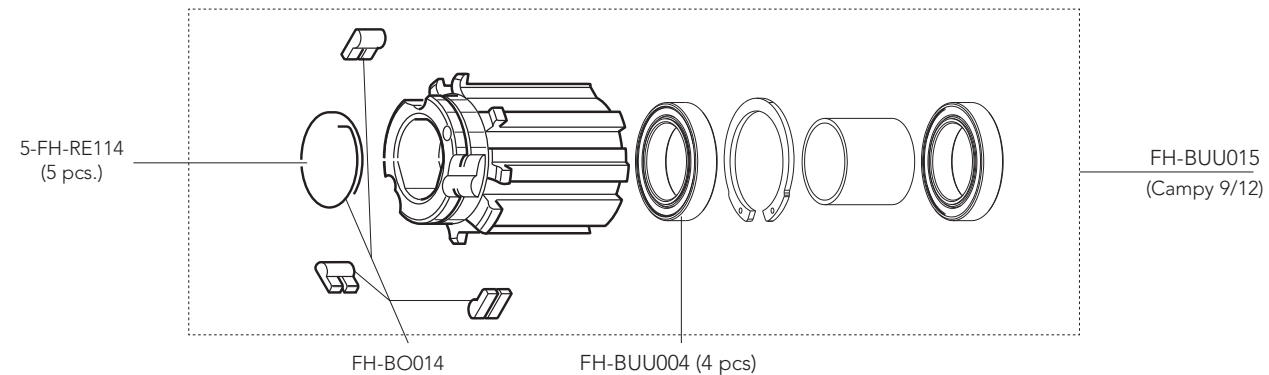


FW BODIES ROAD WHEELS

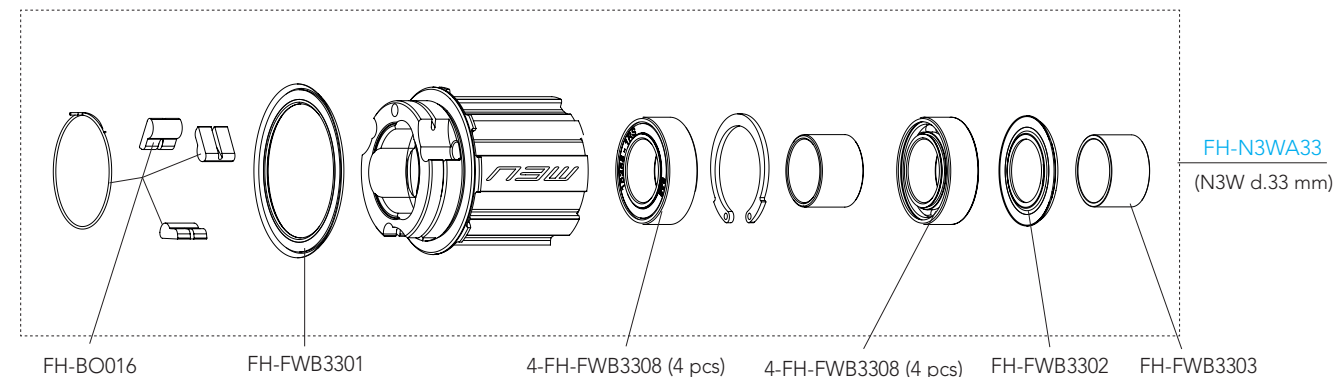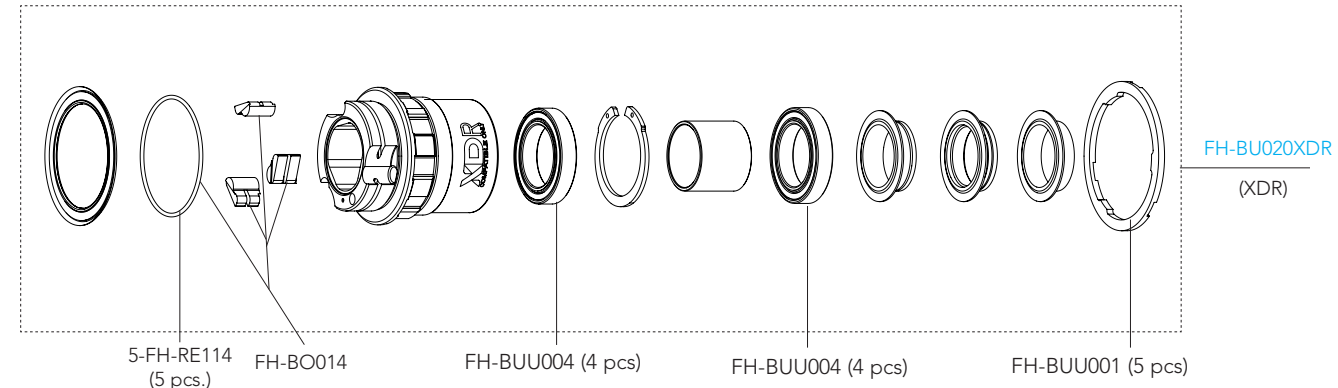


FW BODIES ROAD WHEELS

FW BODIES ROAD WHEELS

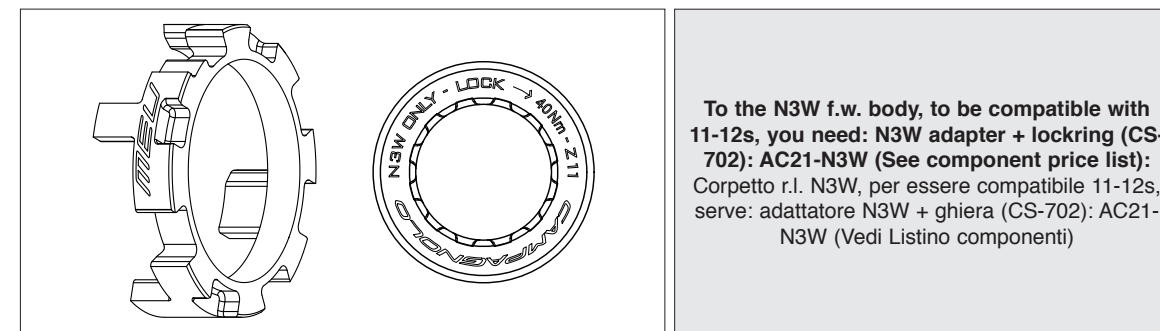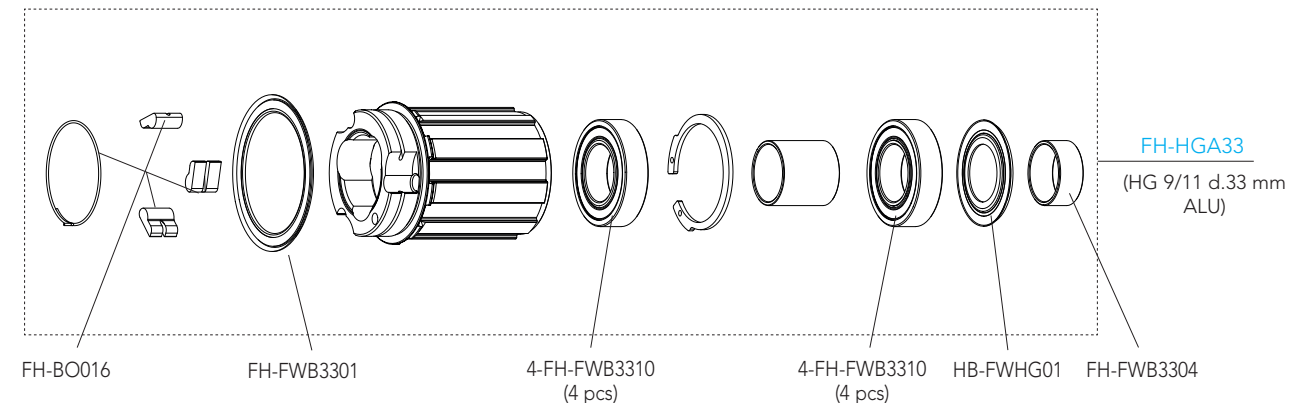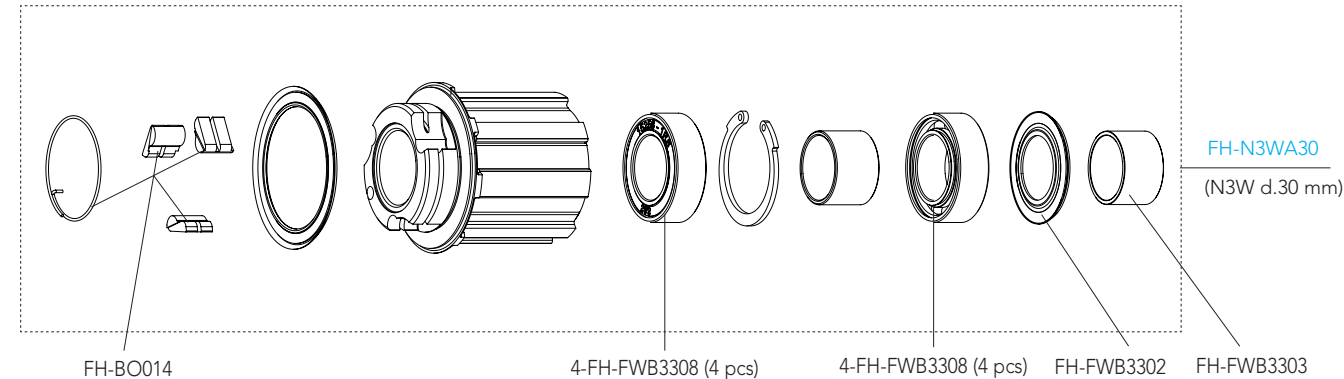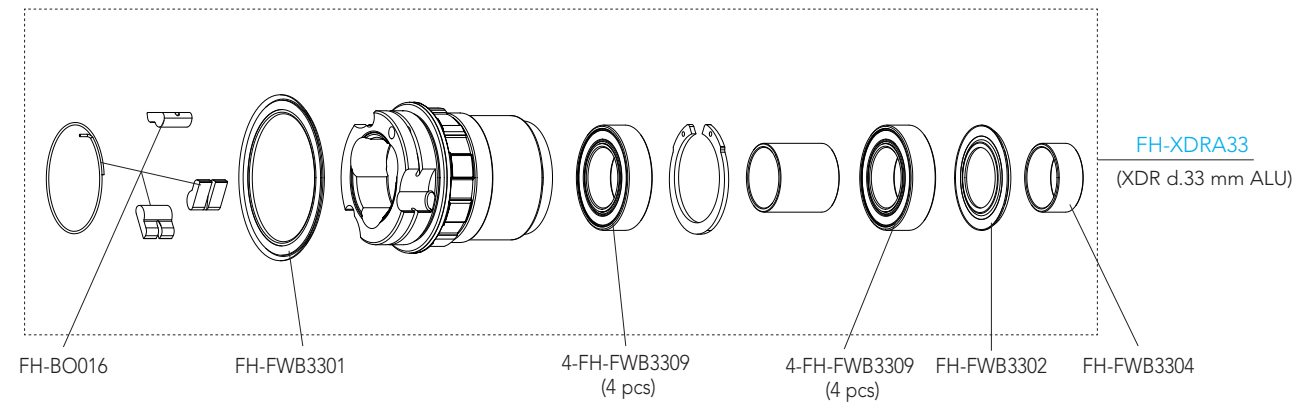

	RUOTE CONTINUATIVE DB HH12 GAMMA 2020		ONGOING DB HH12 WHEELS FROM 2020 RANGE
RUOTE	Scirocco DB (cuscinetti industriali)	WHEEL MODELS	Scirocco DB (industrial bearings)
	Zonda DB (coni-calotta)		Zonda DB (cup-and-cone)
	Shamal Ultra DB (coni-calotta)		Shamal Ultra DB (cup-and-cone)
	Famiglia Bora One DB (coni-calotta)		Famiglia Bora One DB (cup-and-cone)
	Famiglia Bora WTO DB (coni-calotta)		Famiglia Bora WTO DB (cup-and-cone)
CREMAGLIERA	d. 30 mm	RACK	d. 30 mm
PER RENDERE COMPATIBILE LA RUOTA CON IL GRUPPO 13s	Serve kit di trasformazione (corpetto N3W codice FH-N3WA30 incluso):	TO MAKE THE WHEEL COMPATIBLE WITH 13s GROUPSET	Transformation kit required (N3W body code FH-N3WA30 included):
	• Per cuscinetti industriali: AC21-N3WRFCS (Vedi listino componenti)		• For industrial bearings: AC21-N3WRFCS (See component price list)
	• Per coni-calotta: AC21-N3WRFCC (Vedi listino componenti)		• For cup-and-cone: AC21-N3WRFCC (See component price list)

AC21-N3WRFCS (1-2A-3-4)	See component price list
AC21-N3WRFCC (1-2B-3-4)	See component price list

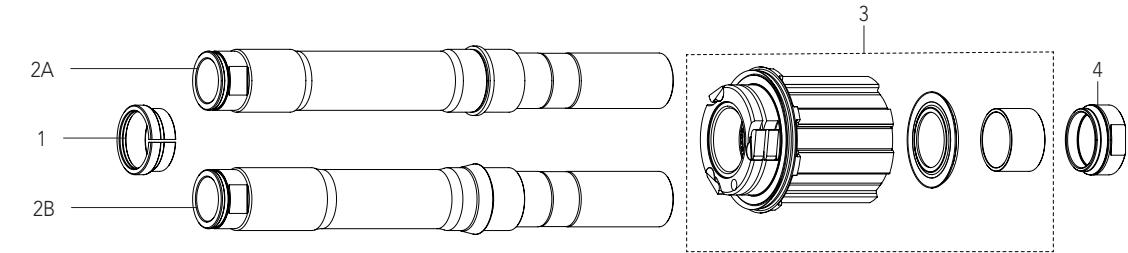

QUICK-RELEASES


RIM BRAKE WHEELS	
SCIROCCO™	QR12-ZOBFR
ZONDA™	QR12-ZOBFR
KHAMSIN™	QR12-ZOBFR
CALIMA™	QR12-ZOBFR
SHAMAL™ ULTRA™	QR13-80FR
SHAMAL™ MILLE	QR13-80FR
BORA™ ONE	QR12-BUUBFR
BORA™ ULTRA™	QR12-BUUBFR
BORA™ WTO	QR12-BUUBFR
BORA™ ULTRA™ TT	QR12-BUUBFR
DISC BRAKE WHEELS	
SCIROCCO™ DB	QR19-FRDB
ZONDA™ DB	QR19-FRDB
SHAMAL™ ULTRA™ DB	QR19-FRDB
SHAMAL™ CARBON DB	QR19-FRDB
BORA™ ONE DB	QR19-FRDB
BORA™ WTO DB	QR19-FRDB
DISC BRAKE WHEELS: QR + TRANSFORMATION KITS	
SCIROCCO™ DB - rear	QR17-ZODBRK (rear + kit HH=> QR)
ZONDA™ DB - front	QR17-ZODBFK (front + kit HH=> QR)
ZONDA™ DB - rear	QR17-ZODBRK (rear + kit HH=> QR)

QR12-BUUBFR (front+rear)
QR12-ZOBFR (front+rear) QR17-ZODBFK (front + kit HH=>QR) QR17-ZODBRK (rear + kit HH=>QR)
QR13-80FR (front+rear)
QR19-FRDB


DB WHEELS - adapters for front axles

ZONDA DB


QR Ø9 mm - 100 mm (KITFCFAQR + KITFCRA12135)

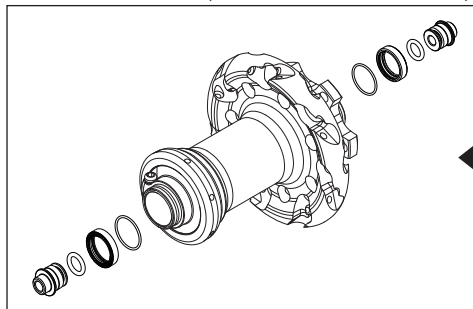

Ø12mm THRU-AXLE - 100mm (KITFCRA12135)

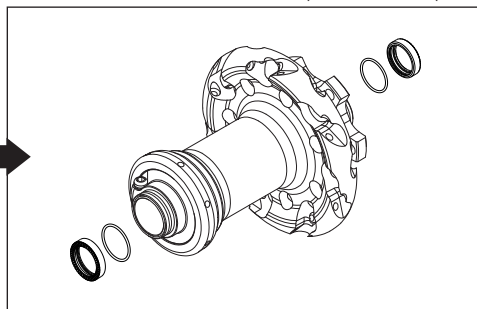


QR Ø 9mm - 100 mm

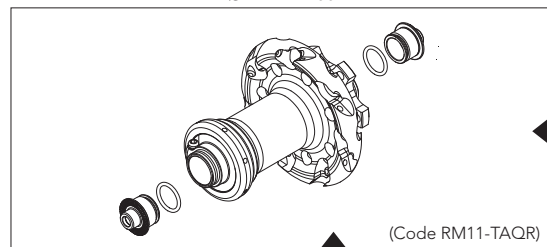


(Code RM11-TAQR)

Ø 12mm THRU-AXLE - 100 mm

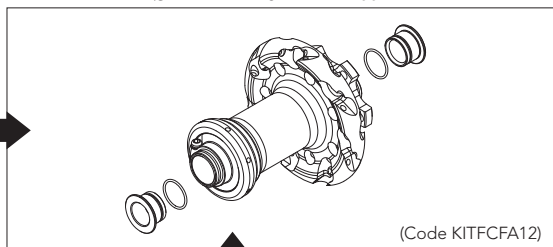

(Code KITFCFA12)

Ø 15mm THRU-AXLE - 100 mm

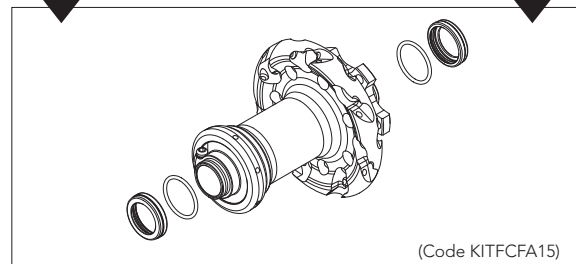


(Code KITFCFA15)

SCIROCCO DB

DB WHEELS - adapters for rear axles


ZONDA DB / SCIROCCO DB

Ø12mm THRU-AXLE- 135 mm

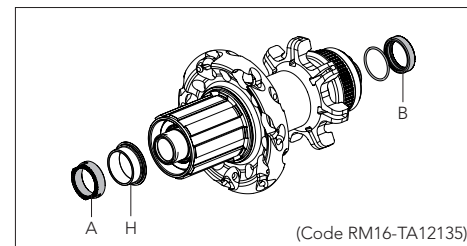


(Code RM16-TA12135)

Ø12mm THRU-AXLE - 142 mm

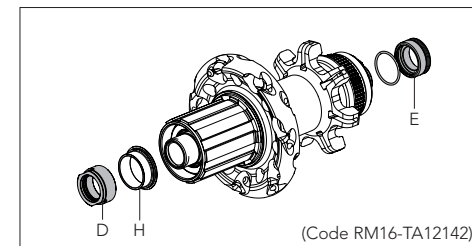

(Code RM16-TA12142)

QR Ø 10 mm - 135 mm

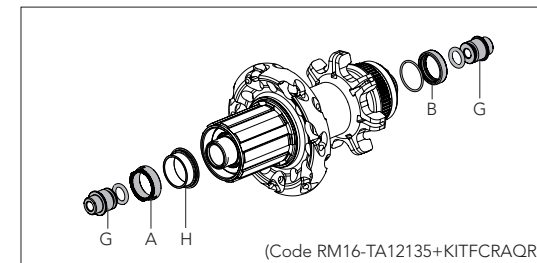


(Code RM16-TA12135+KITFCRAQR)

A	5,6 mm
B	4,25 mm
D	9,1 mm
E	7,75 mm
G	15,5 mm
H*	7,4 mm
H*: code R4-109 (NOT INCLUDED)	

A + B =	code RM16-TA12135
D + E =	code RM16-TA12142
G + G =	code KITFCRAQR

VALVE EXTENSIONS


Your wheels are supplied with valve extensions that correspond to depth of the rim as follows:

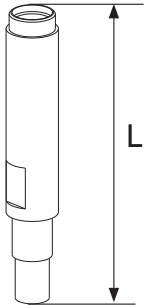PROFILE RIM	MALE VALVE ADAPTER (SUPPLIED)		
Verificate secondo la lunghezza della valvola (della camera d'aria o del tubolare) e l'altezza del profilo del cerchio, quale sia la prolunga adatta alle vostre esigenze Check what extension you need according to the length of the valve (inner tube or tubular tyre) and height of the rim profile	UT-WH130M	L = 35 mm	
	UT-WH140M	L = 65 mm	
	UT-WH150M	L = 90 mm	
	UT-HU150	L = 40 mm	
	UT-WH160M	L = 74 mm	

PROFILE RIM	FEMALE VALVE ADAPTER (OPTION)		
Verificate secondo la lunghezza della valvola (della camera d'aria o del tubolare) e l'altezza del profilo del cerchio, quale sia la prolunga adatta alle vostre esigenze Check what extension you need according to the length of the valve (inner tube or tubular tyre) and height of the rim profile	UT-WH130F	L = 37 mm	
	UT-WH140F	L = 67 mm	
	UT-WH150F	L = 92 mm	
	UT-WH160F	L = 80 mm	

USE AIR CHAMBERS (INNER TUBES) WITH A LONG VALVE (AT LEAST 35 mm).

FRAME PREPARATION / FRONT DERAILLEUR

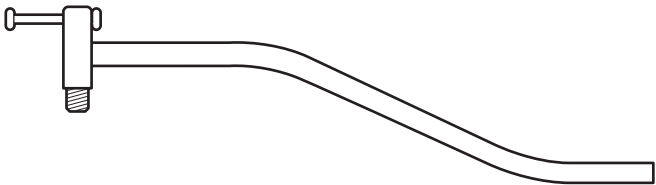


UT-VS030
Riscontro allineamento occhiello attacco cambio
Rear derailleur hanger alignment tool



UT-FD120
Dima per corretto posizionamento deragliatore (2 pz - per Z50 e Z52)
Front derailleur alignment tool (2 pcs - for Z50 and Z52)



BOTTOM BRACKET / CRANKSET

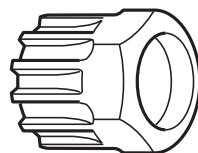


UT-BB080 (1 pz.) - **10-UT-BB080** (10 pz.):
Chiave per montaggio movimenti centrali CART e ghiera di chiusura pacchi pignoni
Cartridge bottom bracket and sprocket cassette- lock ring remover

UT-BB100

Utensile per movimenti a cartuccia Daytona/Centaur™, Veloce™ e Mirage™
Tool for Daytona/Centaur™, Veloce™ and Mirage™ cartridge bottom bracket

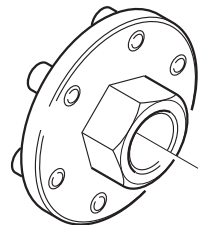


UT-FC090
Inserto per estrattore pedivella sinistra POWER TORQUE™
Insert for left POWER TORQUE™ crank extractor

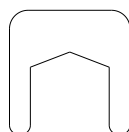


UT-FC095
Protezione per estrazione pedivella sx POWER TORQUE™
(5 pz)
shield f. left POWER TORQUE™ crank extractor insert (5 pcs)

CRANKSET


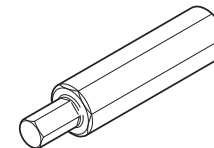


UT-BB110
Utensile per vite fissaggio guarnitura ULTRA-TORQUE™
Tool for ULTRA-TORQUE™ crankset fixing screw



UT-BB130
Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ lockring

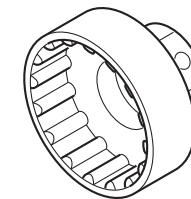


UT-BB240
Utensile per piantaggio calotte integrate OS-Fit™
Tool for OS-Fit™ crankset overboard cups

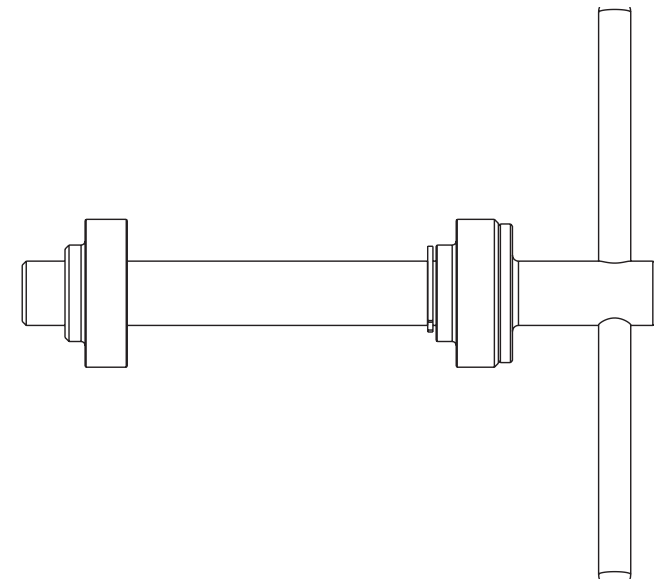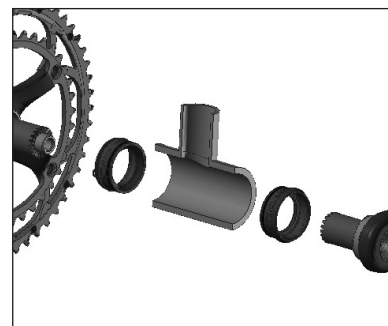



DISC BRAKES

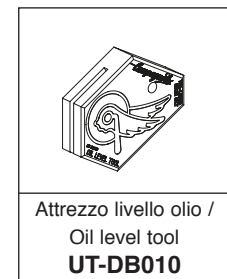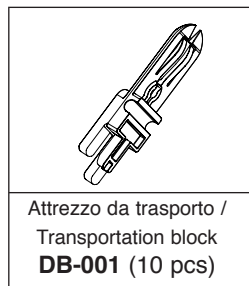

RIM BRAKES

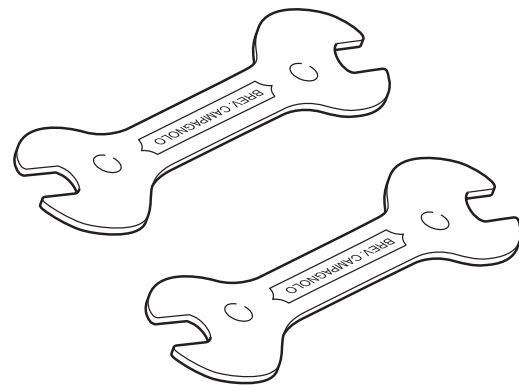


UT-HU050
Tiraraggi
Spoke wrench

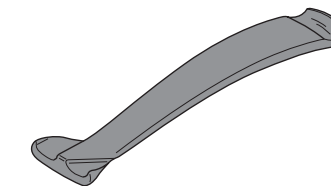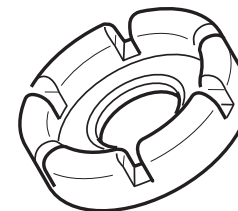


WHEELS

WHEELS

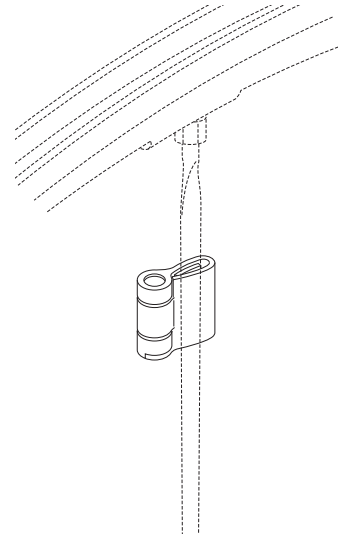

UT-WH080
Magnete velocità per raggi SHAMAL™
ULTRA™
SPD magnet for SHAMAL™ ULTRA™
spokes

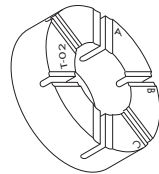

UT-WH010
Anello anti-rotazione raggi
Spoke antirotation ring

UT-WH090
Chiave tiraraggi BORA ULTRA 80
Spoke wrench BORA ULTRA 80




UT-WH020
Inserto nipplo attira-magnete per SHAMAL™ ULTRA / SHAMAL™ MILLE
Magnet-attracting nipple insert for SHAMAL™ ULTRA / SHAMAL™ MILLE

UT-WH035
Inserto nipplo attira-magnete per ZONDA™ 2012
Magnet-attracting nipple insert for ZONDA™ 2012

UT-WH160
Inserto nipplo attira-magnete per BORA ULTRA / BORA ULTRA TWO /
BORA ONE / BORA ONE DB / BORA WTO / BORA WTO DB
Magnet-attracting nipple insert for BORA ULTRA / BORA ULTRA
TWO / BORA ONE / BORA ONE DB / BORA WTO / BORA WTO DB

UT-WH110
Inserto nipplo attira-magnete per SHAMAL™ ULTRA DB
Magnet-attracting nipple insert for SHAMAL™ ULTRA DB

UT-WH070
Chiave tiraraggi
Spoke wrench




UT-WH270
Chiave tiraraggi per SHAMAL MILLE MY2017 (Service Center Only)
Spoke wrench for SHAMAL MILLE MY2017 (Service Center Only)

UT-WH280
Chiave tiraraggi per BORA ONE / BORA ULTRA / BORA WTO /
ZONDA (Nipplo sez. quadrata - Service Center Only)
Spoke wrench for BORA ONE / BORA ULTRA / BORA WTO / ZONDA
(Square section nipple - Service Center Only)




UT-WH050
Magnete guida-nipplo
Nipple guide magnet


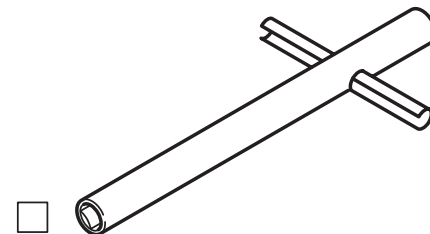


UT-HU060
Chiave per raggi ruote Bora™ (fino a gamma '02)
Bora™ wheel truing tool (till '02 range)


5-WH-SH002
Bussola riduzione sede valvola 2WF (5 pz)
Valve hole bushing for 2WF (5 pcs)



WH-BUU002
Bussola riduzione sede valvola BORA ULTRA 80 (5 pz)
Valve hole bushing for BORA ULTRA 80 (5 pcs)

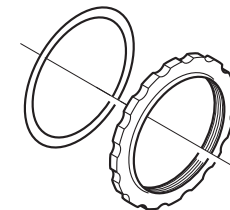


M1-101 (4 pcs.)
Ghiera AFS™
AFS™ lockring

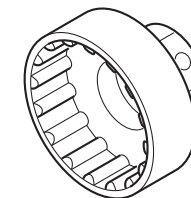


UT-BB130
Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ lockring


WHEELS / CHAIN

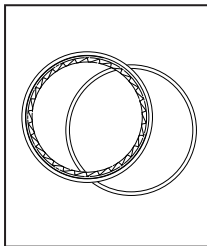


HB-BO031 (3 pcs)
Inserto a cremagliera - Road
Hub ratchet ring tool - Road
(SERVICE CENTER only)

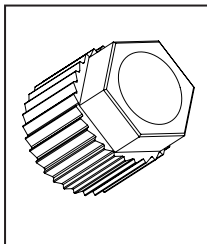


UT-HU140
Attrezzo per smontaggio cremagliera - Road
Hub ratchet ring tool - Road
(SERVICE CENTER only)

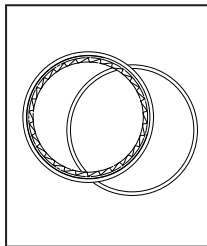

FH-FWB3307 (3 pcs)
Inserto a cremagliera - SHAMAL CARBON
Hub ratchet ring tool - SHAMAL CARBON
(SERVICE CENTER only)

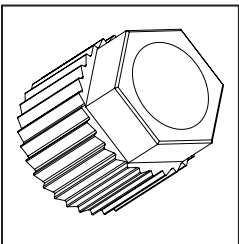


UT-HU141
Attrezzo per smontaggio cremagliera - SHAMAL CARBON
Hub ratchet ring tool - SHAMAL CARBON
(SERVICE CENTER only)

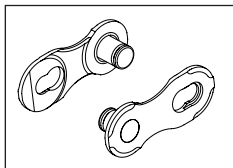

CN-SR701
C-Link™ per catene 13s (1 pz)
C-Link™ for 13s chains only (1 pcs)

CHAIN


UT-CN400
Utensile per *Ultra-Link™* (solo catene 12s / 13s)
Tool for *Ultra-Link™* (12s / 13s chains only)

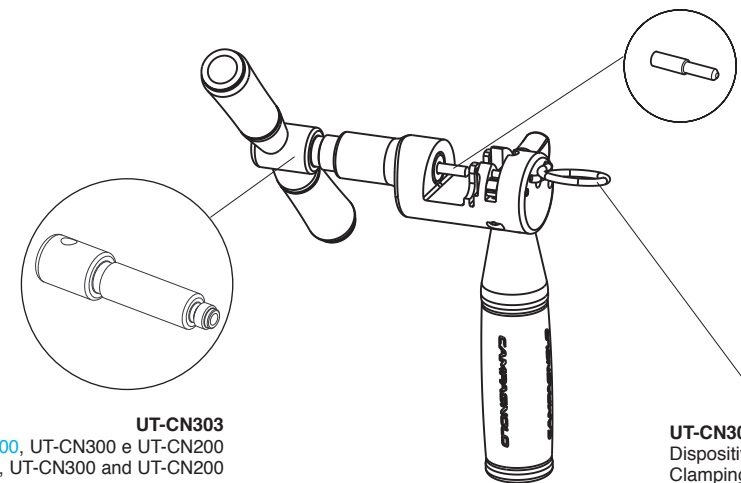


UT-CN301
Spintore per *UT-CN400*, UT-CN300 e UT-CN200
Pusher for *UT-CN400*, UT-CN300 and UT-CN200

UT-CN303
Perno centrale per *UT-CN400*, UT-CN300 e UT-CN200
Central axle for *UT-CN400*, UT-CN300 and UT-CN200

UT-CN302
Dispositivo di blocco per *UT-CN400* e UT-CN300
Clamping device for *UT-CN400* and UT-CN300

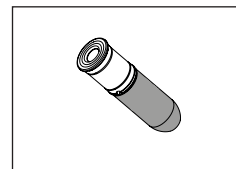

5-CN-SR700
Ultra-Link™ per catene 13s (5 pz)
Ultra-Link™ for 13s chains only (5 pcs)

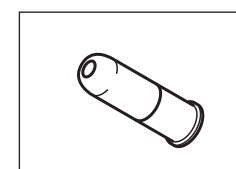


5-CN-SR600
Ultra-Link™ per catene 12s (5 pz)
Ultra-Link™ for 12s chains only (5 pcs)

CHAIN

UT-CN300

Utensile per **Ultra-Link™** (solo catene 11s / 12s)

Tool for **Ultra-Link™** (11s / 12s chains only)


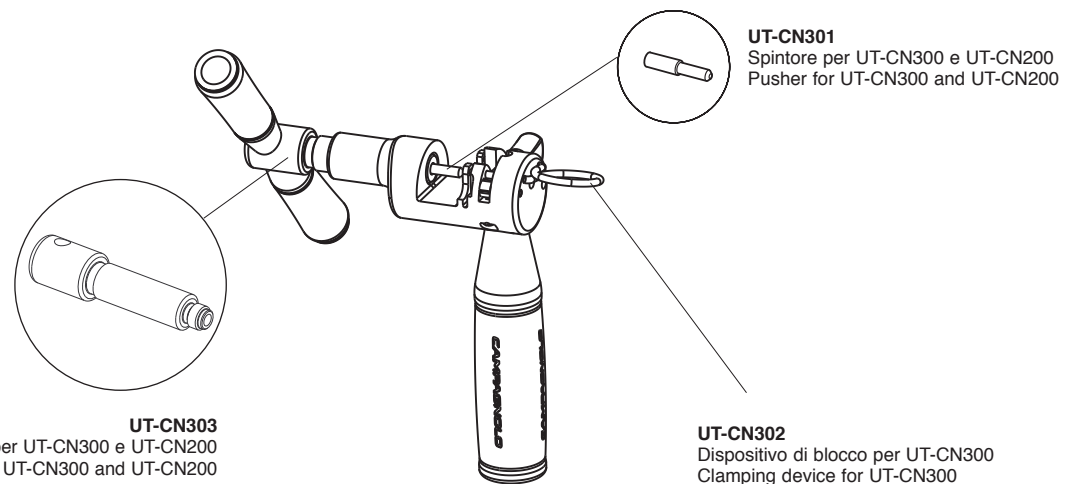


CHAIN

CAMPY™ UT-CN200


Utensile per **HD-Link™** (catene C10™ e C10™ Ultra Narrow™)

Tool for **HD-Link™** (C10™ and C10™ Ultra Narrow™ chains)

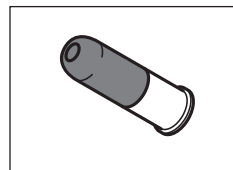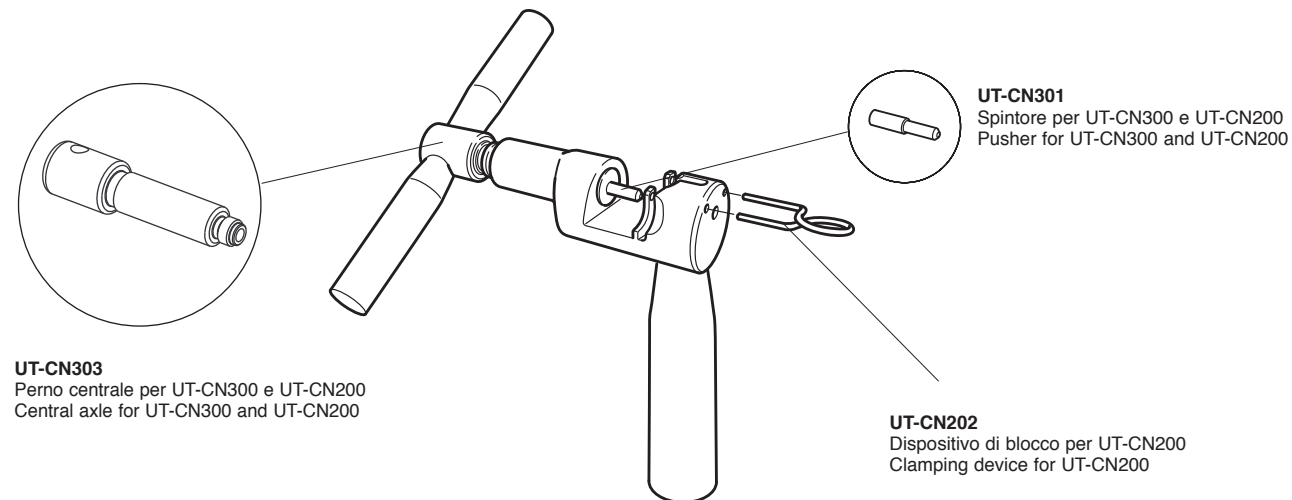


5-CN-RE500

Ultra-Link™ per catene 11s (5 pz)
Ultra-Link™ for 11s chains only (5 pcs)

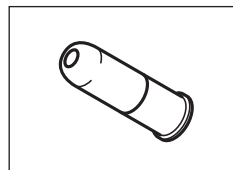


5-CN-SR600

Ultra-Link™ per catene 12s (5 pz)
Ultra-Link™ for 12s chains only (5 pcs)

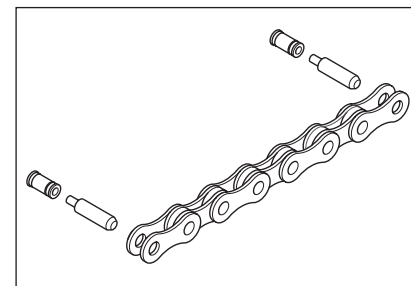


CN-RE400

HD-Link™ Ultra Narrow™ (5,9 mm) per catene C10™ Ultra Narrow™
HD-Link™ Ultra Narrow™ (5,9 mm) for C10™ Ultra Narrow™ chains

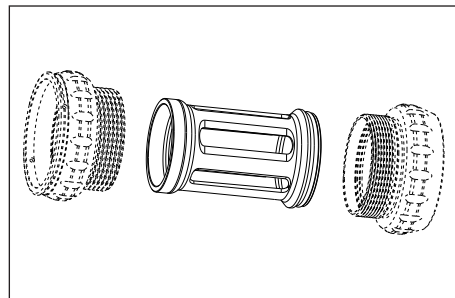


EPS-001
Cilindro guida-cavi
BB cable guide

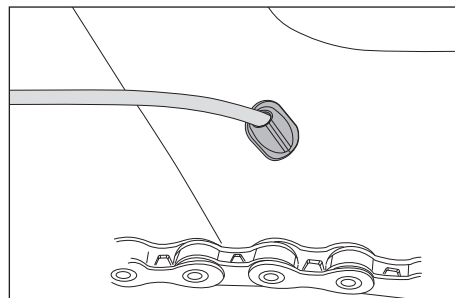


CG-CS001EPS
Gommino passacavi (20 pz.)
Grommet for cables (20 pcs.)

CG-CS002EPS
Gommino passacavi per Power Unit (10 pz.)
Grommet for Power Unit cables (20 pcs.)

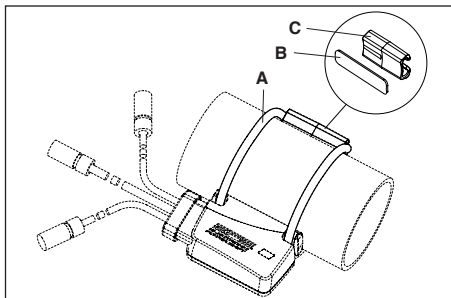


EPS-002
Accessori montaggio sistema di interfaccia (A+B+C)
Kit for interface assembly (A+B+C)

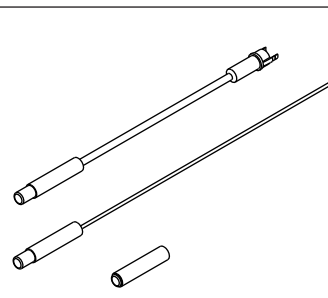


UT-CG010EPS
Kit magneti passacavi SR-RE
Cable run magnet kit SR-RE

UT-CG010ATEPS
Kit magneti passacavi AT
Cable run magnet kit AT

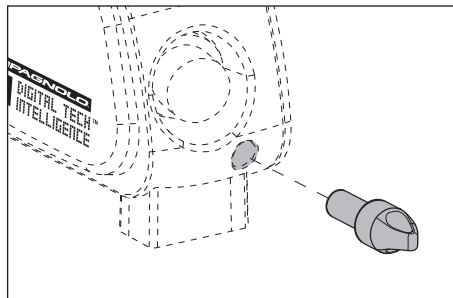

EPS-003
Magnete spegnimento sistema di potenza (5 pz.)
Switch-off magnet (5 pcs.)

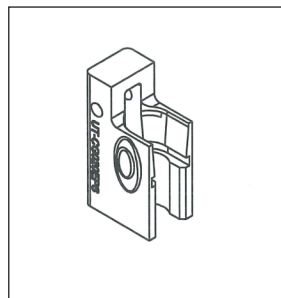


UT-CG020EPS
Attrezzo apri-connettori SR-RE
Connector disconnection tool SR-RE




UT-CG120ATEPS
Attrezzo apri-connettori AT
Connector disconnection tool AT


EPS V2 POWER UNIT

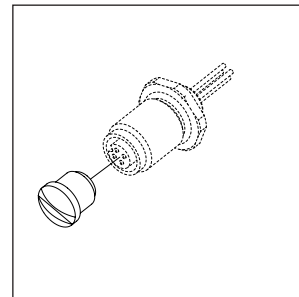


EPS-004
Tappo connettore carica batterie
PU EPS V2 (5 pz)
PU EPS V2 connector cup (inter-
nal mount) (5 pcs)

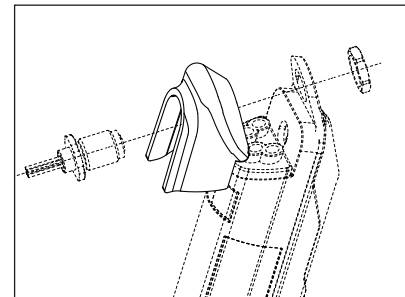


EPS-005
Cappuccio per installazione est. PU EPS V2
(5pz)
PU EPS V2 external mount connecor cap
(5pcs)

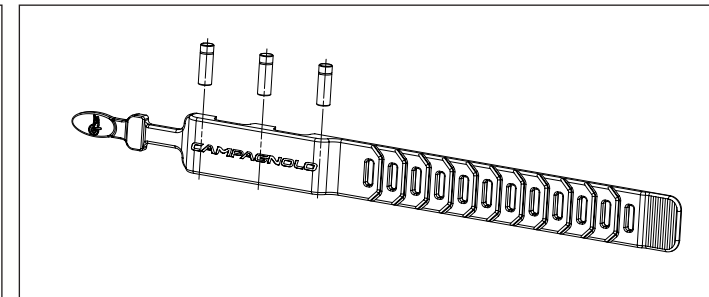


EPS-006
Fascia spegnimento magnetica
Magnetic power block strap

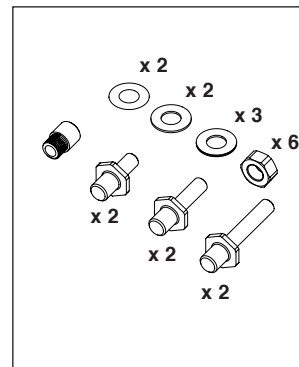


EPS-107
Kit viti Power Unit EPS V2 / V3
/ V4
EPS V2 / V3 / V4 Power Unit
screws kit

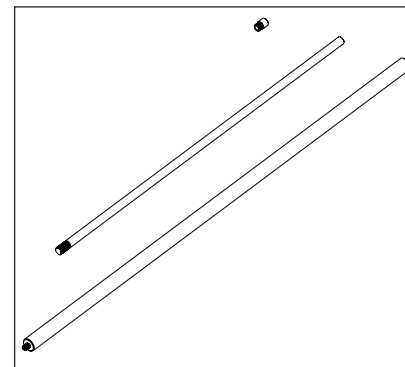


UT-PU010
Kit installazione interna PU EPS V2 /
V3 / V4
EPS V2 / V3 / V4 PU internal installation
tool

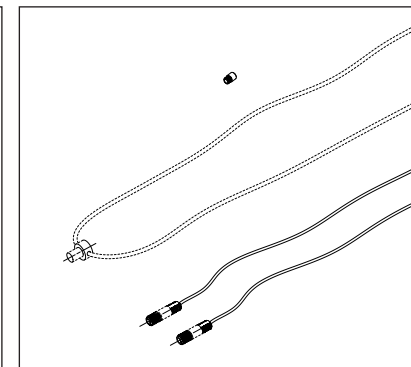

UT-PU030
Kit installazione tubo obliquo
PU EPS V2
EPS V2 PU down-tube
installation tool

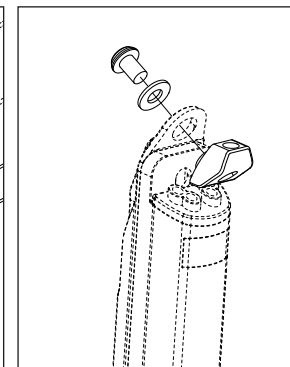

UT-PU020
Adattatore per installazione
rovesciata PU EPS V2
EPS V2 PU internal upside-
down installation adapter

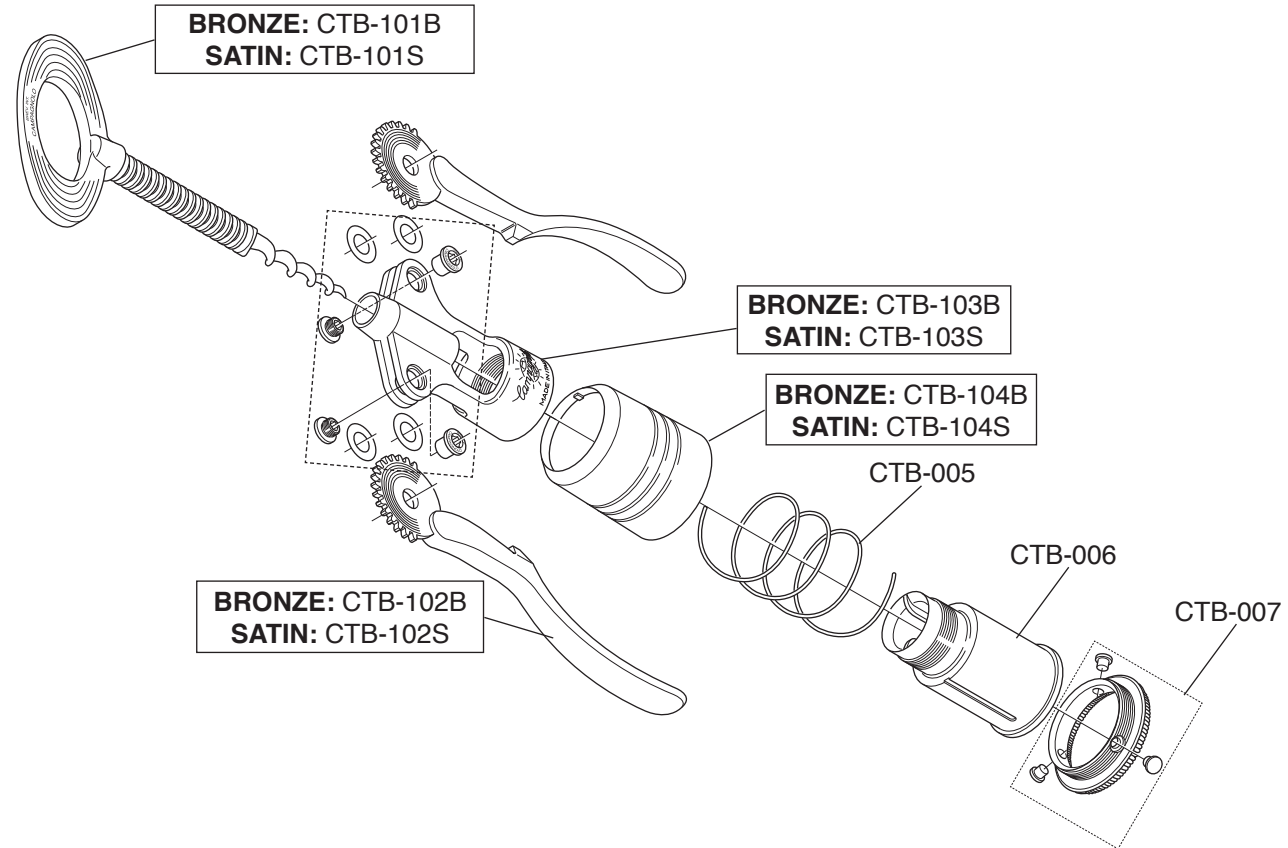This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

CAMPAGNOLO S.R.L.

Via della Chimica, 4
36100 Vicenza - ITALY
Tel. +39-0444-225500
Fax: +39-0444-225400
E-mail: sales@campagnolo.com

FRANCE

CAMPAGNOLO FRANCE SAS
ZA du Tissot - 42530 St GENEST -
LERPT
Tel. +33-477-556305
Fax: +33-477-556345
E-mail: campagnolo@campagnolo.fr

GERMANY

CAMPAGNOLO DEUTSCHLAND
GMBH
Alte Garten 62
51371 LEVERKUSEN
Tel. +49-214-206953-0
Fax: +49-214-206953-15
E-mail: campagnolo@campagnolo.de

JAPAN

CAMPAGNOLO JAPAN LTD
65 Yoshida-cho, Naka-ku,
YOKOHAMA
231-0041
Tel. +81-45-264-2780
Fax: +81-45-241-8030
E-mail: info@campagnolo.jp

SPAIN

CAMPAGNOLO IBERICA S.L.
Avda. de Los Huetos 46. pab. 3-2ª
fila
01010 VITORIA
Tel. +34-945-217195
Fax: +34-945-217198
E-mail: campagnolo@campagnolo.es

TAIWAN

PRIMATEK LTD
No. 4, Gongyequ 10th Rd., Nantue
Dist.,
TAICHUNG CITY 408 - TAIWAN
(R.O.C.)
Tel. +886-4-23506831
Fax: +886-4-23596764

UNITED STATES

CAMPAGNOLO NORTH AMERICA
INC.
5431 Avenida Encinas, Suite C -
CARLSBAD CA 92008 - U.S.A.
Tel. +1-760-9310106
Fax: +1-760-9310991
E-mail: info@campagnolona.com

BENELUX

INTERNATIONAL
CYCLE CONNECTION I.C.C.
Communicatielaan 5A
4538 BV TERNEUZEN
NEDERLANDS
Tel. + 31 (0)115 649321
Fax: + 31 (0)115 649110
E-mail: info@i-c-c.nl
Web: www.i-c-c.nl