


RIM

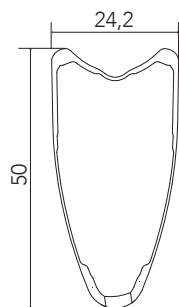

FRONT RIM

REAR RIM

VALVE HOLE

VALVE HOLE BUSHING

VALVE EXTENSION

DIAMETER

BRAKE PADS

WH-101BO50 (bright) / WH-101BO50DK (dark)

WH-102BO50 (bright) / WH-102BO50DK (dark)

6,5 mm

WH-BUU002 (5 pcs.)



UT-HU150

634 mm

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE

REAR RH SPOKE

NIPPLES

NIPPLE INSERT

NIPPLE MAGNET

SPOKE SPANNER

WH-016BOT50

WH-019BOT50

WH-015BO80

UT-WH160

UT-WH050

UT-WH090

4 spokes + 4 nipples

4 spokes + 4 nipples

black - 10 pieces

magnet-attractor for nipple

nipple-guide

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001

5 pcs - to be used only with 9/10s sprockets




(please note that every HG11 rear wheel/FW body package contains the spacer)

! WARNING!

Because of the high temperatures reached when braking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

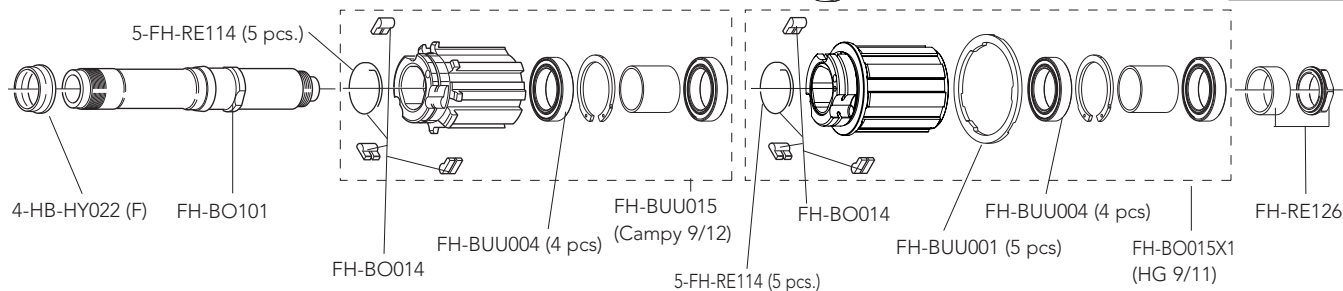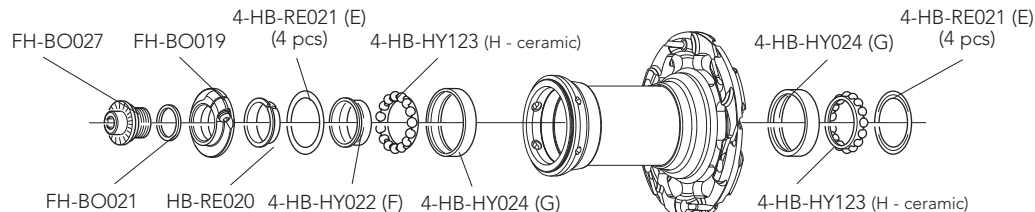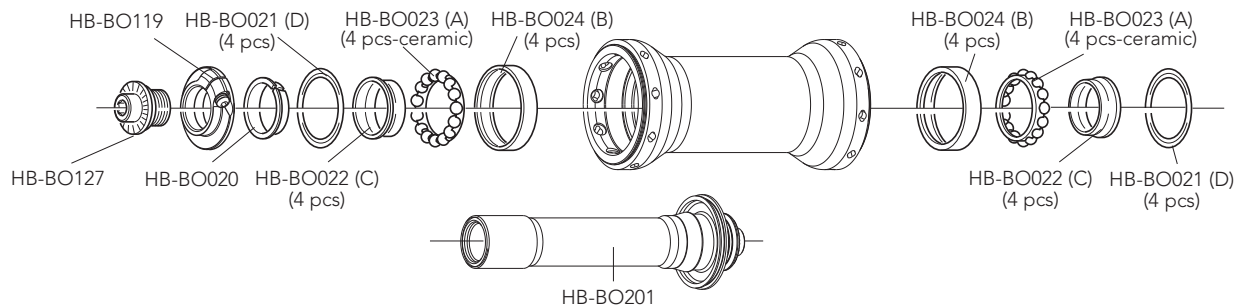


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

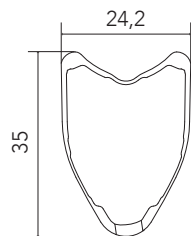

FRONT RIM	WH-201BO35 (bright) - WH-201BO35DK (dark)
REAR RIM	WH-202BO35 (bright) - WH-202BO35DK (dark)
VALVE HOLE	6,5 mm
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER	634 mm
BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES


Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

WARNING!

Because of the high temperatures reached when braking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.


A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

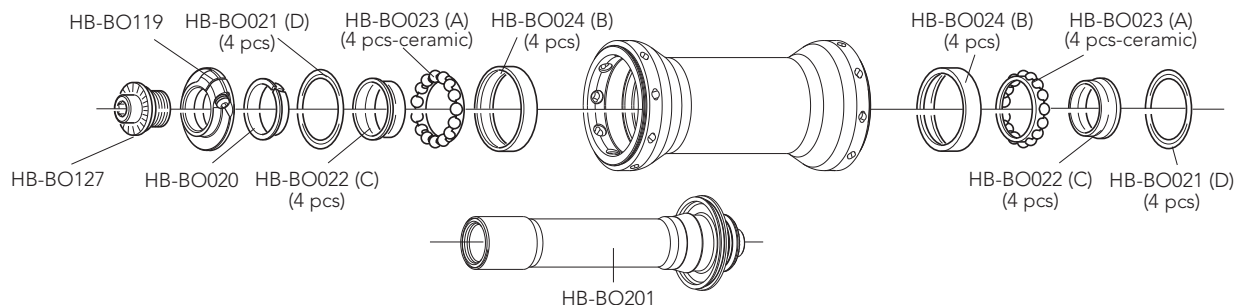


HB-BO100 CULT™ KIT

front

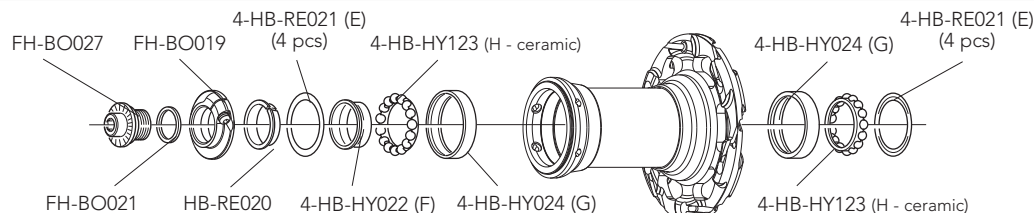2 x A, 2 x B,
2 x C, 2 x D


HB-HY100 CULT™ KIT

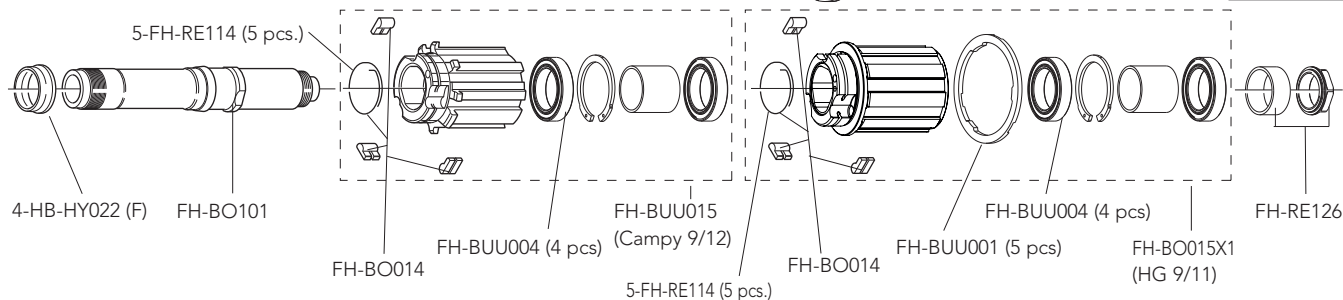
2 x E, 2 x F,
2 x G, 2 x H


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

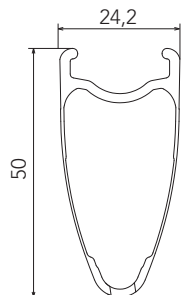

FRONT RIM	WH-103BO50 (bright) / WH-103BO50DK (dark)
REAR RIM	WH-104BO50 (bright) / WH-104BO50DK (dark)
VALVE HOLE	6,5 mm
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
VALVE EXTENSION	UT-HU150
DIAMETER	700C (622 x 17C)
BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

HB-BO119 HB-BO021 (D) (4 pcs) HB-BO023 (A) (4 pcs-ceramic) HB-BO024 (B) (4 pcs) HB-BO022 (C) (4 pcs) HB-BO021 (D) (4 pcs) HB-BO023 (A) (4 pcs-ceramic) HB-BO024 (B) (4 pcs) HB-BO022 (C) (4 pcs) HB-BO021 (D) (4 pcs) HB-BO127 HB-BO020

HB-BO201


**HB-BO100
CULT™ KIT**
front
2 x A, 2 x B,
2 x C, 2 x D

FH-BO027 FH-BO019 4-HB-RE021 (E) (4 pcs) 4-HB-HY123 (H - ceramic) 4-HB-HY024 (G) (4 pcs) 4-HB-HY123 (H - ceramic) 4-HB-HY022 (F) 4-HB-HY024 (G) HB-RE020 FH-BO021 5-FH-RE114 (5 pcs.) FH-BO101 4-HB-HY022 (F) FH-BO014 FH-BUU015 (Campy 9/12) FH-BUU004 (4 pcs) FH-BUU001 (5 pcs) FH-BUU004 (4 pcs) FH-BO15X1 (HG 9/11) FH-RE126 FH-BO014

**HB-HY100
CULT™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

RIM

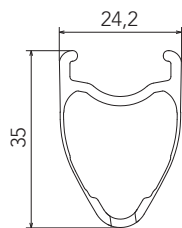

FRONT RIM	WH-103BO35 (bright) - WH-103BO35DK (dark)
REAR RIM	WH-104BO35 (bright) - WH-104BO35DK (dark)
VALVE HOLE	6,5 mm
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER	700C (622 x 17C)
BRAKE PADS	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES

FRONT / REAR LH SPOKE	WH-020BOC35	4 spokes + 4 nipples
REAR RH SPOKE	WH-021BOC35	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES


Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

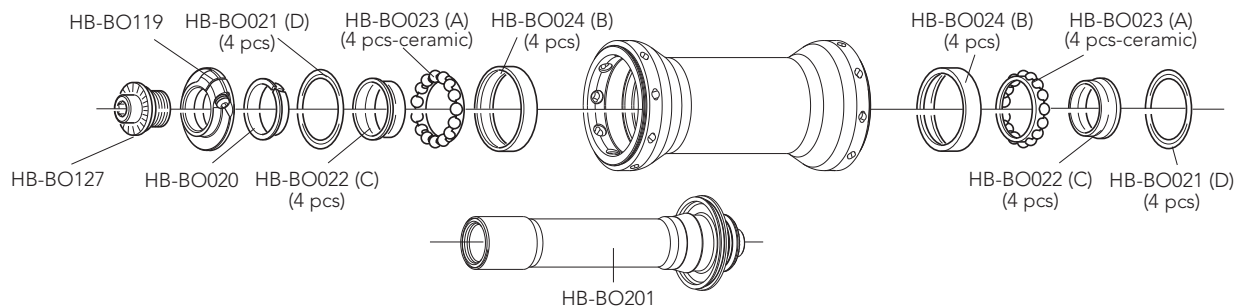


HB-BO100 CULT™ KIT

front

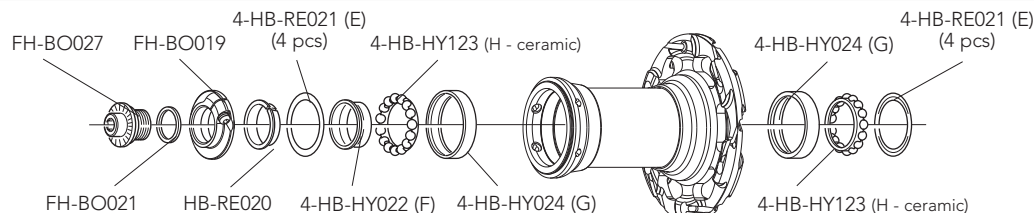2 x A, 2 x B,
2 x C, 2 x D


HB-HY100 CULT™ KIT

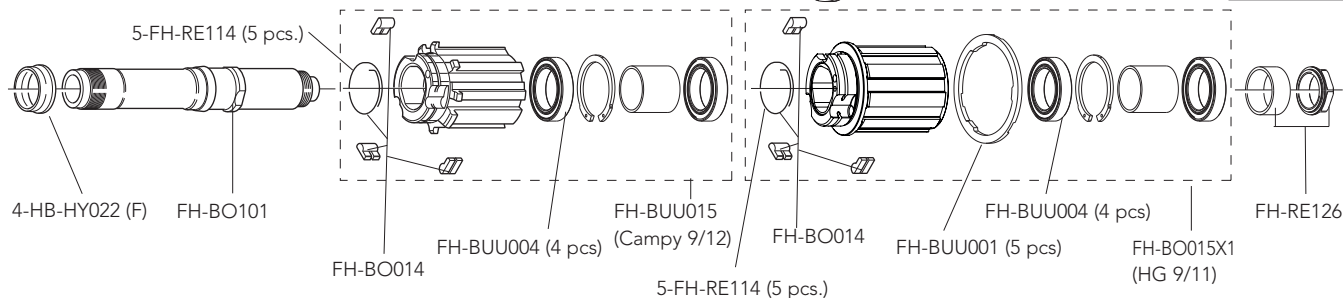
2 x E, 2 x F,
2 x G, 2 x H


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

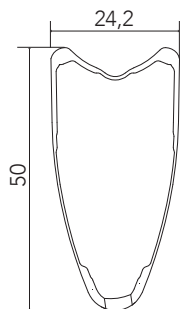

VALVE HOLE

6,5 mm

VALVE EXTENSION

UT-HU150

VALVE HOLE BUSHING

WH-BUU002



DIAMETER

634 mm

BRAKE PADS

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE

WH-016BOT50

4 spokes + 4 nipples

REAR RH SPOKE

WH-019BOT50

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)






WARNING!

Because of the high temperatures reached when braking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

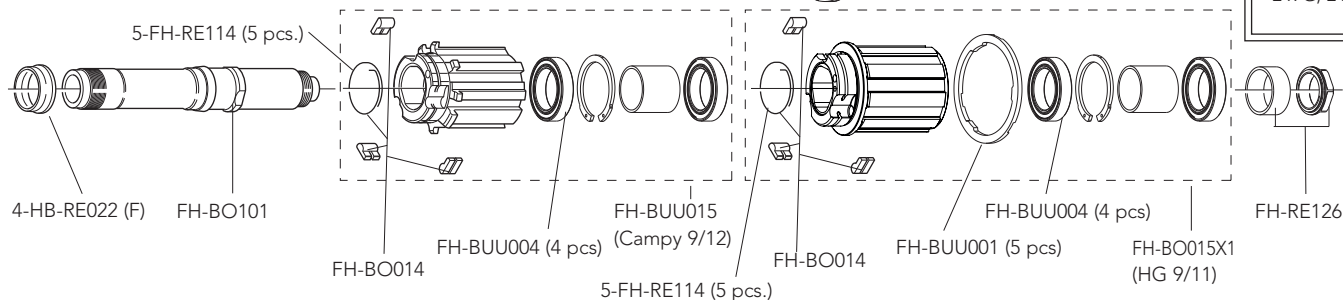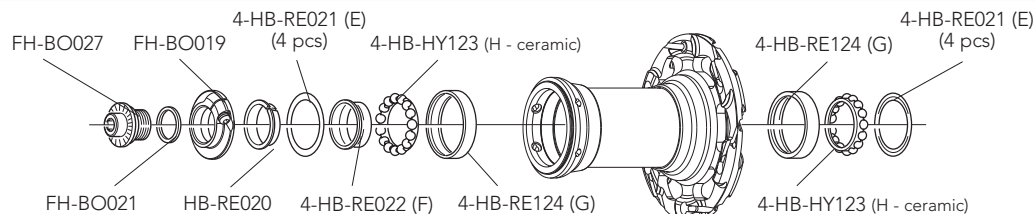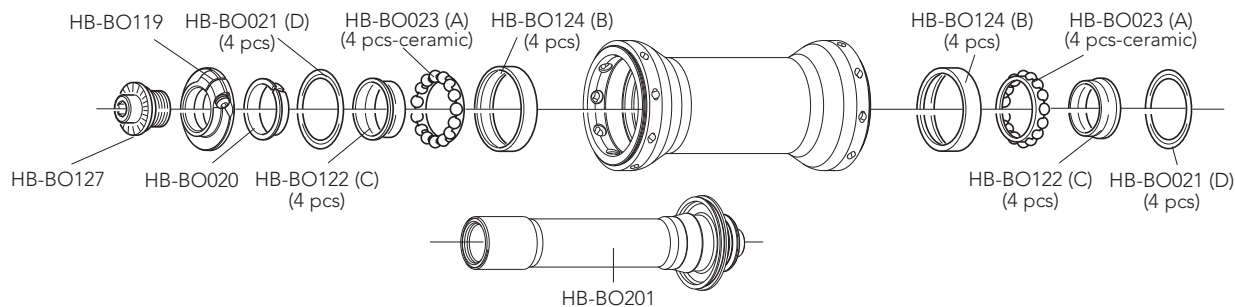


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

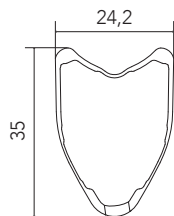

VALVE HOLE

VALVE HOLE BUSHING

DIAMETER

BRAKE PADS

6,5 mm

WH-BUU002



634 mm

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE

WH-020BOC35

4 spokes + 4 nipples

REAR RH SPOKE

WH-021BOC35

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)






WARNING!

Because of the high temperatures reached when braking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

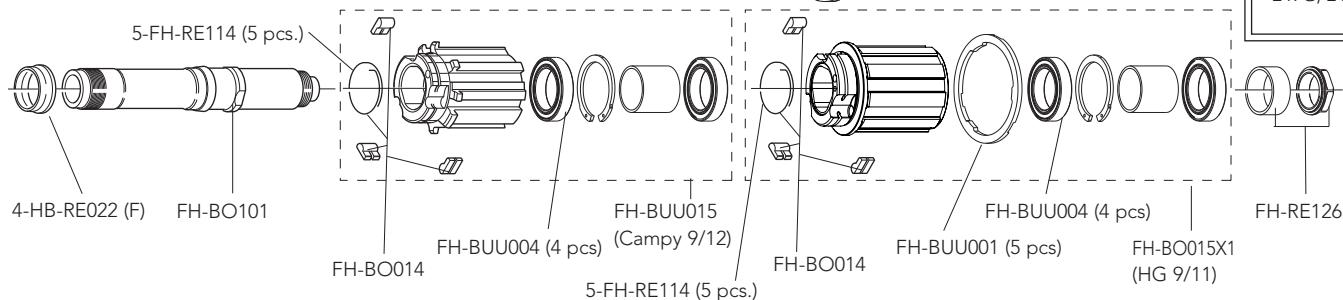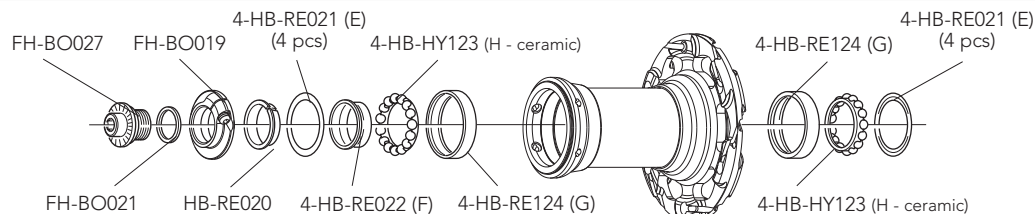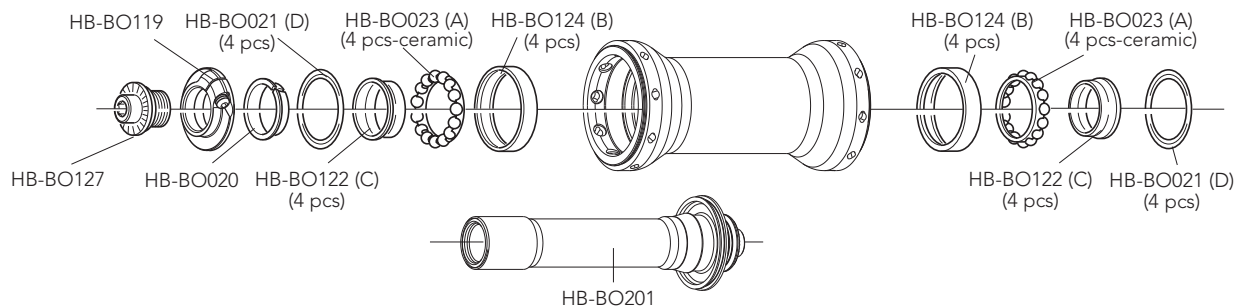


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

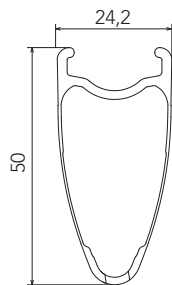

VALVE HOLE

6,5 mm

VALVE EXTENSION

UT-HU150

VALVE HOLE BUSHING

WH-BUU002 

DIAMETER

700C (622 x 17C)

BRAKE SHOES

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE

WH-016BOT50

4 spokes + 4 nipples

REAR RH SPOKE

WH-019BOT50

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches


ACCESSORIES

Spacer for HG11 FW body


FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

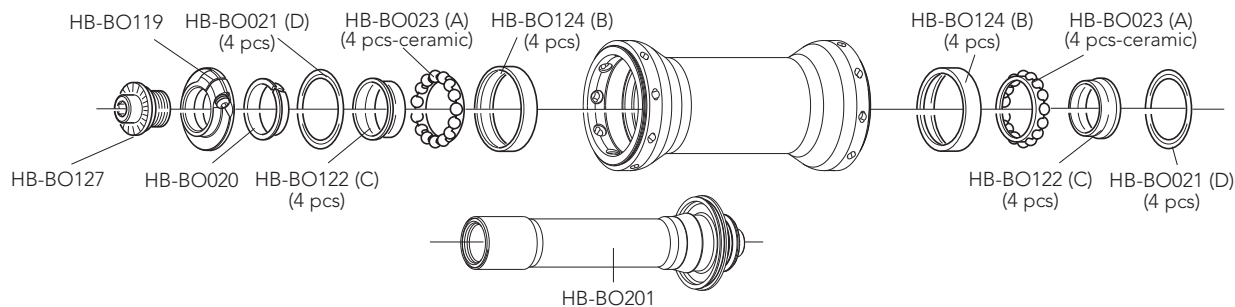

**HB-SH200
USB™ KIT**
front
2 x A, 2 x B,
2 x C, 2 x D

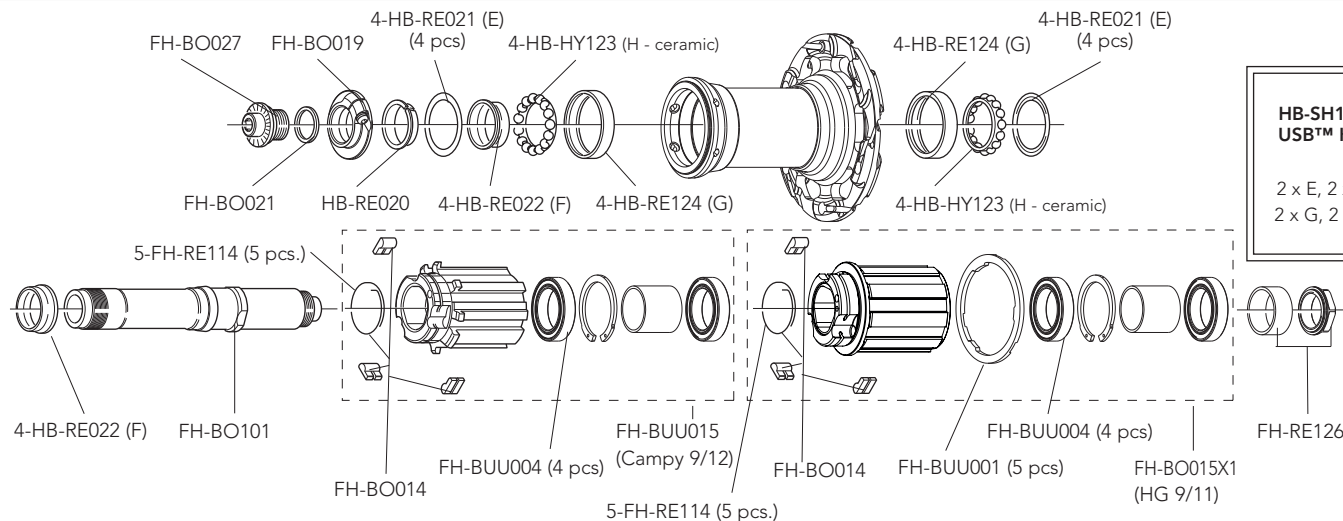


**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

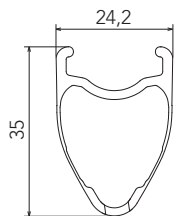

VALVE HOLE

6,5 mm

VALVE HOLE BUSHING

WH-BUU002 

DIAMETER

700C (622 x 17C)

BRAKE SHOES

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH SPOKE

WH-020BOC35

4 spokes + 4 nipples

REAR RH SPOKE

WH-021BOC35

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches


ACCESSORIES

Spacer for HG11 FW body


FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

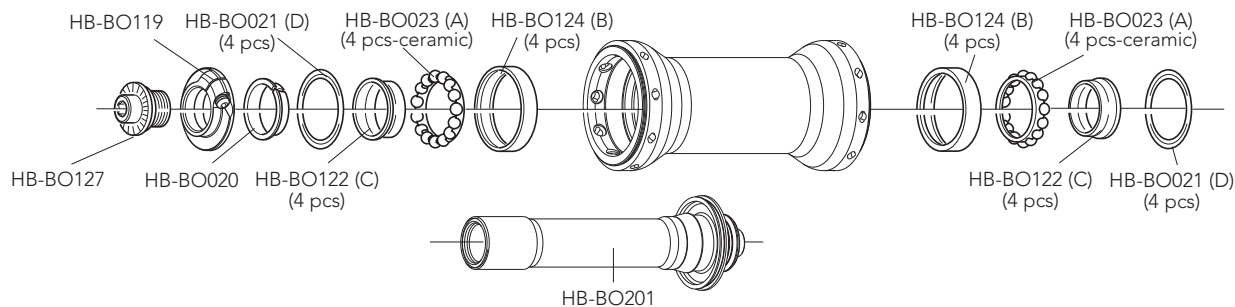

**HB-SH200
USB™ KIT**
front
2 x A, 2 x B,
2 x C, 2 x D

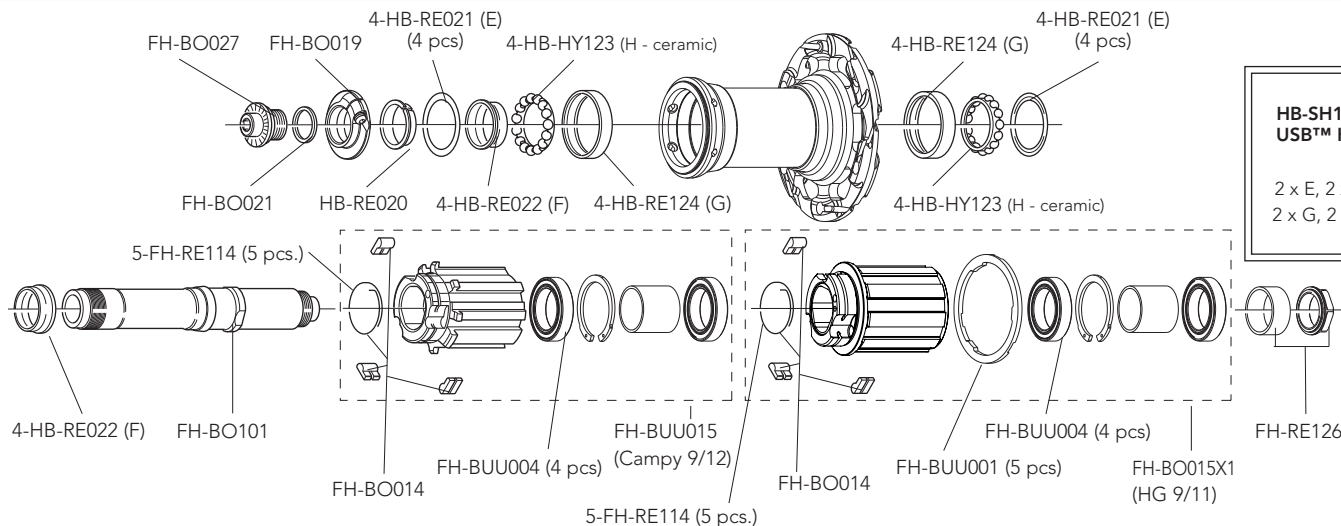


**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

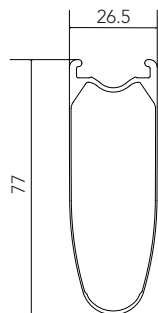

VALVE HOLE

6,5 mm

VALVE EXTENSION

UT-WH140M (male extension)

2-WAY FIT™ VALVE

WH-SH101

VALVE HOLE BUSHING

WH-BUU002 (5 pcs.)



DIAMETER

700C (622 x 19C)

BRAKE PADS

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -
BR-BO500X1 (for brakes with screw fixing)

SPOKES

COMPLETE FRONT SPOKES

[WH-01BWTO77](#)

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050


nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

HUBS

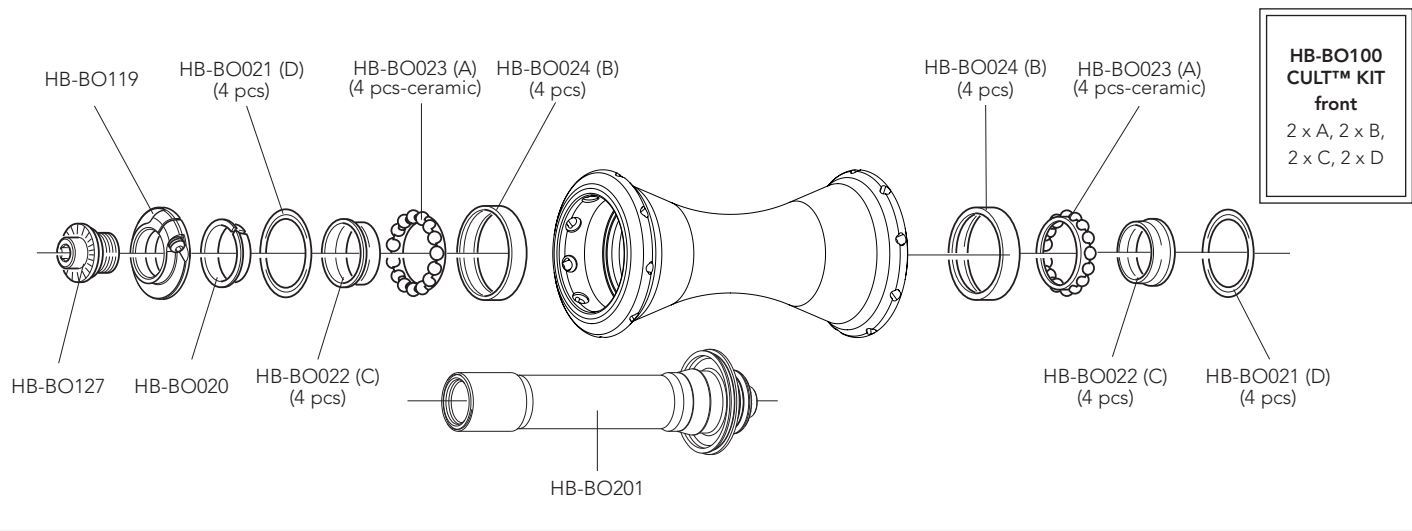


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

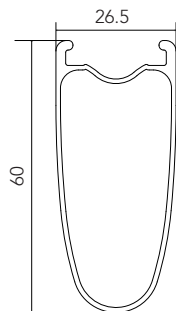

FRONT RIM

REAR RIM

VALVE EXTENSION

2-WAY FIT™ VALVE

VALVE HOLE

VALVE HOLE BUSHING

DIAMETER

BRAKE PADS

WH-03BWTO60 (bright) - WH-04BWTO60 (dark)

WH-05BWTO60 (bright) - WH-06BWTO60 (dark)

UT-WH140M (male extension)

VA-2WF44

6,5 mm

WH-BUU002 (5 pcs.)



700C (622 x 19C)

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -

BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH

WH-01BWTO60

4 spokes + 4 nipples

REAR RH

WH-02BWTO60

4 spokes + 4 nipples

NIPPLES

WH-015B080

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES


Spacer for HG11 FW body

FH-BUU001


5 pcs - to be used only with 9/10s sprockets

(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

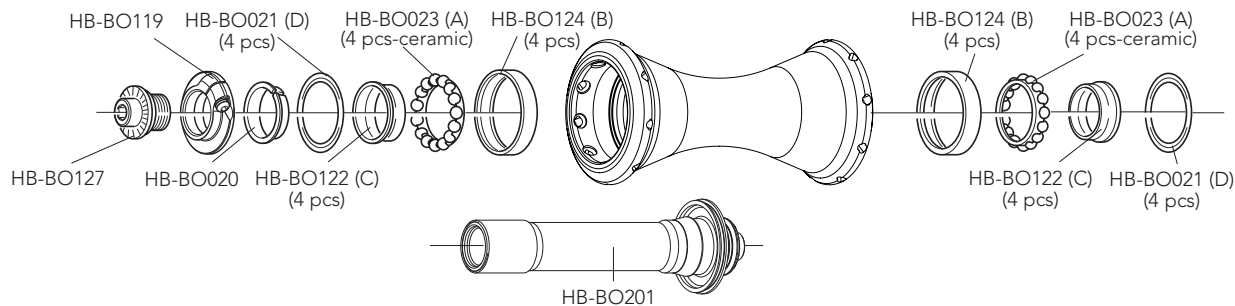

**HB-SH200
USB™ KIT
front**
2 x A, 2 x B,
2 x C, 2 x D

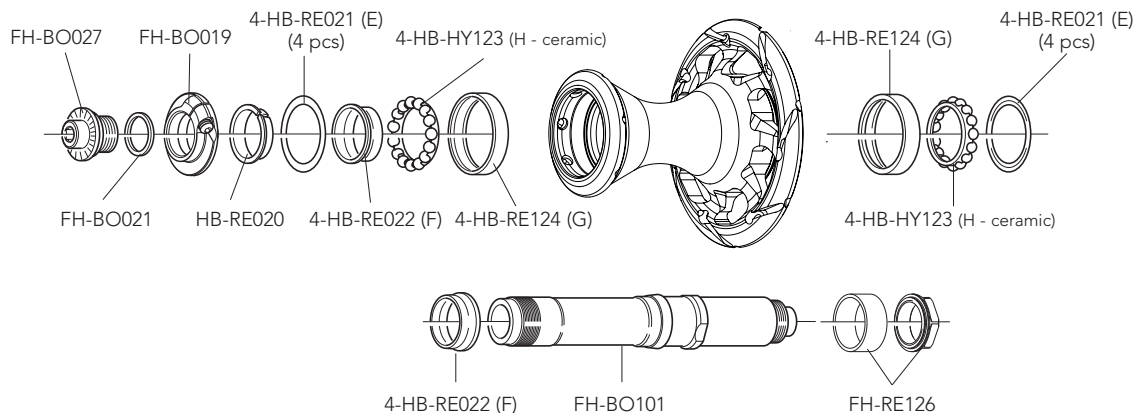

**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR


front + rear

Complete FW body / Corpetti RL completi

FH-BUU015 (Campagnolo 9/12) - **FH-BO015X1** (HG 9/11) - **FH-BU016XDR** (XDR)

See exploded view pag. 138

RIM

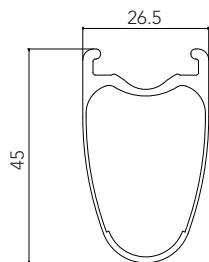

FRONT RIM

REAR RIM

VALVE EXTENSION

2-WAY FIT™ VALVE

VALVE HOLE

VALVE HOLE BUSHING

DIAMETER

BRAKE PADS

WH-03BWTO45 (bright) - WH-05BWTO45 (dark)

WH-04BWTO45 (bright) - WH-06BWTO45 (dark)

UT-WH130M (male extension)

WH-SH101

6,5 mm

WH-BUU002 (5 pcs.)



700C (622 x 19C)

for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) -

BR-BO500X1 (for brakes with screw fixing)

SPOKES

FRONT / REAR LH

WH-01BWTO45

4 spokes + 4 nipples

REAR RH

WH-02BWTO45

4 spokes + 4 nipples

NIPPLES

WH-015B080

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES


Spacer for HG11 FW body

FH-BUU001


5 pcs - to be used only with 9/10s sprockets

(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

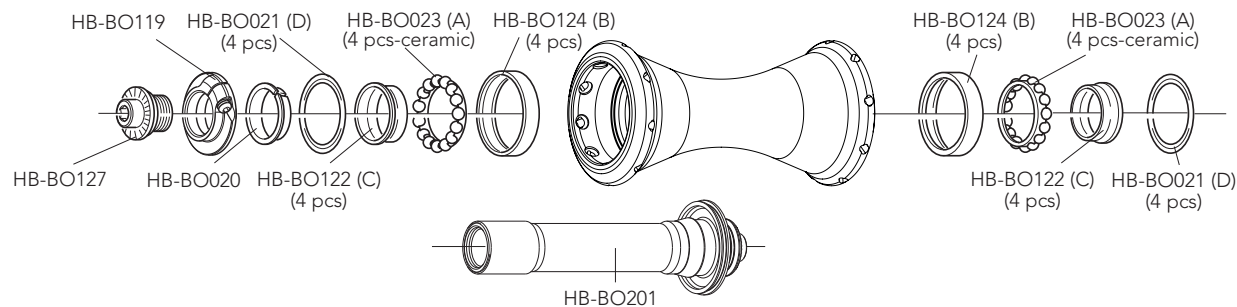

**HB-SH200
USB™ KIT
front**
2 x A, 2 x B,
2 x C, 2 x D

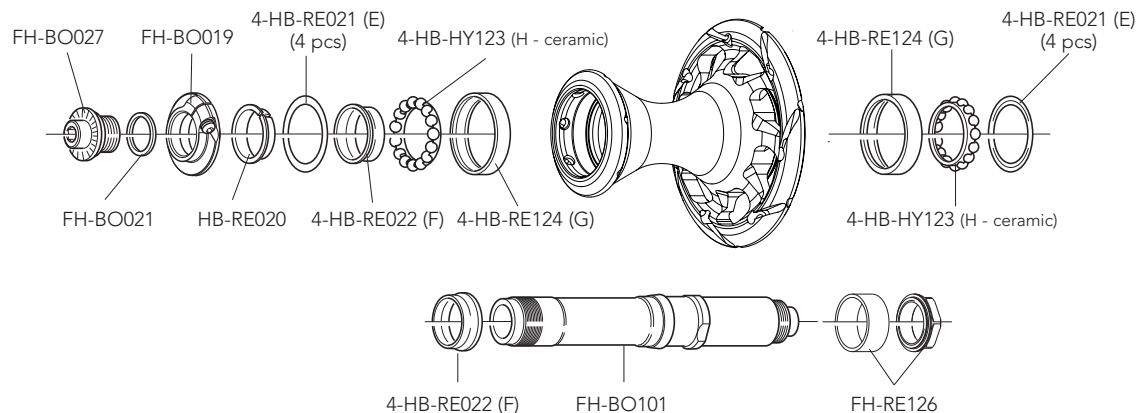

**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR


front + rear

Complete FW body / Corpetti RL completi

FH-BUU015 (Campagnolo 9/12) - **FH-BO015X1** (HG 9/11) - **FH-BU016XDR** (XDR)

See exploded view pag. 138

RIM

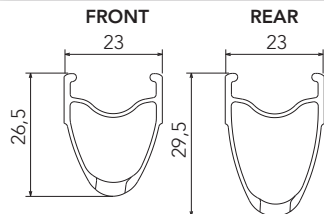

FRONT RIM
REAR RIM
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

WH-103SHM (**no labels**)
WH-104SHM (**no labels**)
LAB-SHMC17 (front+rear)

6,5 mm
622 X 17C

for rims with Plasma Electrolytic Oxidation treatment: BR-PEO5001 (for brakes with retention spring fixing) - BR-PEO500X1 (for brakes with screw fixing)

SPOKES

FRONT KIT

KIT-23SHB

16 front spokes

REAR KIT

KIT-34SHB

14 front/rear right spokes + 7 rear left spokes

COMPLETE FRONT SPOKE

WH-105SHM

spoke + nipple

COMPLETE REAR RIGHT SPOKE

WH-008SHM

spoke + nipple

COMPLETE REAR LEFT SPOKE

WH-007SHM

spoke + nipple

NIPPLES

WH-015SHM

10 pieces

SPOKE RING

UT-WH010

anti-rotation spokes

NIPPLE INSERT

UT-WH020

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH270

spoke wrench (**SERVICE CENTER Only**)


ACCESSORIES

Spacer for HG11 FW body


FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)


HUBS

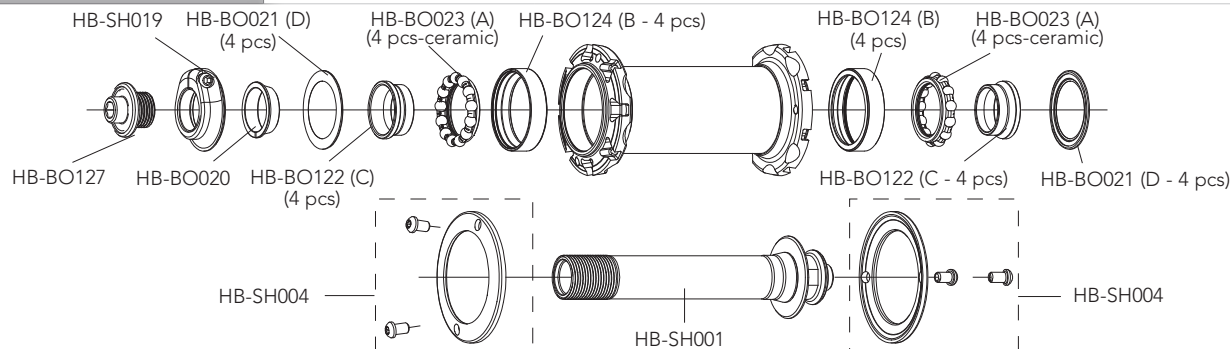

**HB-SH200
USB™ KIT
front**
2 x A, 2 x B,
2 x C, 2 x D

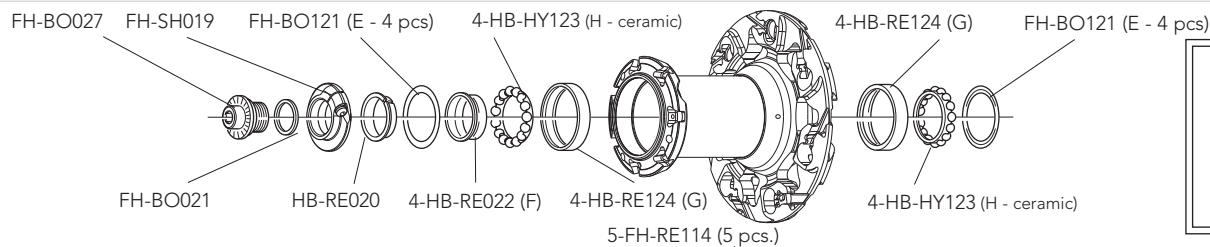

**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

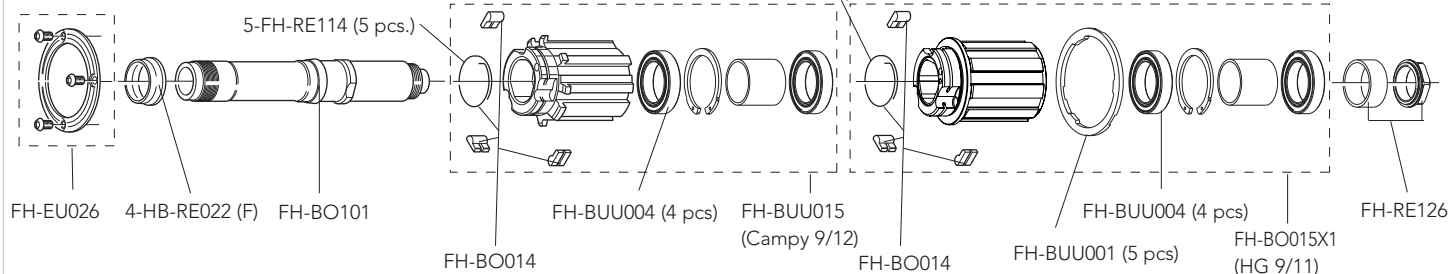


QUICK-RELEASES

QR13-80FR

front + rear

RIM

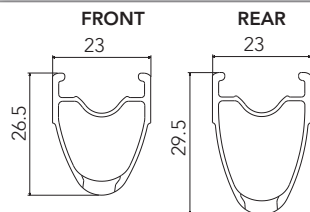

FRONT RIM

REAR RIM

LABEL KIT

VALVE HOLE

2-WAY FIT™ VALVE

VALVE HOLE BUSHING

DIAMETER

BRAKE PADS

WH-313SHB (**no labels**)

WH-314SHB (**no labels**)

LAB-SH2B17 (front+rear)

7,5 mm

WH-SH101

5-WH-SH002 (for valve seat reduction - 5 pcs) 

634 mm

see "brake pads compatibility table" on www.campagnolo.com

SPOKES

FRONT KIT

KIT-23SHB

16 front/rear right spokes

REAR KIT

KIT-34SHB

14 front/rear right spokes + 7 rear left spokes

COMPLETE FRONT SPOKE

WH-205SHB

spoke + nipple

COMPLETE REAR LEFT SPOKE

WH-207SHB

spoke + nipple

COMPLETE REAR RIGHT SPOKE

WH-208SHB

spoke + nipple

NIPPLES

WH-115SH

10 pieces

SPOKE RING

UT-WH010

anti-rotation spokes

NIPPLE INSERT

UT-WH020

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH070

spoke wrenches

ACCESSORIES


Spacer for HG11 FW body

FH-BUU001


5 pcs - to be used only with 9/10s sprockets

(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

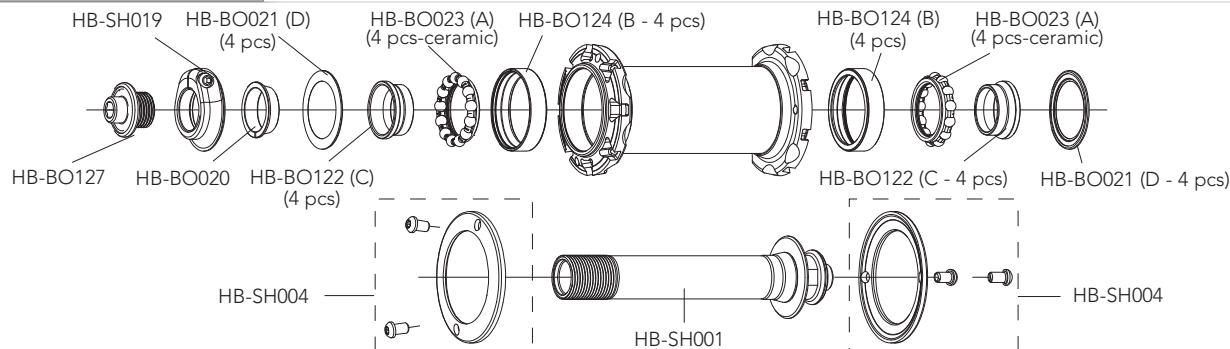

**HB-SH200
USB™ KIT
front**
2 x A, 2 x B,
2 x C, 2 x D

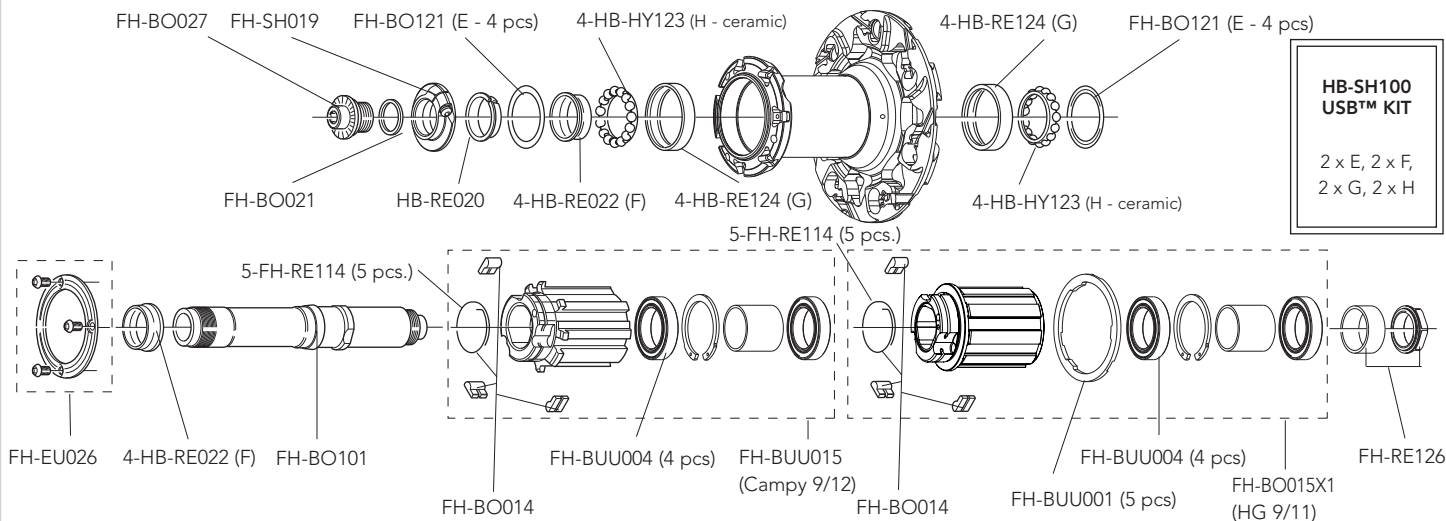


**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR13-80FR

front + rear

RIM

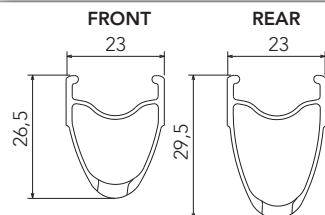

FRONT RIM
REAR RIM
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

WH-403SHB (**no labels**)
WH-404SHB (**no labels**)
LAB-SHCB17
6,5 mm
622 X 17C
see "brake pads compatibility table" on www.campagnolo.com


SPOKES

FRONT KIT	KIT-23SHB	16 front/rear right spokes
REAR KIT	KIT-34SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT	WH-205SHB	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-207SHB	spoke + nipple
COMPLETE REAR RIGHT SPOKE	WH-208SHB	spoke + nipple
NIPPLES	WH-115SH	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attracting nipple insert
NIPPLE MAGNET	UT-WH050	nipple attracting magnet
SPOKE SPANNER	UT-WH070	spoke wrenches


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--


HUBS

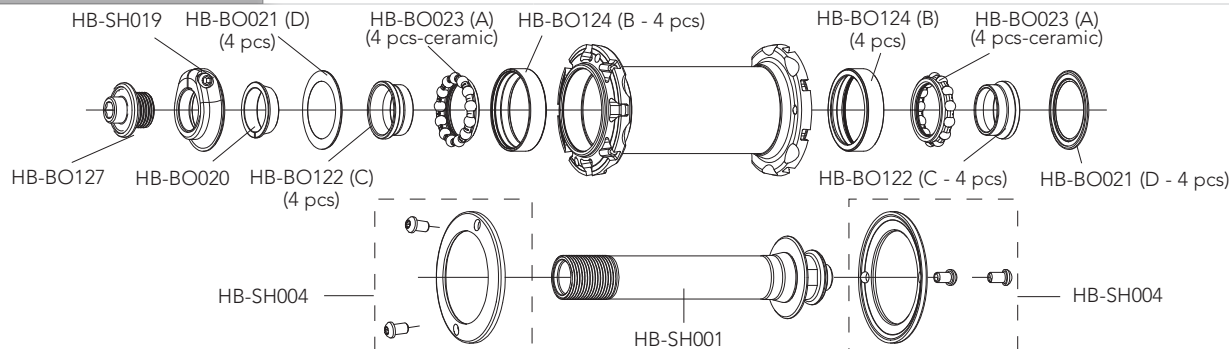

**HB-SH200
USB™ KIT**
front
2 x A, 2 x B,
2 x C, 2 x D

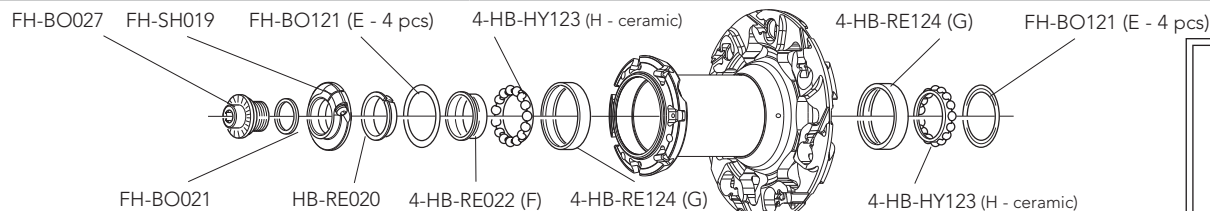

**HB-SH100
USB™ KIT**
2 x E, 2 x F,
2 x G, 2 x H

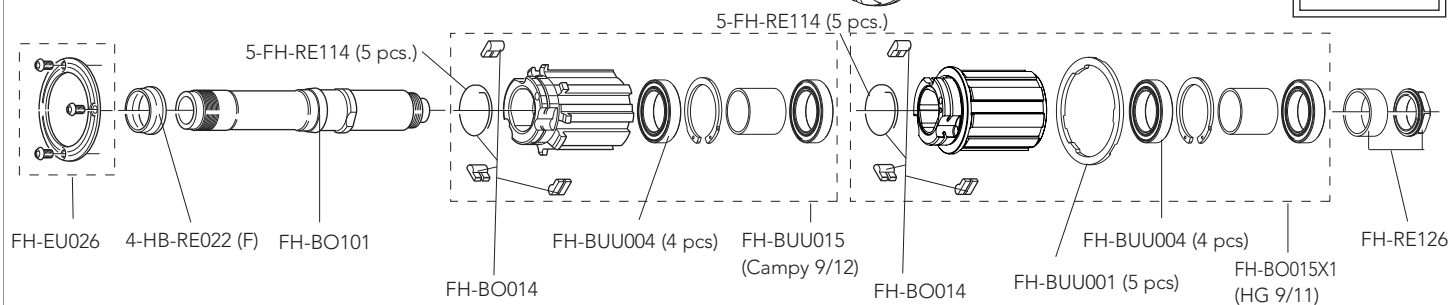


QUICK-RELEASES

QR13-80FR

front + rear

RIM

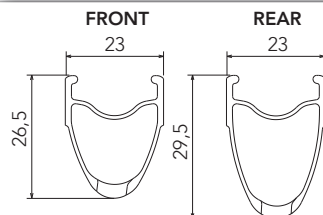

FRONT RIM
REAR RIM
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

WH-403ZOB (with labels)
WH-504ZOB (with labels)
LAB-ZOCB17 (for a pair of front+rear wheels)
6,5 mm
622 X 17C
see "brake pads compatibility table" on www.campagnolo.com




SPOKES

FRONT SPOKE	WH-116ZOC	4 spokes + 4 nipples
REAR RH SPOKE	WH-118ZOC	4 spokes + 4 nipples
REAR LH SPOKE	WH-119ZOC	4 spokes + 4 nipples
NIPPLES	WH-115ZO	50 pieces
NIPPLE INSERT	UT-WH035	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

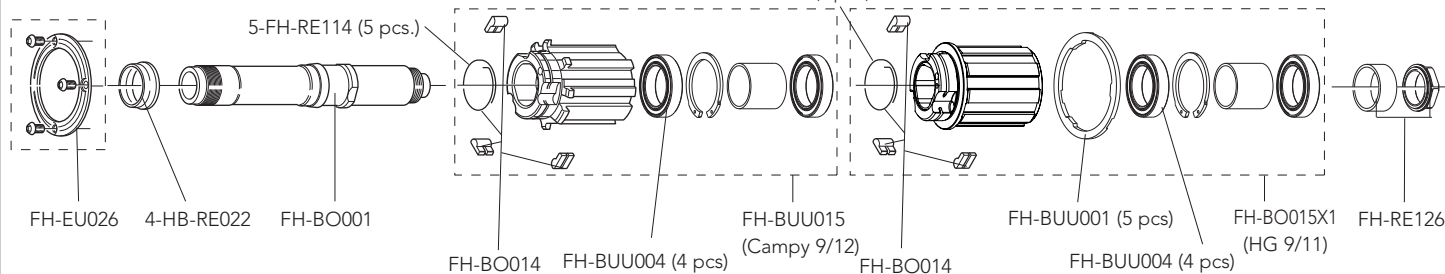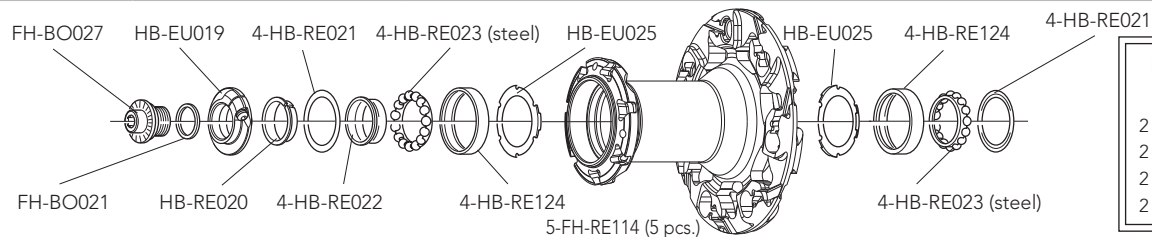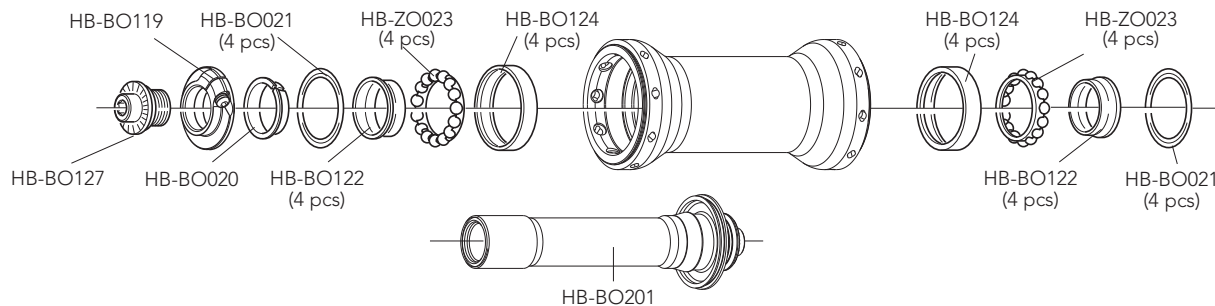


QUICK-RELEASES

QR12-ZOBFR

front + rear

RIM

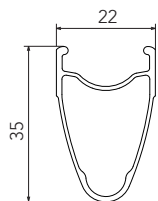

RIM-TAPE
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

WH-RT003 (2 pieces)
LAB-SCCB18 (for a pair of front+rear wheels)
6,5 mm
622 x 17C
see "brake pads compatibility table" on www.campagnolo.com



SPOKES

FRONT SPOKE	WH-016SCC	4 spokes + 4 nipples
REAR RH SPOKE	WH-018SCC	4 spokes + 4 nipples
REAR LH SPOKE	WH-019SCC	4 spokes + 4 nipples

ACCESSORIES


Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
-------------------------	-----------	---

HUBS

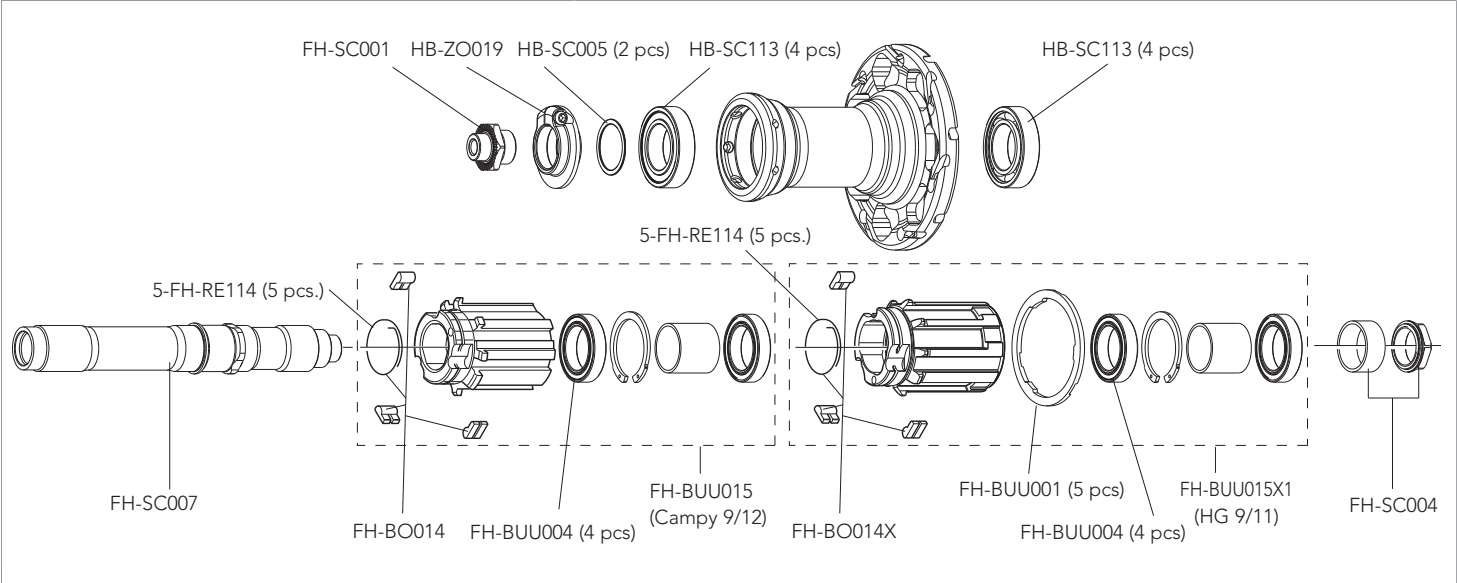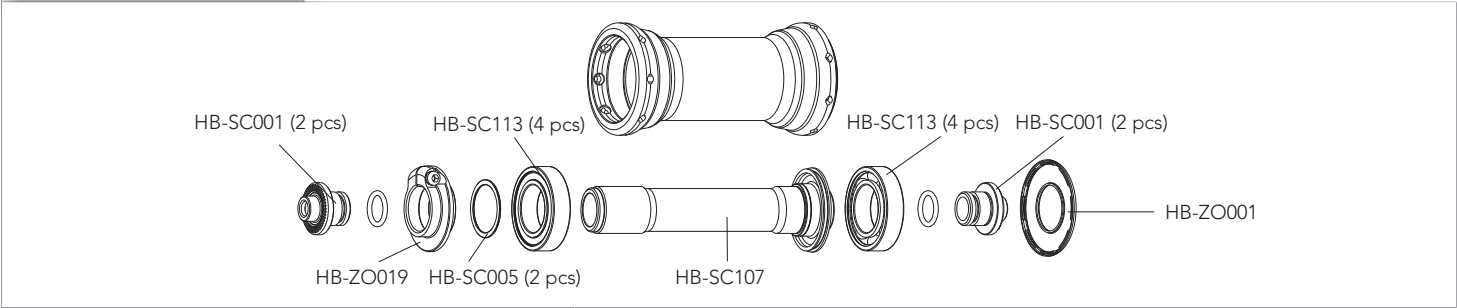

QUICK-RELEASES	QR12-ZOBFR	front + rear
----------------	------------	--------------

RIM

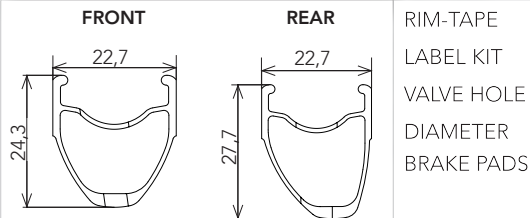

RIM-TAPE	WH-RT003 (20,5 mm - 2 pieces)
LABEL KIT	LAB-KHC19 (front+rear)
VALVE HOLE	6,5 mm
DIAMETER	622 X 17C
BRAKE PADS	see "brake pads compatibility table" on www.campagnolo.com



SPOKES

FRONT SPOKE	WH-116KHC	4 spokes + 4 nipples
REAR RH SPOKE	WH-118KHC	4 spokes + 4 nipples
REAR LH SPOKE	WH-218KHC	4 spokes + 4 nipples

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

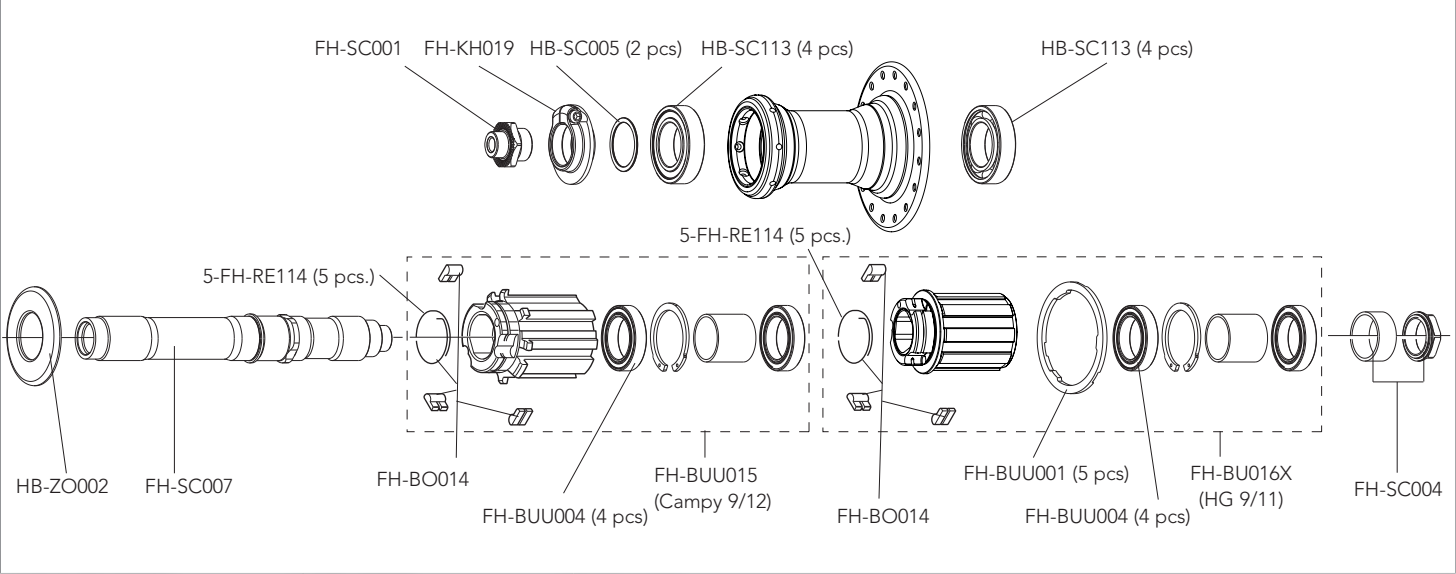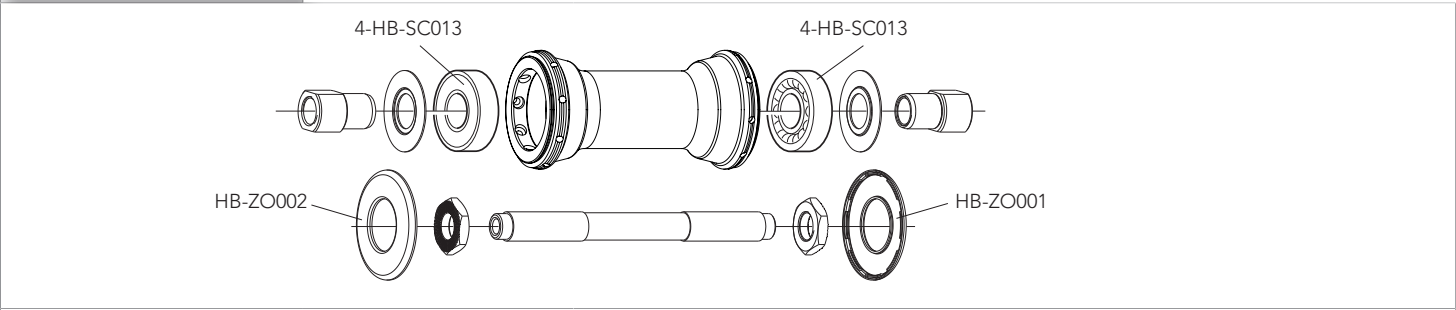


QUICK-RELEASES	QR8-40BFR	front + rear
----------------	-----------	--------------

KHAMSIN ASYMMETRIC G3

CLINCHER

RIM

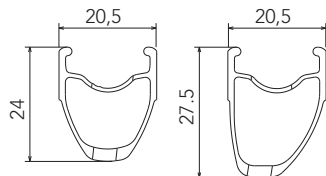

RIM-TAPE
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

2-WH-RT12 (18 mm - 2 pieces)
LAB-KHCB14G3 (BLACK - front+rear)
6,5 mm
700C (622 x 15C)
see "brake pads compatibility table" on www.campagnolo.com




SPOKES

FRONT SPOKE	WH-016KHC	4 spokes + 4 nipples
REAR RH SPOKE	WH-018KHC	4 spokes + 4 nipples
REAR LH SPOKE	WH-119KHC	4 spokes + 4 nipples

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

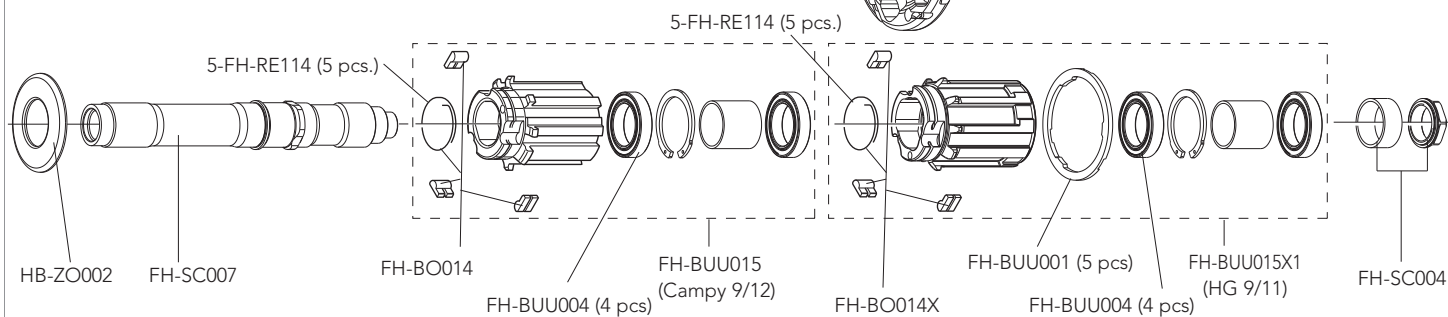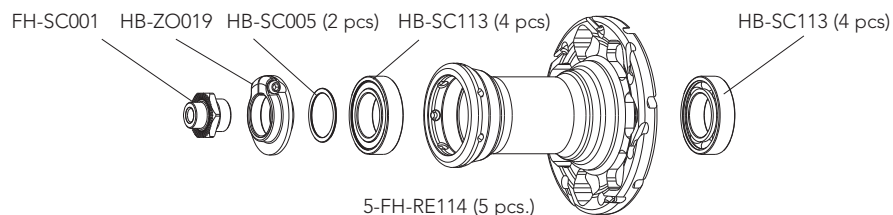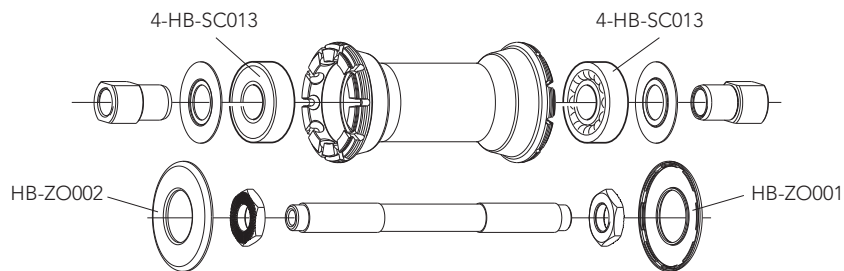


QUICK-RELEASES

QR8-40BFR

front + rear

RIM

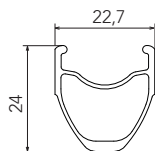

RIM-TAPE
LABEL KIT
VALVE HOLE
DIAMETER
BRAKE PADS

WH-RT003 (20.-5 mm - 2 pieces)
LAB-CAC18 (BLACK - front+rear)
6,5 mm
622 x 17C
see "brake pads compatibility table" on www.campagnolo.com


SPOKES

FRONT SPOKE	WH-016CAC	4 spokes + 4 nipples
REAR RH SPOKE	WH-018CAC	4 spokes + 4 nipples
REAR LH SPOKE	WH-019CAC	4 spokes + 4 nipples
NIPPLES	50-WH-NZO	50 pcs

ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

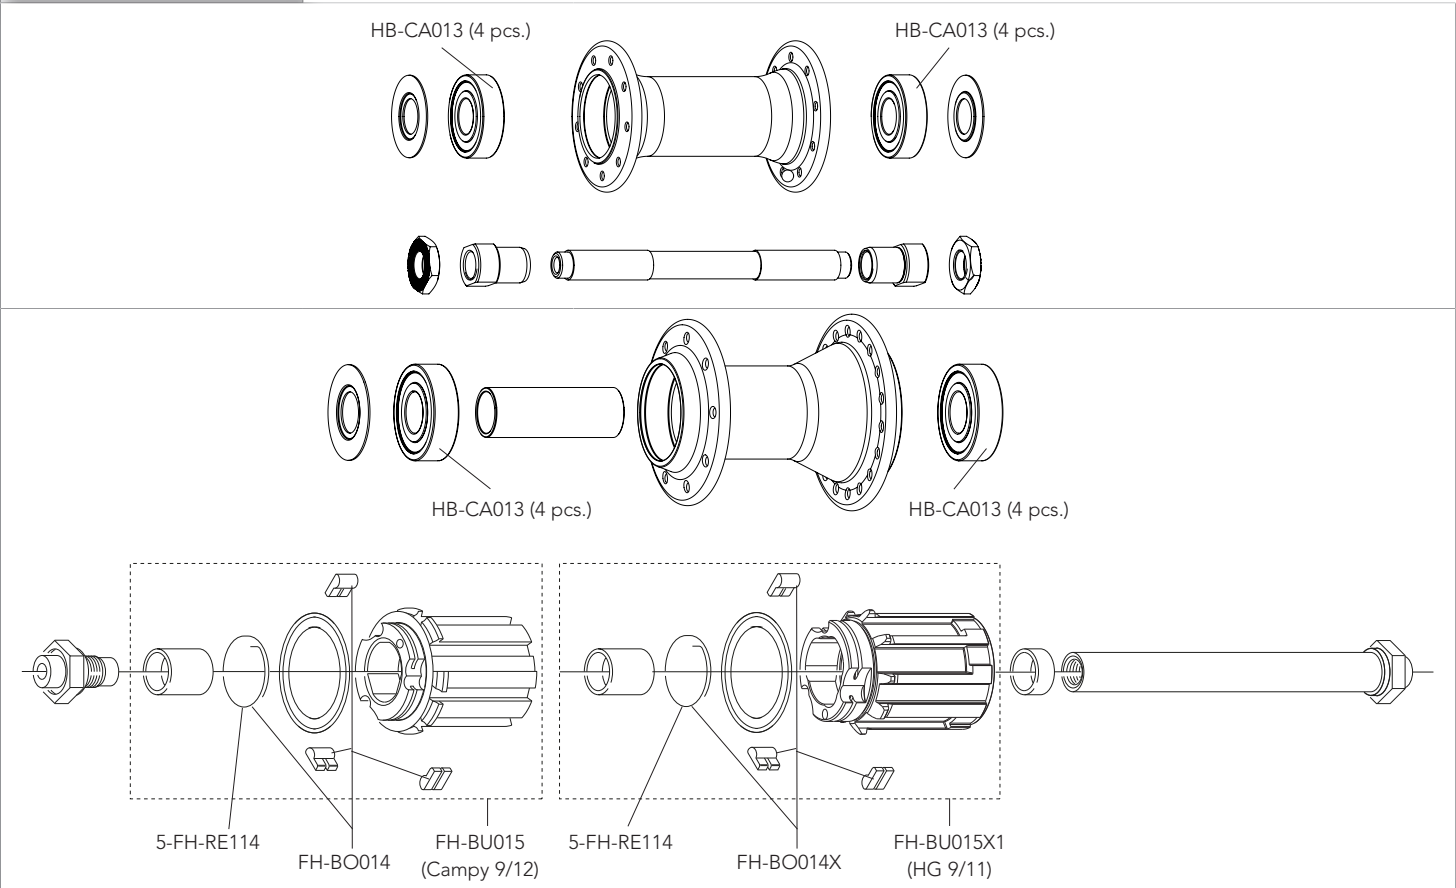

QUICK-RELEASES


QR8-40BFR

front + rear

BORA ULTRA 80 PISTA

TUBULAR

RIM

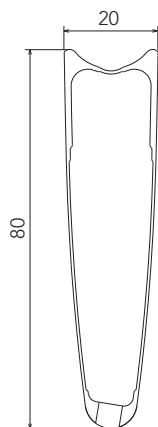

FRONT RIM

VALVE HOLE

VALVE EXTENSION

VALVE HOLE BUSHING

DIAMETER

WH-101BO80

6,5 mm

UT-WH160M (male extension) - UT-WH160F (female extension)

WH-BUU002 (5 pcs.)



634 mm

SPOKES

FRONT SPOKE

NIPPLES

NIPPLE INSERT

NIPPLE MAGNET

SPOKE SPANNER

WH-016BOT80

WH-015BO80

UT-WH160

UT-WH050

UT-WH090

4 spokes + 4 nipples

black - 10 pieces


magnet-attractor for nipple

nipple-guide

spoke wrenches

HUBS

FRONT TRACK

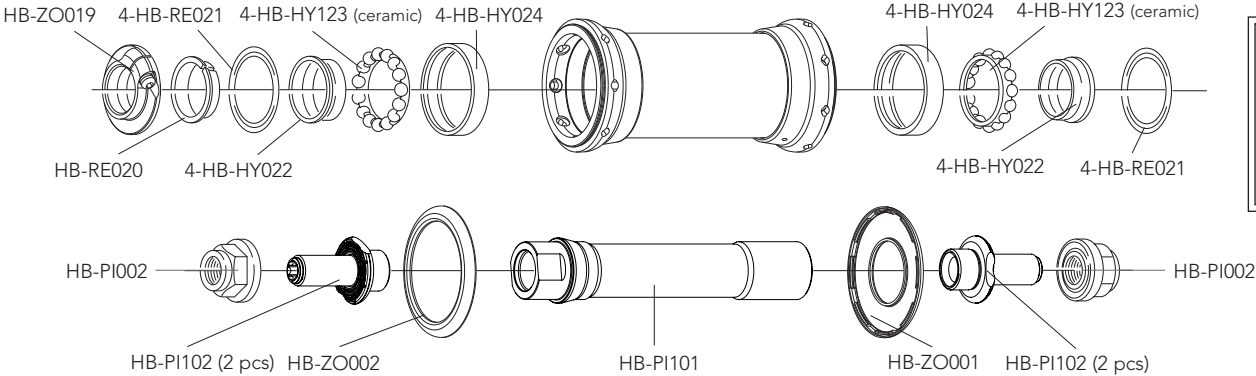

- HB-HY100
CULT™ KIT**
- 2 x HB-RE021
 - 2 x HB-HY022
 - 2 x HB-HY024
 - 2 x HB-HY123

RIM

VALVE HOLE STICKERS WH-100BOTT (5 pcs)

VALVE HOLE BUSHINGS WH-BUU002 (5 pcs.)




VALVE EXTENSION UT-WH130M

HB-BO100 CULT™ KIT front


2 x HB-BO023
2 x HB-BO024
2 x HB-BO022
2 x HB-BO021

HUBS

FRONT TRACK

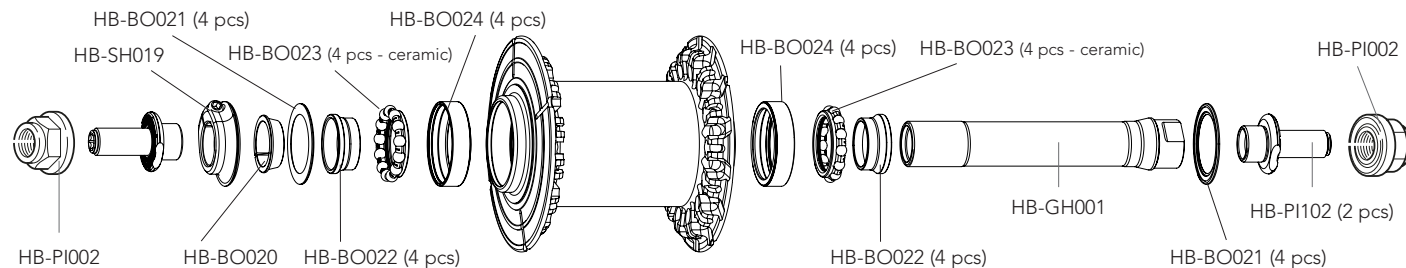

REAR TRACK

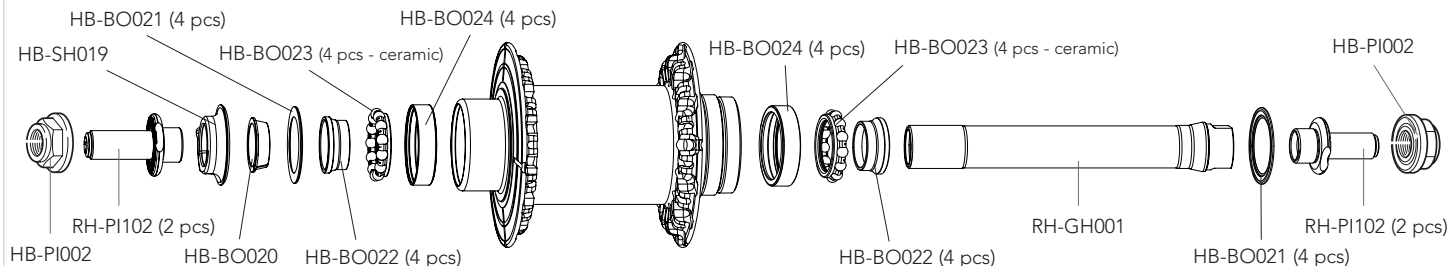

RIM

VALVE HOLE STICKERS
VALVE HOLE BUSHINGS
VALVE EXTENSION
BRAKE SHOES

WH-100BOTT (5 pcs)
WH-BUU002
UT-WH130M
for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


ACCESSORIES

Spacer for HG11 FW body

FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

HUBS

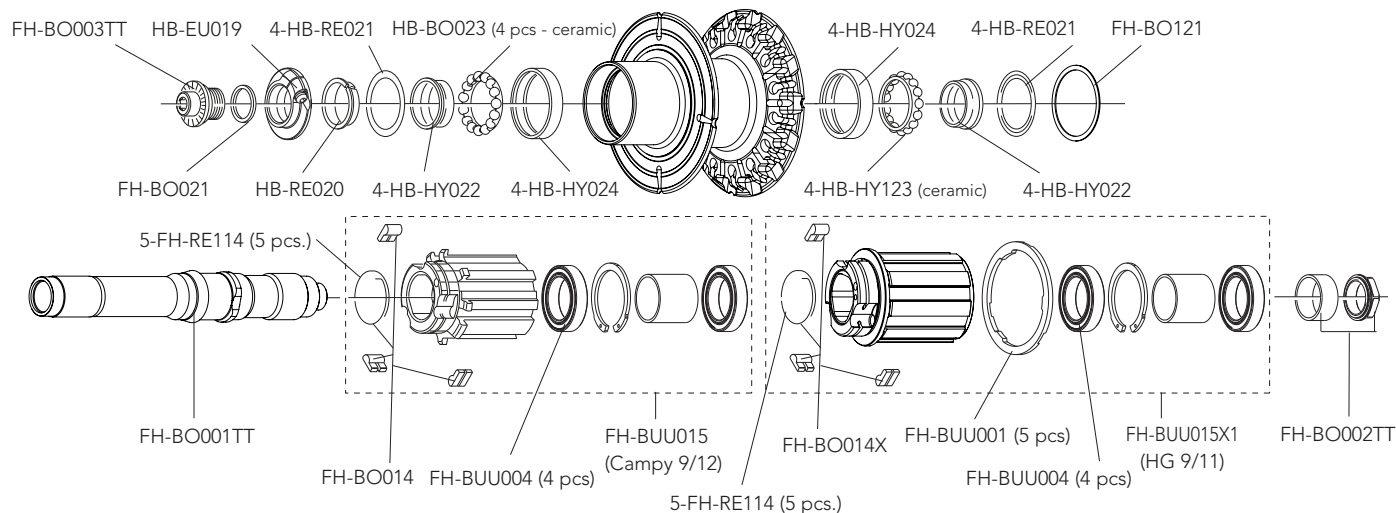


QUICK-RELEASES

QR12-BUUBFR

front + rear

RIM

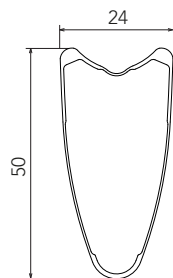

RIM
VALVE HOLE

WH-001BO150DB (bright) - WH-001BO150DBDK (dark)
6,5 mm

VALVE HOLE BUSHING

WH-BUU002 (5 pcs.) 

DIAMETER

700C (622 x 17C)

SPOKES

FRONT RH L. 262,5

WH-017BO50DB

4 spokes + 4 nipples

FRONT LH / REAR RH L. 278

WH-016BO35DB

4 spokes + 4 nipples

REAR LH L. 253,5

WH-019BO50DB

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001



5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

AFS™ locking


M1-101

to fix the rotor

HUBS

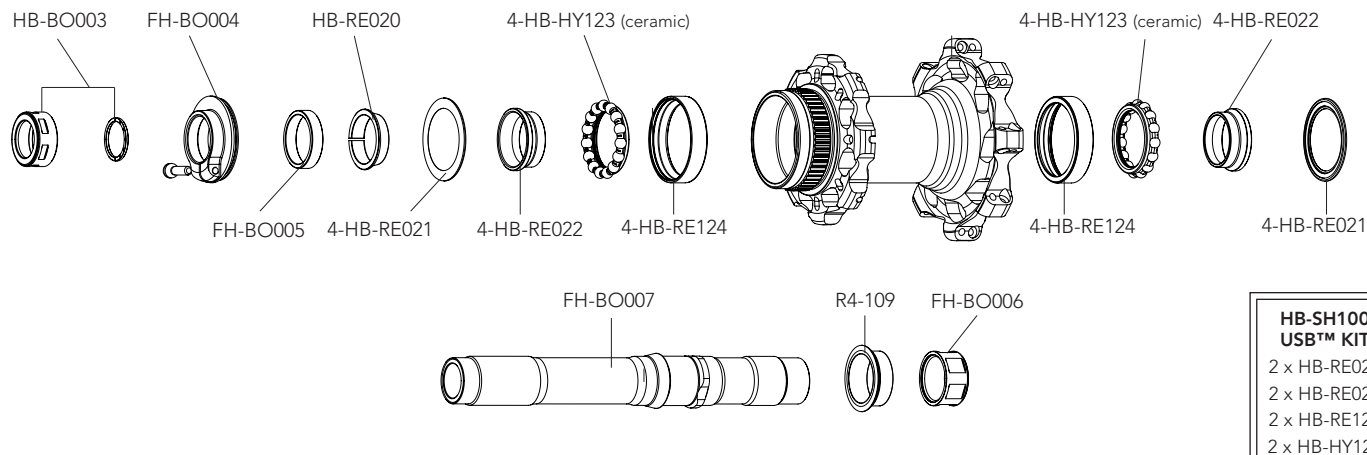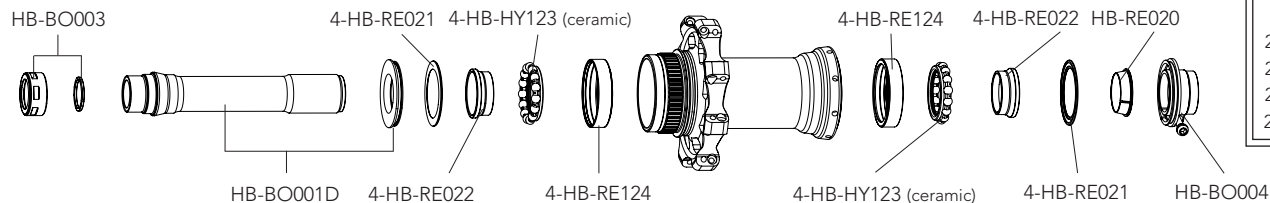

RIM

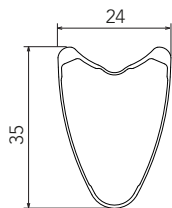

RIM
VALVE HOLE

VALVE HOLE BUSHING

DIAMETER

WH-001BO135DB (bright) - WH-001BO135DBDK (dark)
6,5 mm

WH-BUU002 (5 pcs.)



700C (622 x 17C)

SPOKES

FRONT LH / REAR RH L. 293

WH-017BO35DB

4 spokes + 4 nipples

FRONT RH L. 278

WH-016BO35DB

4 spokes + 4 nipples

REAR LH L. 268

WH-019BO35DB

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001



5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

AFS™ locking


M1-101

to fix the rotor

HUBS

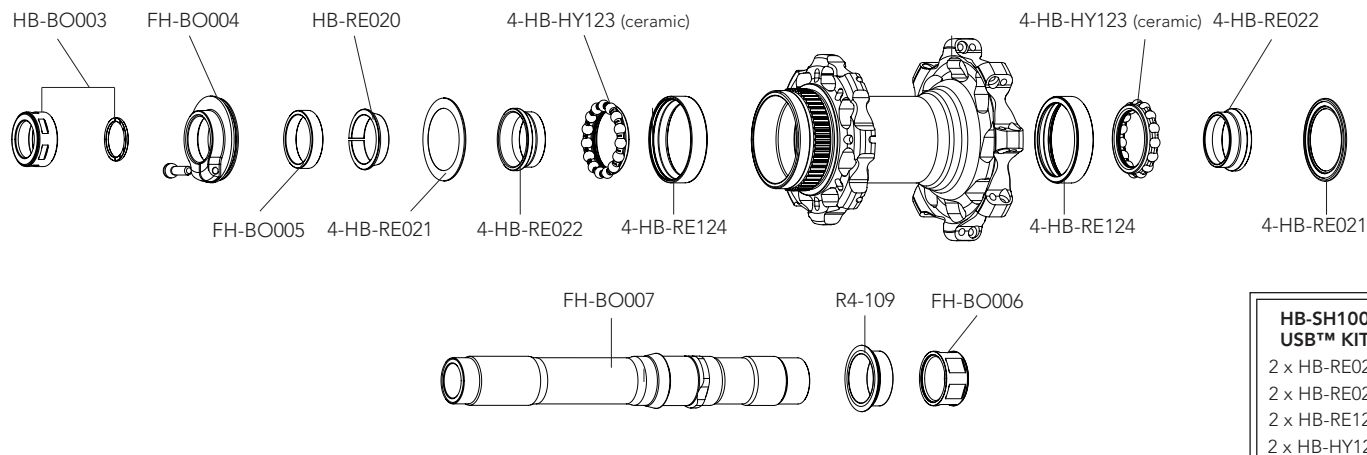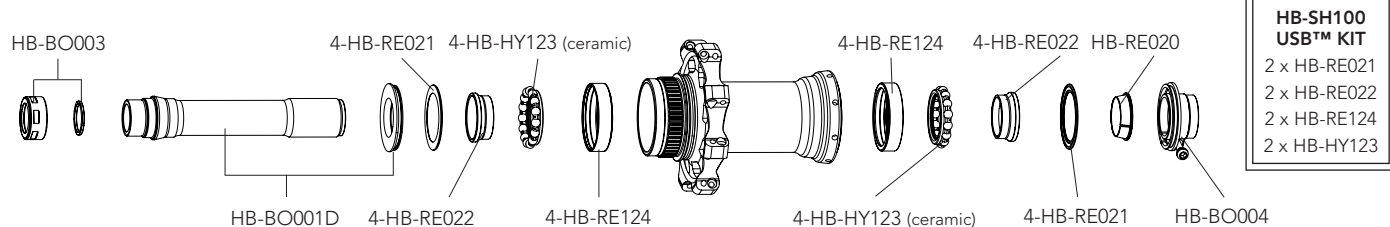

RIM

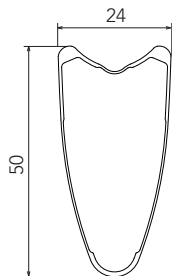

RIM
VALVE HOLE

WH-003BO150DB (bright) - WH-003BO150DBDK (dark)
6,5 mm

VALVE HOLE BUSHING

WH-BUU002 (5 pcs.) 

DIAMETER

700C (622 x 17C)

SPOKES

FRONT RH L. 262,5

WH-017BO50DB

4 spokes + 4 nipples

FRONT LH / REAR RH L. 278

WH-016BO35DB

4 spokes + 4 nipples

REAR LH L. 253,5

WH-019BO50DB

4 spokes + 4 nipples

NIPPLES

WH-015BO80

black - 10 pieces

NIPPLE INSERT

UT-WH160

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

SPOKE SPANNER

UT-WH090

spoke wrenches

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001



5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

AFS™ locking


M1-101

to fix the rotor

HUBS

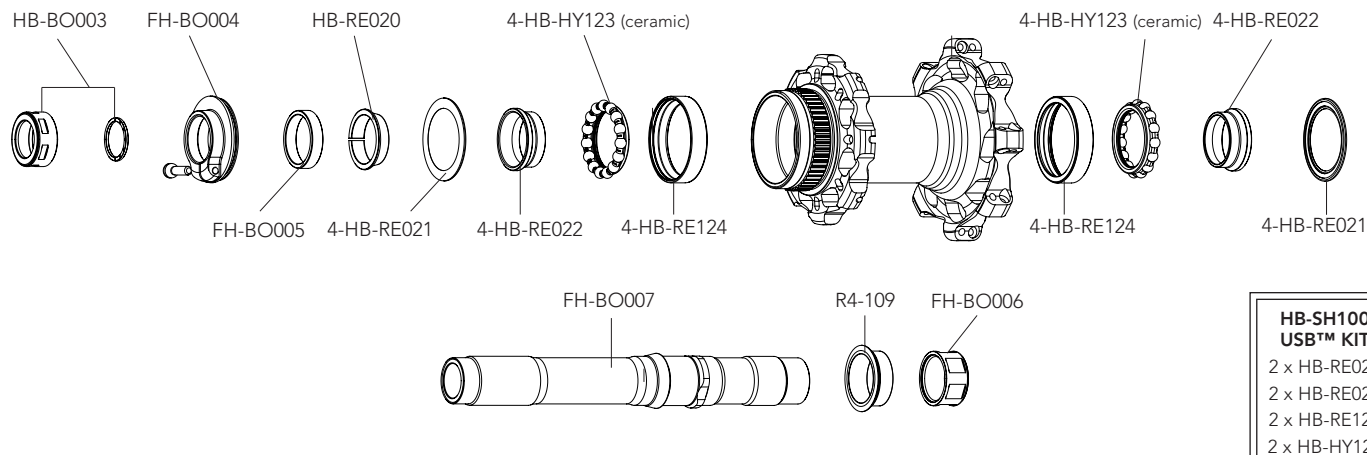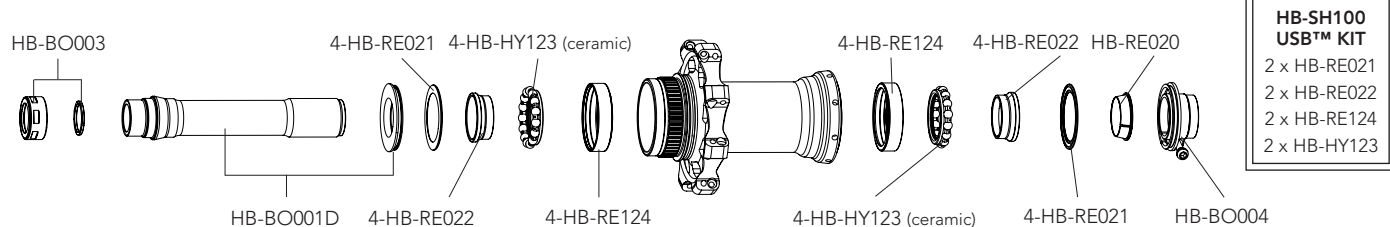

RIM

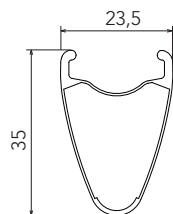

RIM
VALVE HOLE
VALVE HOLE BUSHING
DIAMETER

WH-003BO135DB (bright) - WH-003BO135DBDK (dark)
6,5 mm
WH-BUU002 (5 pcs.) 
700C (622 x 17C)


SPOKES

FRONT LH / REAR RH L. 293	WH-017BO35DB	4 spokes + 4 nipples
FRONT RH L. 278	WH-016BO35DB	4 spokes + 4 nipples
REAR LH L. 268	WH-019BO35DB	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
AFS™ lockring	M1-101	to fix the rotor

HUBS

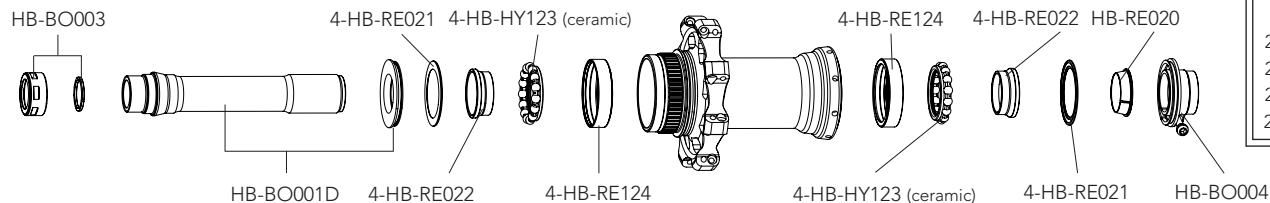


**HB-SH100
USB™ KIT**
2 x HB-RE021
2 x HB-RE022
2 x HB-RE124
2 x HB-HY123

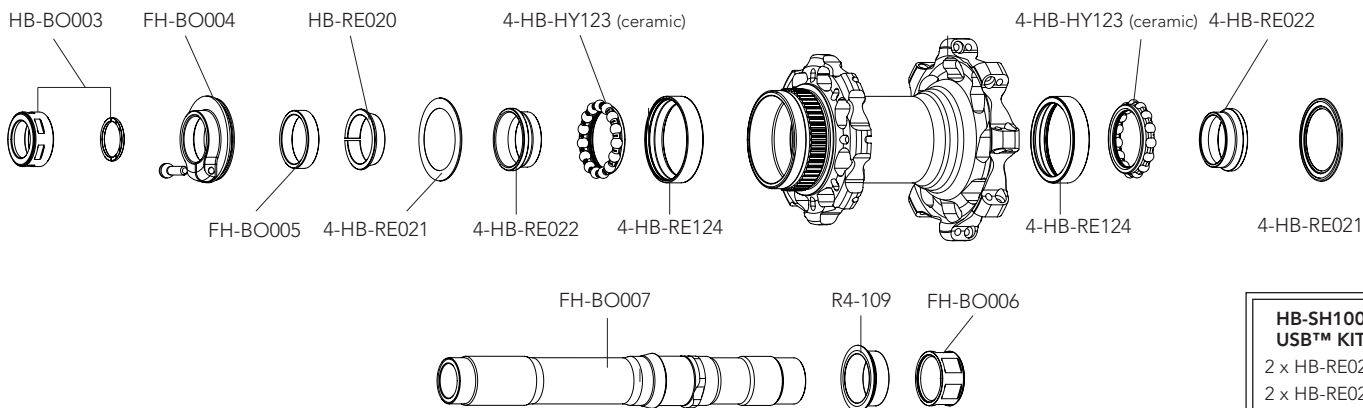

**HB-SH100
USB™ KIT**
2 x HB-RE021
2 x HB-RE022
2 x HB-RE124
2 x HB-HY123

RIM

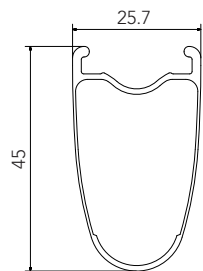

RIM	WH-03BWTO45DB (dark)
VALVE HOLE	6,5 mm
VALVE EXTENSION	UT-WH130M (male extension)
2-WAY FIT™ VALVE	WH-SH101
VALVE HOLE BUSHING	WH-BUU002 (5 pcs.) 
DIAMETER	700C (622 x 19C)



SPOKES

FRONT LH / REAR RH L. 280,5	WH-04BWTO45DB	4 spokes + 4 nipples
FRONT RH / REAR LH L. 261,5	WH-05BWTO45DB	4 spokes + 4 nipples
NIPPLES	WH-07BWTO45DB	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

HUBS

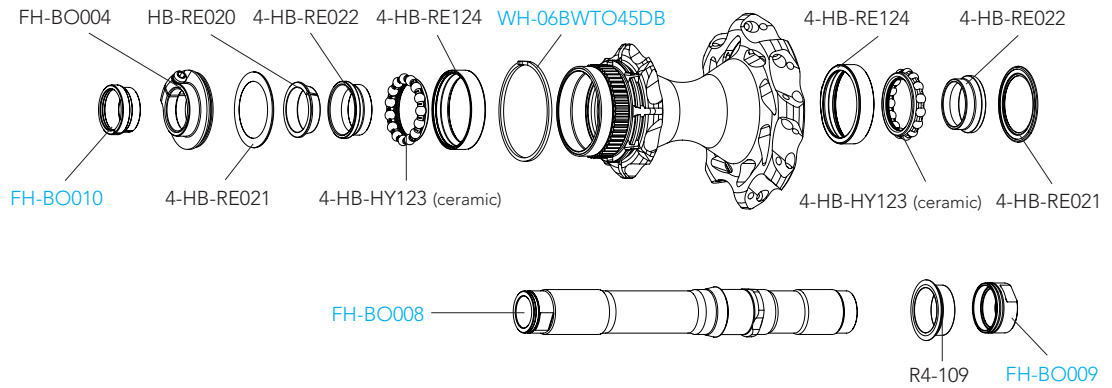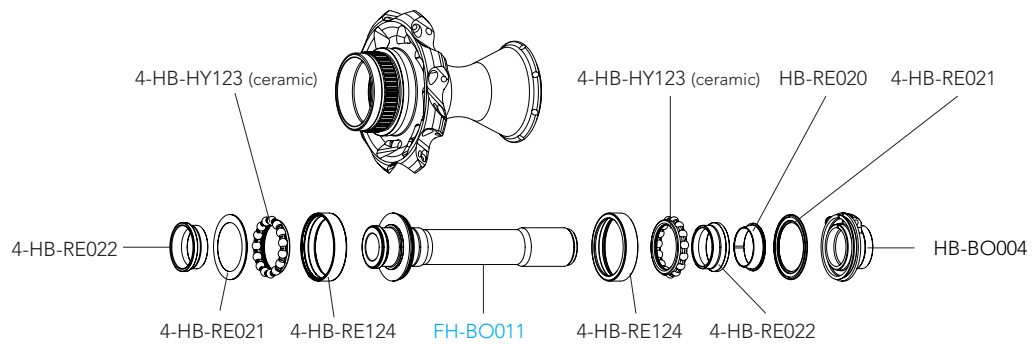

RIM

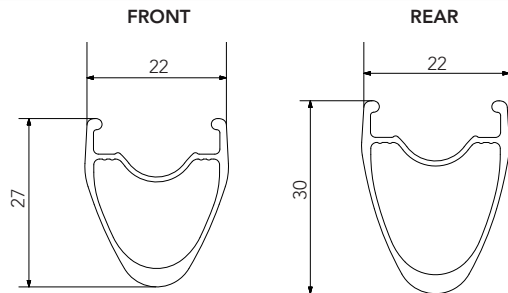

FRONT RIM
REAR RIM
LABEL KIT
LABEL KIT
FRONT TUBELESS VALVE
REAR TUBELESS VALVE
VALVE HOLE
VALVE HOLE BUSHING
DIAMETER

WH-001SHDB (without labels)
WH-002SHDB (without labels)
LAB-SHDB (front + rear) Bright
LAB-SHDBD (front + rear) Dark
WH-SH101 (35 mm)
VA-2WF44 (44 mm)
7,5 mm
5-WH-SH002 (5 pcs) 
622 x 17C



SPOKES

FRONT LH	WH-016SHDB	1 spoke + 1 nipple
FRONT RH	WH-017SHDB	1 spoke + 1 nipple
REAR RH	WH-018SHDB	1 spoke + 1 nipple
REAR LH	WH-019SHDB	1 spoke + 1 nipple
COMPLETE FRONT KIT	WH-020SHDBF	14 left and 7 right spokes
COMPLETE REAR KIT	WH-020SHDBR	7 left and 14 right spokes
NIPPLES	WH-019SHN	Black Aluminium nipple hex 6 mm (10 pcs)
NIPPLE INSERT	UT-WH110	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple guide


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
QUICK RELEASE	QR19-FRDB	F+R 135 mm QR SKEWER FOR DB WHEELS

HUBS

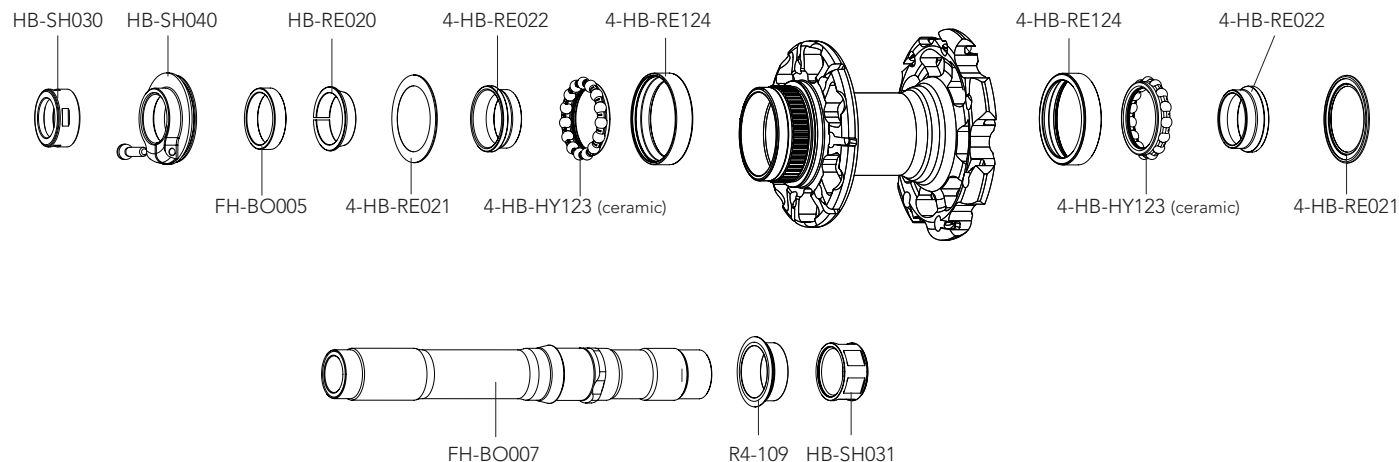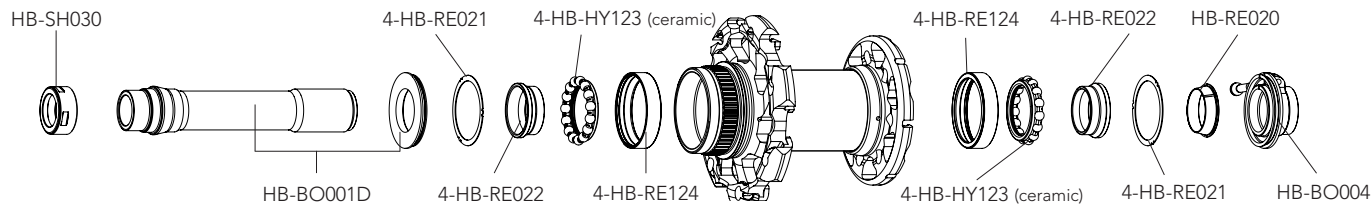

RIM

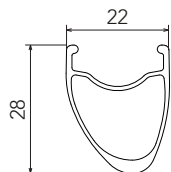

FRONT/REAR RIM

WH-003ZODB (with labels)

LABEL KIT

LAB-ZOCDB17 (for a pair of front+rear wheels)

VALVE HOLE

6,5 mm

DIAMETER

622 X 17C

SPOKES

FRONT LH / REAR RH SPOKE

WH-016ZODB

4 spokes + 4 nipples

FRONT RH SPOKE

WH-017ZODB

4 spokes + 4 nipples

REAR LH SPOKE

WH-019ZODB

4 spokes + 4 nipples

NIPPLES

50-WH-015ZO

50 pieces

NIPPLE INSERT

UT-WH035

magnet-attractor for nipple

NIPPLE MAGNET

UT-WH050

nipple-guide

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001



5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/HG11 FW body package contains the spacer)

QUICK-RELEASES


QR17-ZODBFK
QR17-ZODBRK

front quick-release +kit QR
rear quick-release + kit QR

HUBS

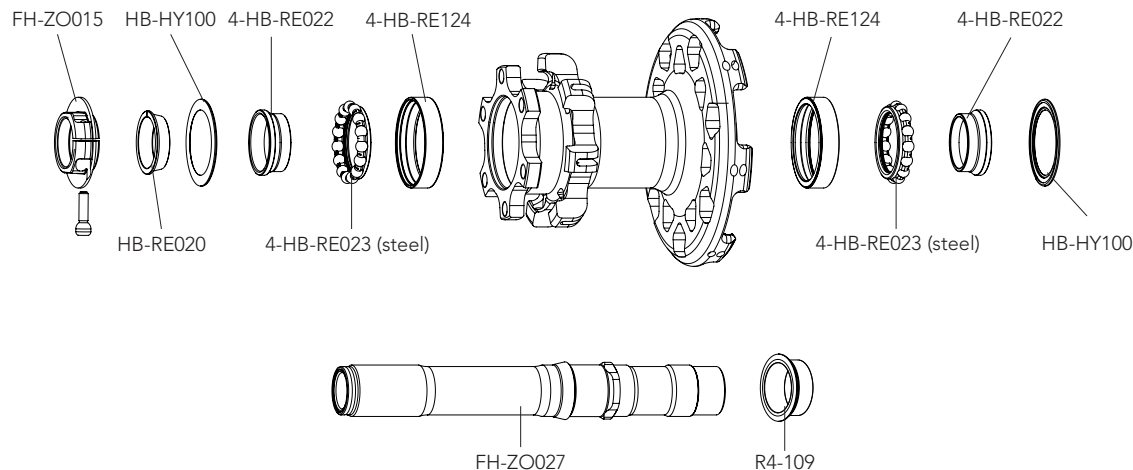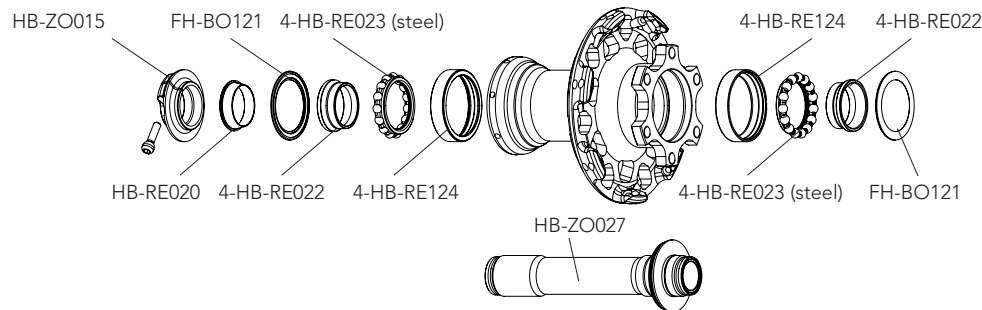

RIM

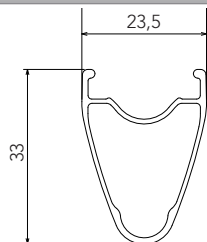

LABEL KIT

LAB-SCDB19 (for a pair of front+rear wheels)

RIM TAPE

2-WH-RT13 (2 pcs)

TUBELESS VALVE

VA-2WF44

VALVE HOLE

6,5 mm

DIAMETER

622 X 19C

SPOKES

FRONT SPOKE

WH-016SCDB

4 spokes + 4 nipples

REAR RH SPOKE

WH-017SCDB

4 spokes + 4 nipples

REAR LH SPOKE

WH-018SCDB

4 spokes + 4 nipples

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001



5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)

QUICK RELEASE



QR19-FRDB

Front + Rear 135 mm QR SKEWER FOR DB WHEELS


HUBS

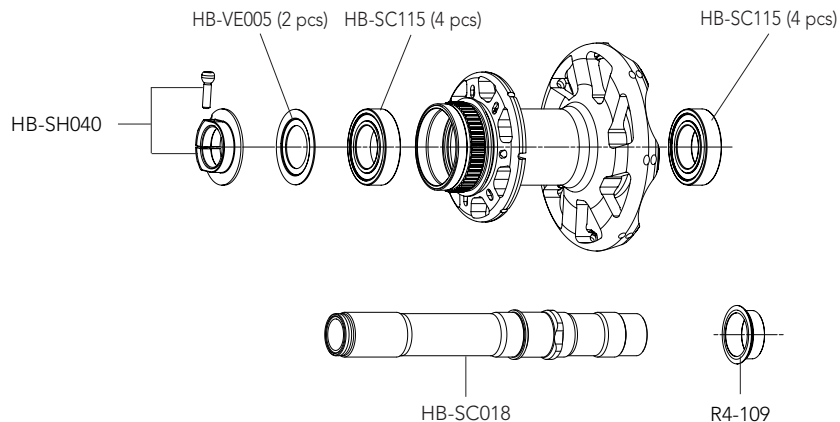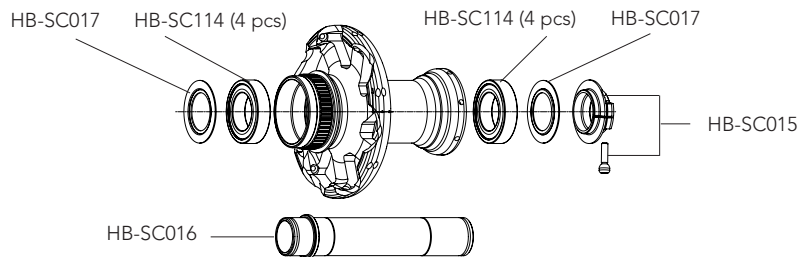

FW BODIES ROAD WHEELS

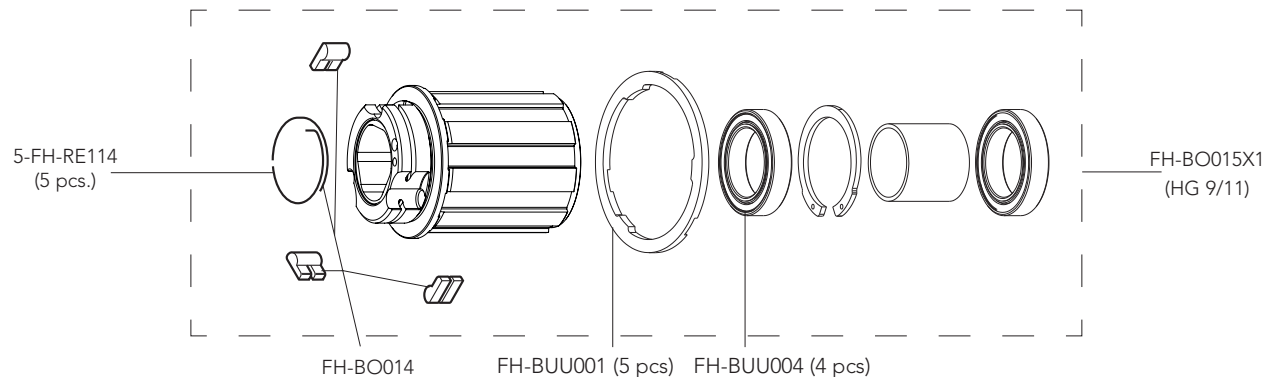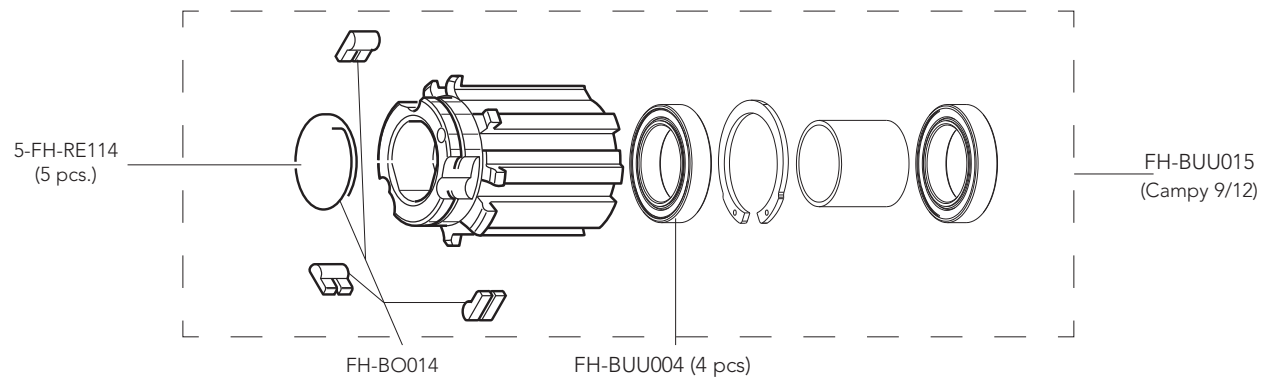


FW BODIES ROAD WHEELS

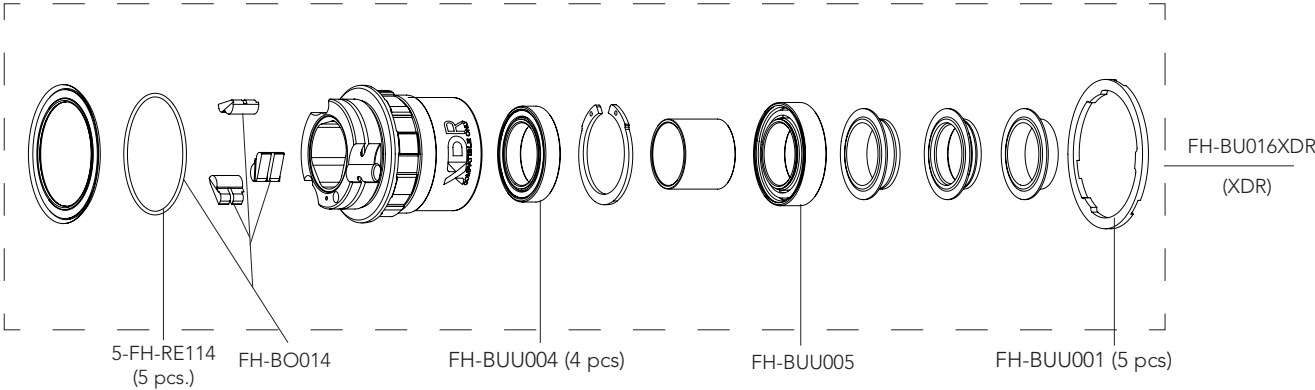


DB WHEELS - adapters for front axles

ZONDA DB

QR Ø9 mm – 100 mm (KITFCFAQR + KITFCRA12135)

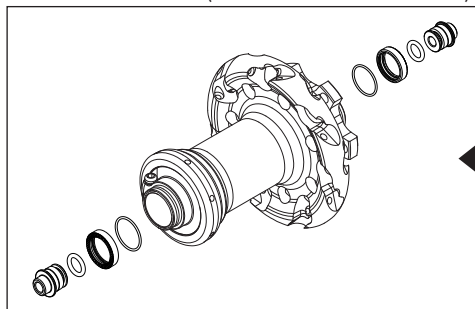


Ø12mm THRU-AXLE - 100mm (KITFCRA12135)

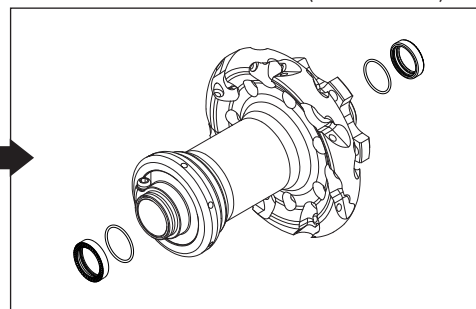


SCIROCCO DB

QR Ø 9mm - 100 mm

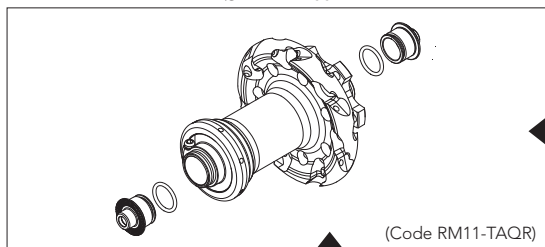

(Code RM11-TAQR)


Ø 12mm THRU-AXLE – 100 mm

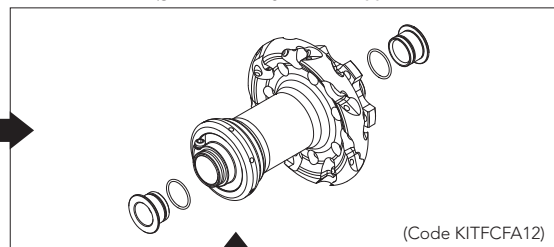

(Code KITFCFA12)



Ø 15mm THRU-AXLE – 100 mm

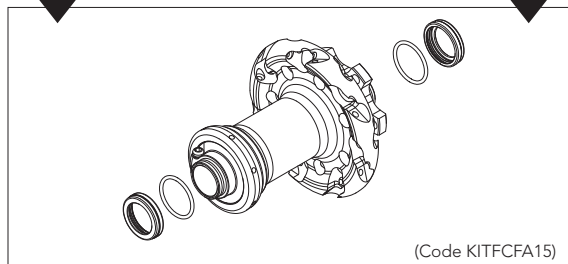


(Code KITFCFA15)




DB WHEELS - adapters for rear axles

ZONDA DB / SCIROCCO DB


Ø12mm THRU-AXLE- 135 mm

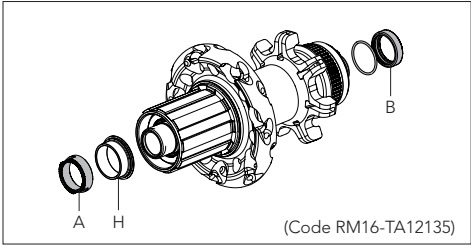

Ø12mm THRU-AXLE - 142 mm

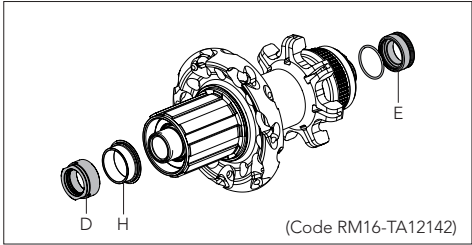

QR Ø 10 mm - 135 mm

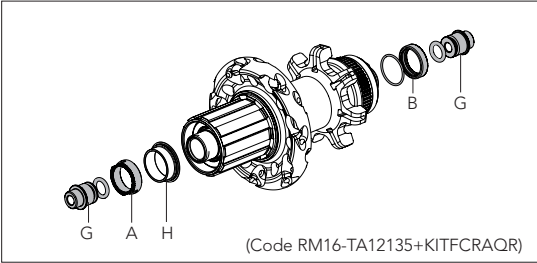

A	5,6 mm
B	4,25 mm
D	9,1 mm
E	7,75 mm
G	15,5 mm
H*	7,4 mm
H*: code R4-109 (NOT INCLUDED)	

A + B =	code RM16-TA12135
D + E =	code RM16-TA12142
G + G =	code KITFCRAQR

QUICK-RELEASES

MEDIUM-PROFILE WHEELS

KHAMSIN™ ASYMMETRIC™	QR8-40BFR
SCIROCCO™	QR12-ZOBFR
ZONDA™	QR12-ZOBFR
SHAMAL™ ULTRA™	QR13-80FR
SHAMAL™ MILLE	QR13-80FR

CARBON HIGH-PROFILE WHEELS

BORA™ ONE	QR12-BUUBFR
BORA™ ULTRA™	QR12-BUUBFR
BORA™ WTO	QR12-BUUBFR
BORA™ ULTRA™ TT	QR12-BUUBFR

DISC BRAKE WHEELS

BORA™ ONE 50 DB	QR17-ZODBFK (front + kit HH=>QR)
BORA™ ONE 35 DB	QR17-ZODBK (rear + kit HH=>QR)
BORA™ WTO 40 DB	QR17-ZODBFK (front + kit HH=>QR)
ZONDA™ DB	QR17-ZODBFK (front + kit HH=>QR) - QR17-ZODBK (rear + kit HH=>QR)
SCIROCCO™ DB	QR19-FRDB
SHAMAL™ ULTRA™ DB	QR19-FRDB

QR12-BUUBFR (front+rear)



QR8-40BFR (front+rear)



QR12-ZOBFR (front+rear)
 QR17-ZODBFK (front + kit HH=>QR)
 QR17-ZODBK (rear + kit HH=>QR)




QR13-80FR (front+rear)



VALVE EXTENSIONS


Your wheels are supplied with valve extensions that correspond to depth of the rim as follows:

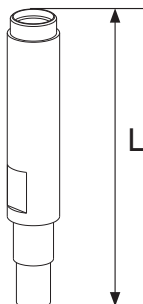PROFILE RIM	MALE VALVE ADAPTER (SUPPLIED)		
Verificate secondo la lunghezza della valvola (della camera d'aria o del tubolare) e l'altezza del profilo del cerchio, quale sia la prolunga adatta alle vostre esigenze Check what extension you need according to the length of the valve (inner tube or tubular tyre) and height of the rim profile	UT-WH130M	L = 35 mm	
	UT-WH140M	L = 65 mm	
	UT-WH150M	L = 90 mm	
	UT-HU150	L = 40 mm	
	UT-WH160M	L = 74 mm	

PROFILE RIM	FEMALE VALVE ADAPTER (OPTION)		
Verificate secondo la lunghezza della valvola (della camera d'aria o del tubolare) e l'altezza del profilo del cerchio, quale sia la prolunga adatta alle vostre esigenze Check what extension you need according to the length of the valve (inner tube or tubular tyre) and height of the rim profile	UT-WH130F	L = 37 mm	
	UT-WH140F	L = 67 mm	
	UT-WH150F	L = 92 mm	
	UT-WH160F	L = 80 mm	

USE AIR CHAMBERS (INNER TUBES) WITH A LONG VALVE (AT LEAST 35 mm).

FRAME PREPARATION / FRONT DERAILLEUR

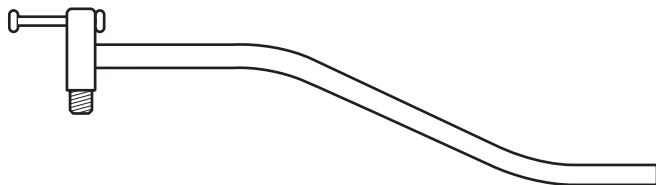

UT-VS030

Riscontro allineamento occhiello attacco cambio

Rear derailleur hanger alignment tool




UT-FD120

Dima per corretto posizionamento deragliatore (2 pz - per Z50 e Z52)

Front derailleur alignment tool (2 pcs - for Z50 and Z52)

BOTTOM BRACKET / CRANKSET

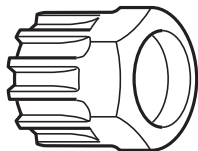


UT-BB080 (1 pz.) - 10-UT-BB080 (10 pz.):

Chiave per montaggio movimenti centrali CART e ghiera di chiusura pacchi pignoni
Cartridge bottom bracket and sprocket cassette- lock ring remover


UT-BB100

Utensile per movimenti a cartuccia Daytona/Centaur™, Veloce™ e Mirage™
Tool for Daytona/Centaur™, Veloce™ and Mirage™ cartridge bottom bracket

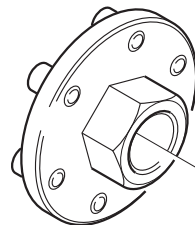

UT-FC090

Inserto per estrattore pedivella sinistra POWER TORQUE™
Insert for left POWER TORQUE™ crank extractor

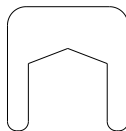


UT-FC095

Protezione per estrazione pedivella sx POWER TORQUE™
(5 pz)

shield f. left POWER TORQUE™ crank extractor insert (5 pcs)

CRANKSET

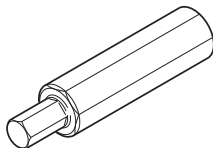


UT-BB110

Utensile per vite fissaggio guarnitura ULTRA-TORQUE™
Tool for ULTRA-TORQUE™ crankset fixing screw



UT-BB130

Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ lockring

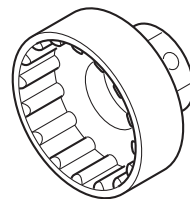


UT-BB240

Utensile per piantaggio calotte integrate OS-Fit™
Tool for OS-Fit™ crankset overboard cups

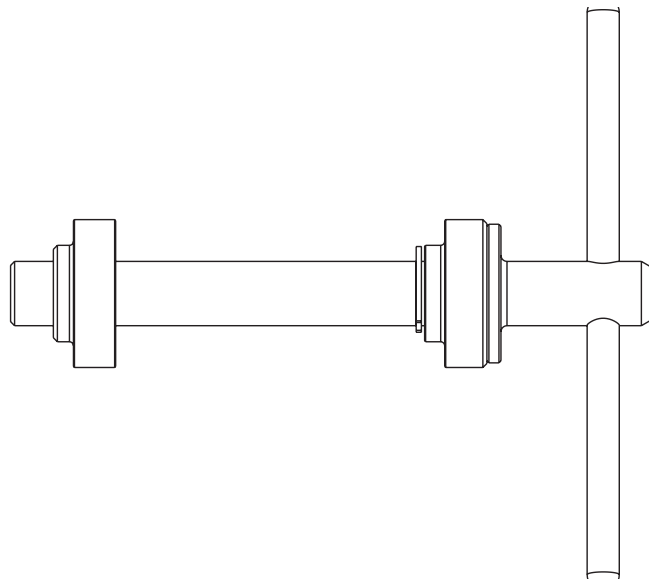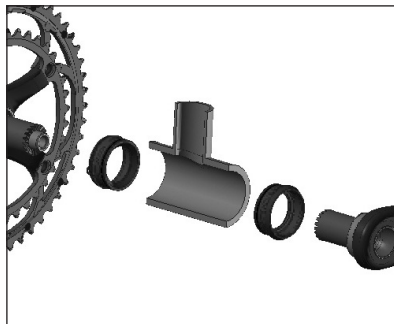


BRAKES

DISC BRAKES

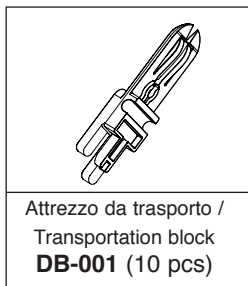

RIM BRAKES

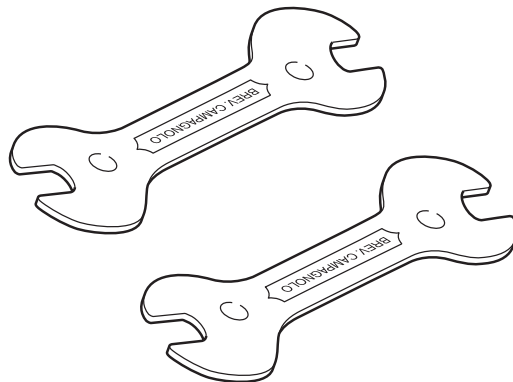

UT-BR010

Coppia chiavi 13-14 per registrazione freni e coni mozzi
Pair of 13-14 mm spanners for adjusting brakes and hub cones

WHEELS



UT-WHDB001

Chiave per perni esagonali
Tool for hexagonal axle





UT-WHDB002

Inserto metallico per perni esagonali
Metallic insert for hexagonal axle

UT-HU050


Tiragaggi
Spoke wrench

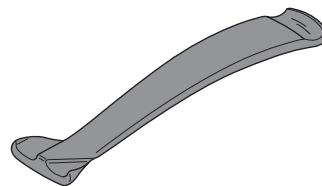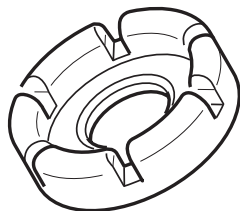

WH-109HYC (6 pcs.)

Leva in composito per rimozione copertoncino
Composite lever for removing clinchers


WHEELS

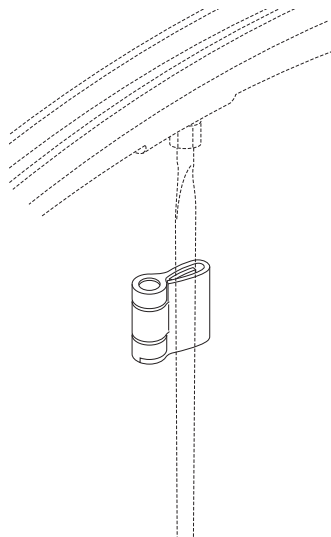

UT-WH080

Magnete velocità per raggi SHAMAL™ ULTRA™

SPD magnet for SHAMAL™ ULTRA™ spokes

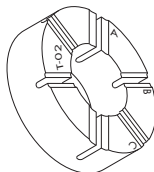

UT-WH010

Anello anti-rotazione raggi
Spoke antirotation ring

UT-WH090

Chiave tiraraggi BORA ULTRA 80
Spoke wrench BORA ULTRA 80



UT-WH020

Inserto nipplo attira-magnete per SHAMAL™ ULTRA / SHAMAL™ MILLE
Magnet-attracting nipple insert for SHAMAL™ ULTRA / SHAMAL™ MILLE

UT-WH035

Inserto nipplo attira-magnete per ZONDA™ 2012
Magnet-attracting nipple insert for ZONDA™ 2012

UT-WH160


Inserto nipplo attira-magnete per BORA ULTRA / BORA ULTRA TWO / BORA ONE / BORA ONE DB / BORA WTO / BORA WTO DB
Magnet-attracting nipple insert for BORA ULTRA / BORA ULTRA TWO / BORA ONE / BORA ONE DB / BORA WTO / BORA WTO DB

UT-WH110

Inserto nipplo attira-magnete per SHAMAL™ ULTRA DB / SHAMAL™ MILLE
Magnet-attracting nipple insert for SHAMAL™ ULTRA DB / SHAMAL™ MILLE

UT-WH070

Chiave tiraraggi
Spoke wrench



UT-WH270

Chiave tiraraggi per SHAMAL MILLE MY2017 (Service Center Only)
Spoke wrench for SHAMAL MILLE MY2017 (Service Center Only)

UT-WH280

Chiave tiraraggi per BORA ONE / BORA ULTRA / BORA WTO / ZONDA (Nipplo sez. quadrata - Service Center Only)
Spoke wrench for BORA ONE / BORA ULTRA / BORA WTO / ZONDA (Square section nipple - Service Center Only)

WHEELS




UT-WH050

Magnete guida-nipplo
Nipple guide magnet



5-WH-SH002

Bussola riduzione sede valvola 2WF (5 pz)
Valve hole bushing for 2WF (5 pcs)




WH-BUU002

Bussola riduzione sede valvola BORA ULTRA 80 (5 pz)
Valve hole bushing for BORA ULTRA 80 (5 pcs)

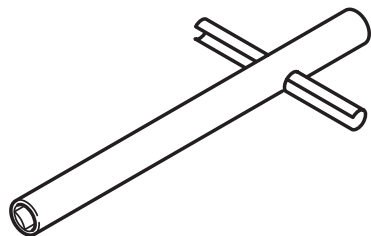


UT-HU060

Chiave per raggi ruote Bora™ (fino a gamma '02)
Bora™ wheel truing tool (till '02 range)

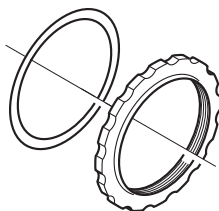


M1-101 (4 pcs.)

Ghiera AFS™
AFS™ locking

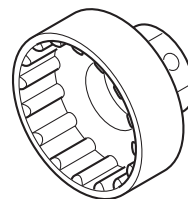

UT-BB130

Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ locking

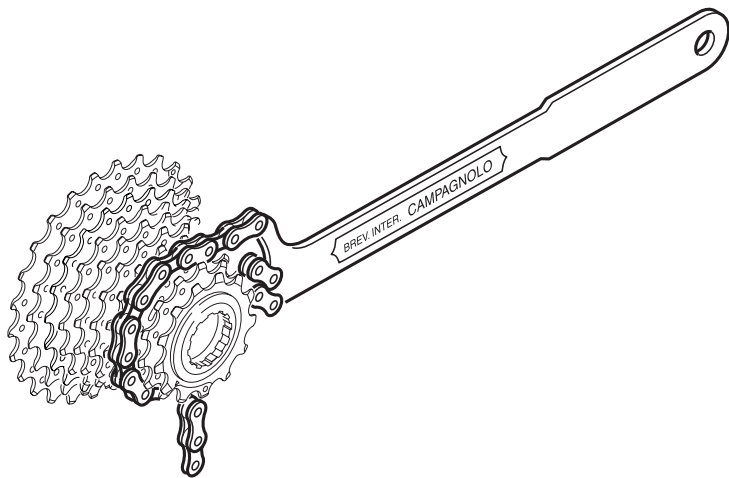



UT-CS060

Chiave con catena 10s per smontaggio pignoni 11s, 10s, 9s e 8s
Spanner with 10s chain for 11, 10, 9 and 8s sprockets

UT-CN300

Utensile per *Ultra-Link™* (solo catene 11s / 12s)


Tool for *Ultra-Link™* (11s / 12s chains only)

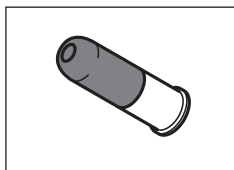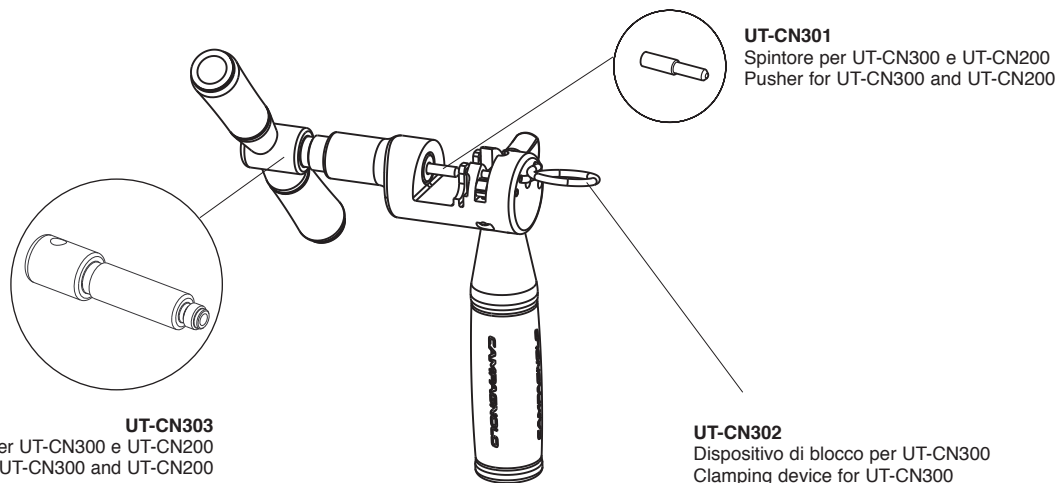

5-CN-RE500

Ultra-Link™ per catene 11s (5 pz)

Ultra-Link™ for 11s chains only (5 pcs)

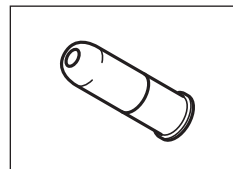

5-CN-SR600

Ultra-Link™ per catene 12s (5 pz)



Ultra-Link™ for 12s chains only (5 pcs)

CHAIN

CAMPY™ UT-CN200

Utensile per **HD-Link™** (catene C10™ e C10™ Ultra Narrow™)


Tool for **HD-Link™** (C10™ and C10™ Ultra Narrow™ chains)

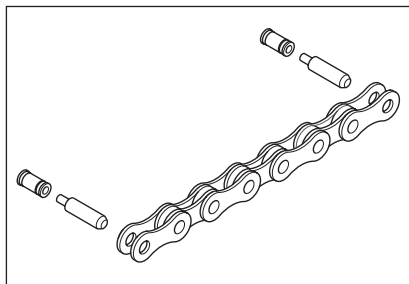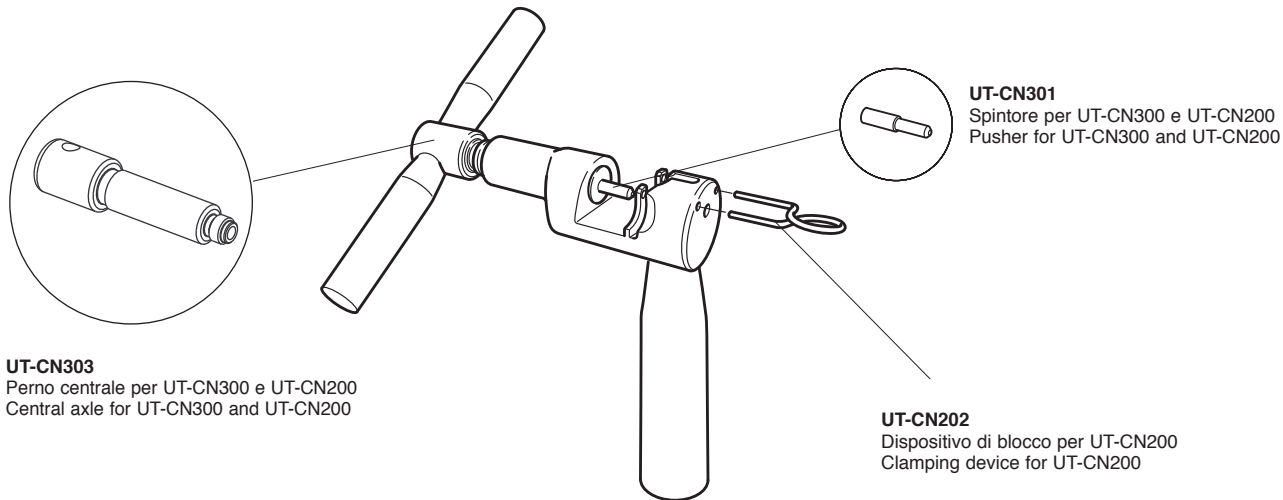


CN-RE400

HD-Link™ Ultra Narrow™ (5,9 mm) per catene C10™ Ultra Narrow™


HD-Link™ Ultra Narrow™ (5,9 mm) for C10™ Ultra Narrow™ chains

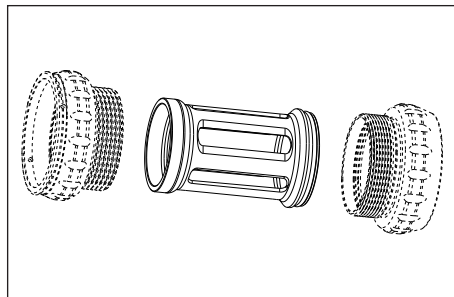


EPS-001
Cilindro guida-cavi
BB cable guide

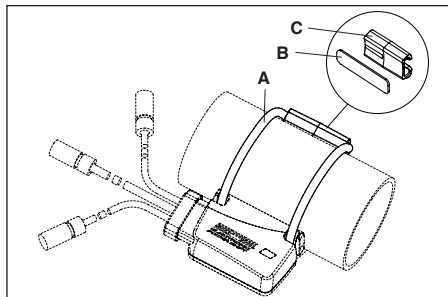

EPS-002
Accessori montaggio sistema di interfaccia (A+B+C)
Kit for interface assembly (A+B+C)

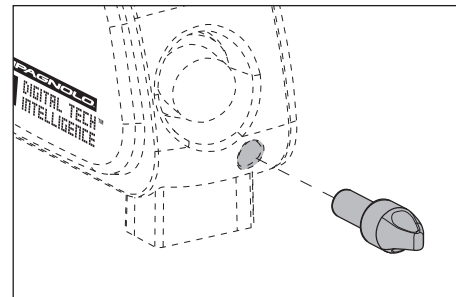


EPS-003
Magnete spegnimento sistema di potenza (5 pz.)
Switch-off magnet (5 pcs.)

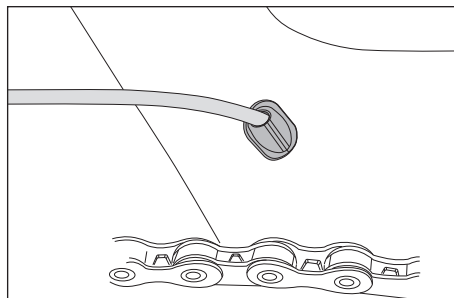


CG-CS001EPS
Gommino passacavi (20 pz.)
Grommet for cables (20 pcs.)

CG-CS002EPS
Gommino passacavi per Power Unit (10 pz.)
Grommet for Power Unit cables (20 pcs.)

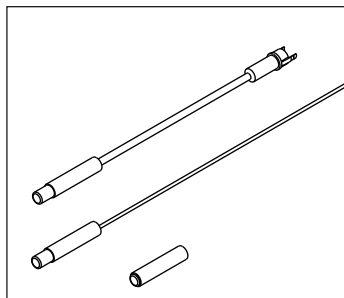

UT-CG010EPS
Kit magneti passacavi SR-RE
Cable run magnet kit SR-RE

UT-CG010ATEPS
Kit magneti passacavi AT
Cable run magnet kit AT

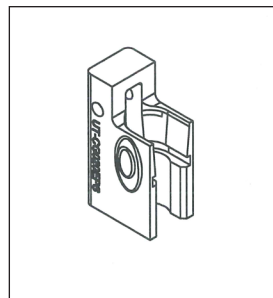


UT-CG020EPS
Attrezzo apri-connettori SR-RE
Connector disconnection tool SR-RE




UT-CG120ATEPS
Attrezzo apri-connettori AT
Connector disconnection tool AT

EPS V2 POWER UNIT

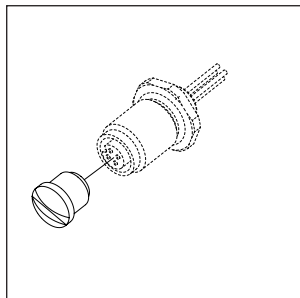


EPS-004
Tappo connettore carica batterie
PU EPS V2 (5 pz)

PU EPS V2 connector cup (inter-
nal mount) (5 pcs)

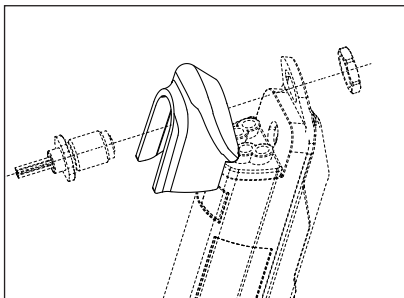


EPS-005
Cappuccio per installazione est. PU EPS V2
(5pz)


PU EPS V2 external mount connctor cap
(5pcs)

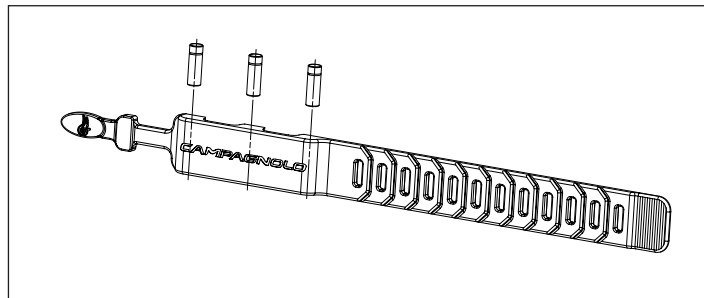


EPS-006
Fascia spegnimento magnetica
Magnetic power block strap

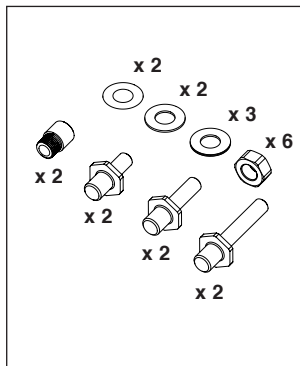


EPS-107
Kit viti Power Unit EPS V2 / V3
/ V4
EPS V2 / V3 / V4 Power Unit
screws kit

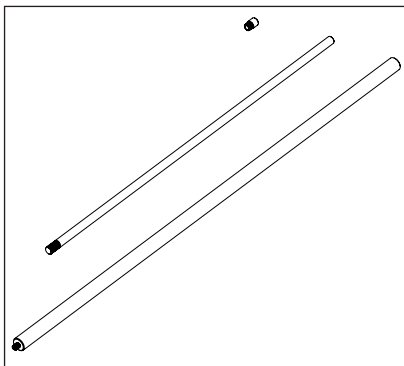


UT-PU010
Kit installazione interna PU EPS V2 /
V3 / V4
EPS V2 / V3 / V4 PU internal installation
tool

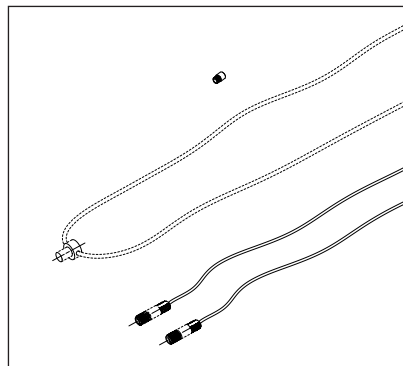

UT-PU030
Kit installazione tubo obliquo
PU EPS V2
EPS V2 PU down-tube
installation tool

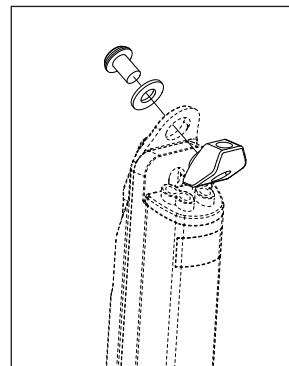

UT-PU020
Adattatore per installazione
rovesciata PU EPS V2
EPS V2 PU internal upside-
down installation adapter

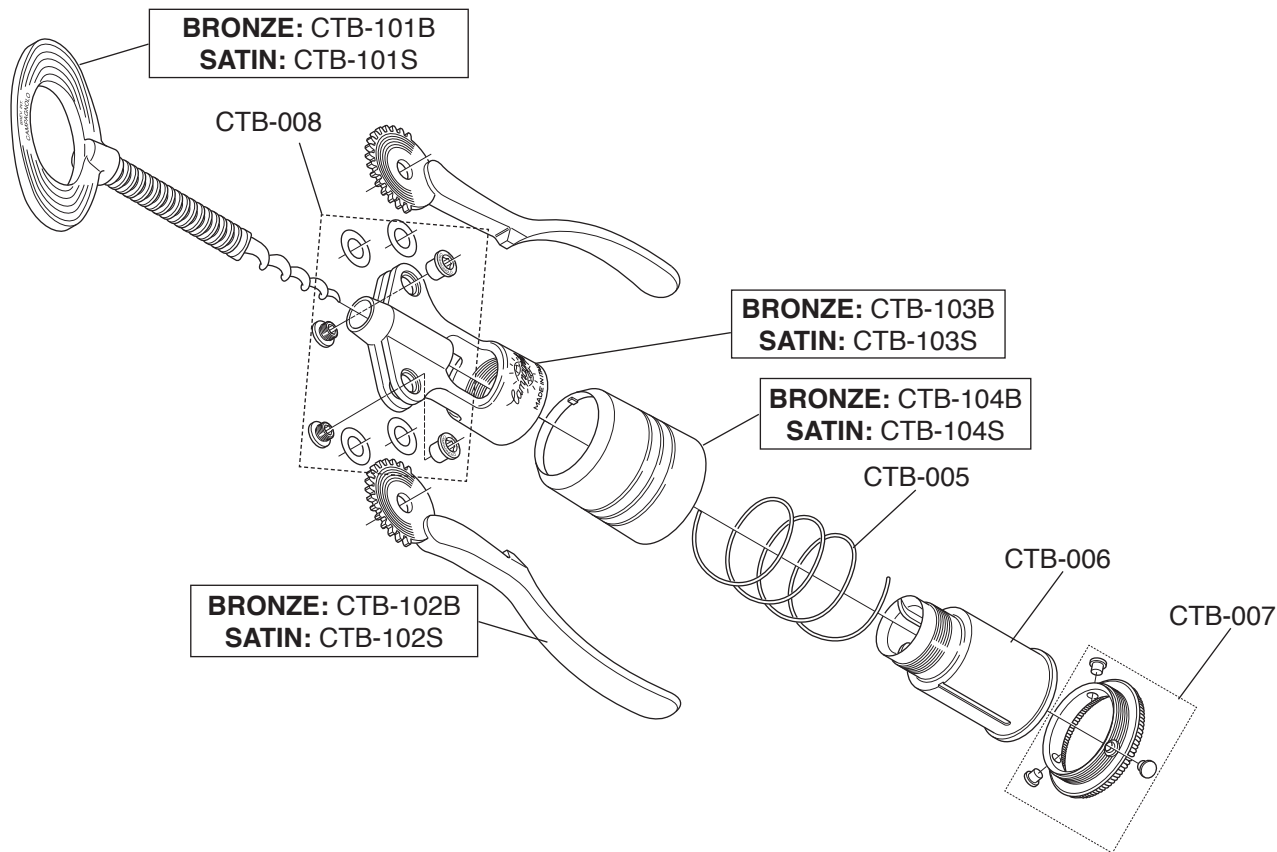

NOTES

NOTES

CAMPAGNOLO S.R.L.

Via della Chimica, 4
36100 Vicenza - ITALY
Tel. +39-0444-225500
Fax: +39-0444-225400
E-mail: sales@campagnolo.com

FRANCE

CAMPAGNOLO FRANCE SAS
ZA du Tissot - 42530 St GENEST -
LERPT
Tel. +33-477-556305
Fax: +33-477-556345
E-mail: campagnolo@campagnolo.fr

GERMANY

CAMPAGNOLO DEUTSCHLAND
GMBH
Alte Garten 62
51371 LEVERKUSEN
Tel. +49-214-206953-0
Fax: +49-214-206953-15
E-mail: campagnolo@campagnolo.de

JAPAN

CAMPAGNOLO JAPAN LTD
65 Yoshida-cho, Naka-ku,
YOKOHAMA
231-0041
Tel. +81-45-264-2780
Fax: +81-45-241-8030
E-mail: info@campagnolo.jp

SPAIN

CAMPAGNOLO IBERICA S.L.
Avda. de Los Huetos 46. pab, 3-2ª
fila
01010 VITORIA
Tel. +34-945-217195
Fax: +34-945-217198
E-mail: campagnolo@campagnolo.es

TAIWAN

PRIMATEK LTD
No. 4, Gongyequ 10th Rd., Nantue
Dist.,
TAICHUNG CITY 408 - TAIWAN
(R.O.C.)
Tel. +886-4-23506831
Fax: +886-4-23596764

UNITED STATES

CAMPAGNOLO NORTH AMERICA
INC.
5431 Avenida Encinas, Suite C -
CARLSBAD CA 92008 - U.S.A.
Tel. +1-760-9310106
Fax: +1-760-9310991
E-mail: info@campagnolona.com

BENELUX

INTERNATIONAL
CYCLE CONNECTION I.C.C.
Communicatielaan 5A
4538 BV TERNEUZEN
NEDERLANDS
Tel. + 31 (0)115 649321
Fax: + 31 (0)115 649110
E-mail: info@i-c-c.nl
Web: www.i-c-c.nl